

Service Manual

Repairs and maintenance

Section 2(21)

Reconditioning
engine

D20, D24

1979-19 . . .



VOLVO

D 20, D 24

Both the D 20 and D 24 Diesel engines are dealt with in this manual.

The D 20 has five cylinders and the D 24 six. Otherwise the engines are similar in principle.

Note! Different flywheels and vibration dampers are fitted to the different engine types.

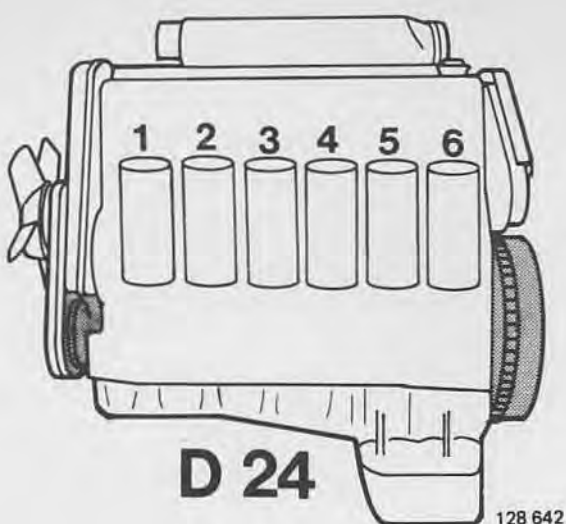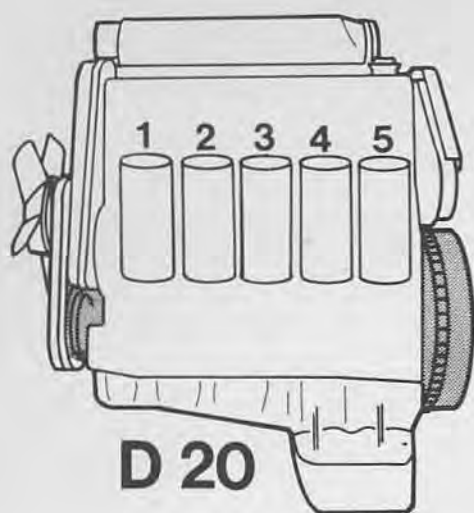

Volvos are sold in versions adapted for different markets. These adaptations depend on many factors including legal, taxation and market requirements.

This manual may therefore show illustrations and text which do not apply to cars in your country.

Contents

		Page
Important information		2
Specifications		3
Special tools		16
Reconditioning engine	Operation	
Removing parts from engine	A1-15	19
Disassembly	B1-18	24
Cleaning, checking	C1-28	29
Reassembly	D1-30	36
Cylinder head, assembly	E1-11	43
cleaning, checking	F1-21	46
reassembly	G1-14	51
installation	H1-8	55
Installation, (cont.)	J1-20	59
Installing parts on engine	K1-27	65


Index page 74

This manual deals exclusively with the overhaul of the engine. For work carried out on the engine when fitted in the car, and for engine removal and installation, please refer to the service manual Section 2(20-22) and Section 2(23-29).

TP 30224/2 US
UK/USA
6000. 05.83
PRINTED IN USA


We reserve the right to make alterations

Important information

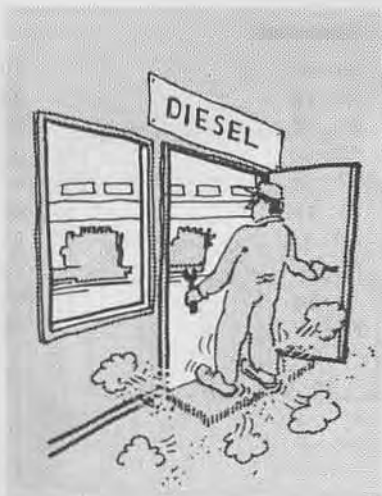


CLEANLINESS

Diesel injection systems are extremely sensitive to dirt and foreign matter. A special workplace should therefore be used for inspection of components.

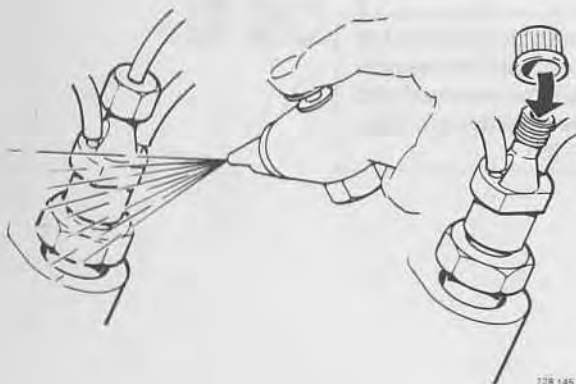

PLUGS

Clean fuel line connections thoroughly before disconnecting them. Plug ends of fuel lines etc as each component is removed. Do not remove these plugs until the component is reconnected.

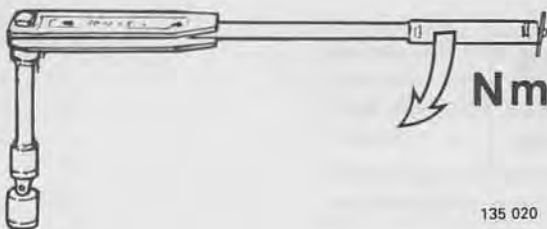


Tightening torques

Two kinds of tightening torques will be found in this manual

1. Tighten to **40 Nm** (30 ft lbs) indicates that a torque wrench must be used for tightening.
2. Tightening torque 40 Nm (30 ft lbs) indicates a guide value. Tightening need not be done with a torque wrench.


Specifications

Group 20 General

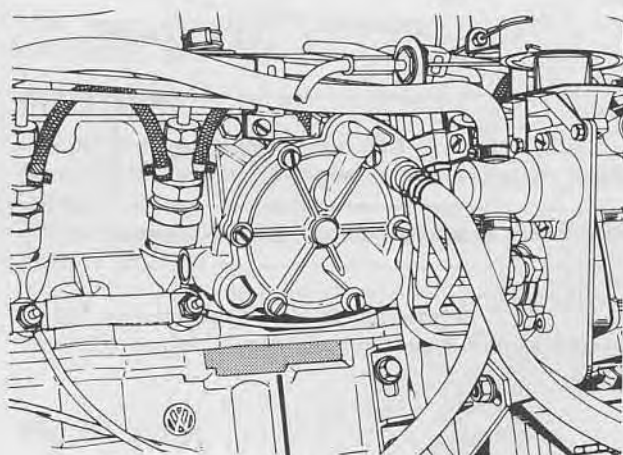

Engine type designation and serial number

Stamped in left side of cylinder block beneath vacuum pump.

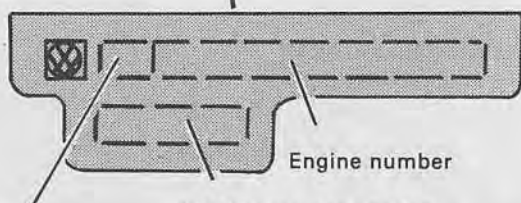

Engine number

VOLVO type designation


VW type designation

133 757

Group 21 Engine block

CYLINDER HEAD

Max warp

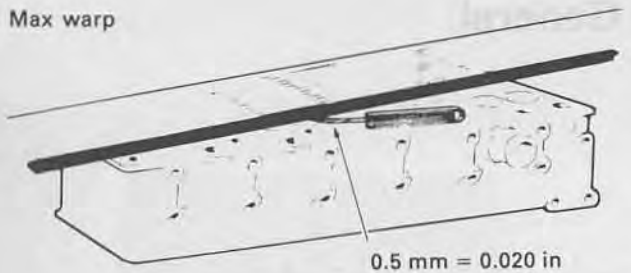


0.5 mm = 0.020 in



Diagonally = max 0.5 mm = 0.020 in

128 146

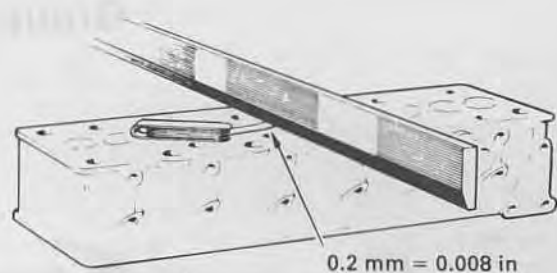

0.2 mm = 0.008 in



Crosswise = max 0.2 mm = 0.008 in

128 147

Cylinder head may not be machined. It must be replaced if warp exceeds maximum.

Cylinder head gasket

Three alternative gaskets are used depending on height of piston above cylinder block.

Marked by notch



128 148

Height of piston above cylinder block		notches	Gasket thickness	
mm	in		mm	in
0.67-0.80	0.026-0.031	1	1.4	0.055
0.81-0.90	0.032-0.035	2	1.5	0.059
0.91-1.02	0.036-0.040	3	1.6	0.063

Note! Piston height in same engine must not extend over more than two classes. Piston height is measured at front and back of piston (along gudgeon/piston pin).

CYLINDER BLOCK


Bore	Marking	Piston diameter		Cylinder bore	
		mm	in	mm	in
Standard	651	76.48	3.0110	76.51	3.0122
	652	76.49	3.0114	76.52	3.0125
	653	76.50	3.0118	76.53	3.0130
Oversize 1	676	76.73	3.0209	76.76	3.0220
	677	76.74	3.0212	76.77	3.0224
	678	76.75	3.0217	76.78	3.0228
Oversize 2	701	76.98	3.0307	77.01	3.0318
	702	76.99	3.0311	77.02	3.0322
	703	77.00	3.0315	77.03	3.0326
Oversize 3	751	77.48	3.0504	77.51	3.0515
	752	77.49	3.0508	77.52	3.0519
	753	77.50	3.0512	77.53	3.0523
Max wear dimension (compared with normal diameter)				0.04 mm	0.016 in

PISTONS


Weight (incl. gudgeon/piston pin)	455–465 grammes	
Max weight deviation between pistons in same engine	12 grammes	
Overall height	71.7 mm	2.8228 in
Height from gudgeon/piston pin center to piston crown	41.7 mm	1.6417 in
Piston float, new	0.03–0.05 mm	
max	0.13 mm	0.0051 in
Piston diameter, see cylinder bore table		
Wear dimension, max (compared with normal diameter)	0.04 mm	0.0016 in

Piston rings

Piston ring gap is measured 15 mm (0.6 in from lower edge of cylinder).

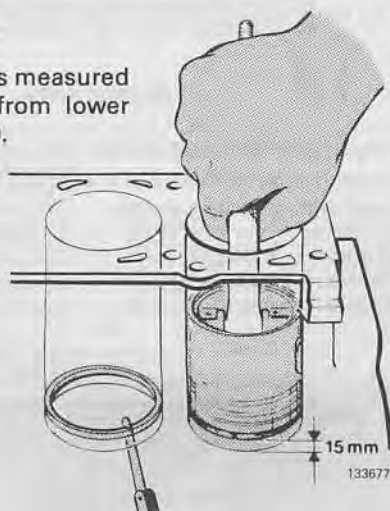

Piston diameter is measured at right angles to gudgeon/piston pin bore, 15 mm (0.6 in) from lower edge.

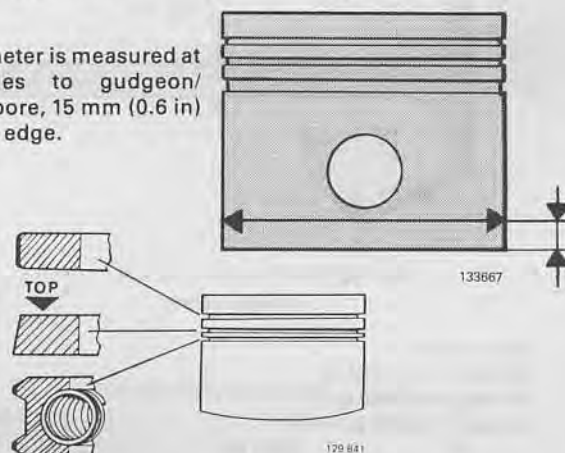


Ring thickness	mm	1.730	1.980–1.990	2.975–2.990
	in	0.0681–0.0685	0.0780–0.0783	0.1171–0.1177
Side clearance (measured with ring on piston), new	mm	0.06–0.09	0.05–0.08	0.03–0.06
	in	0.0024–0.0035	0.0020–0.0031	0.0012–0.0024
	max	0.2	0.2	0.15
	in	0.0079	0.0079	0.0059
Ring gap (measured in cylinder, see fig.), new	mm	0.3–0.5	0.3–0.5	0.25–0.40
	in	0.012–0.020	0.012–0.020	0.0098–0.0157
	max	1.0	1.0	1.0
	in	0.040	0.040	0.040

Gudgeon/piston pins


Fit, in connecting rod	Light thumb pressure (close running fit)
in piston	Thumb pressure (push fit)

VALVE SYSTEM

Valve clearances

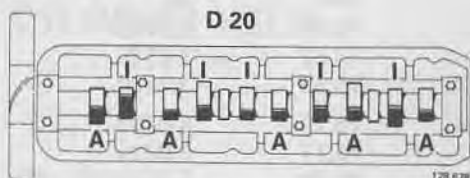

D 20

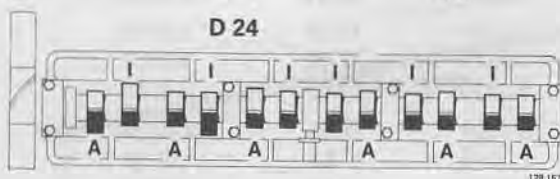


D 24

Intake valve, warm engine	
cold engine	
Exhaust valve, warm engine	
cold engine	
Shims, thickness	

Valves

7.97 mm = 0.3137 in

36 mm = 1.417 in 0.5 mm = 0.020 in

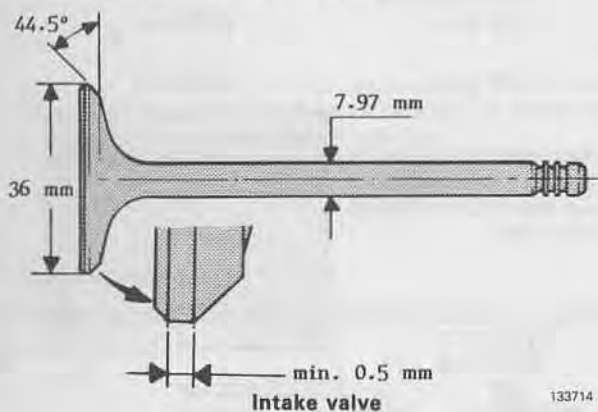

Intake valve


133714

Valve seats

32.8 mm = 1.2193 in

1.5 mm = 0.0590 in

2.0 mm = 0.787 in

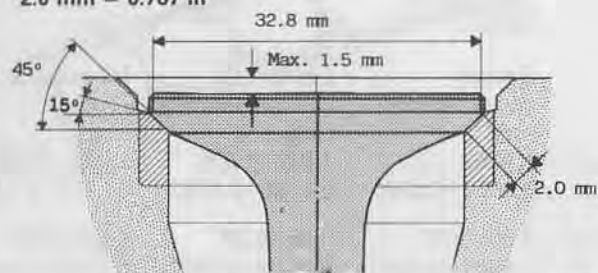

Intake valve seat

133758

Valve seat diameter, standard	mm	37.090–37.105
	in	1.4602–1.4608
oversize 1	mm	37.290–37.305
	in	1.4681–1.4687

Seat width in cylinder head:

diameter, standard	mm	37.000–37.016
	in	1.4566–1.4573
oversize 1	mm	37.200–37.216
	in	1.4645–1.4651

Cold engine = engine at room temperature

I = intake valves

A = exhaust valves

Check/adjust valves in following order:

D 20 = 1-2-4-5-3

D 24 = 1-5-3-6-2-4


Checking

mm	in	mm	in
0.20–0.30	0.008–0.012	0.25	0.010
0.15–0.25	0.006–0.010	0.20	0.008
0.40–0.50	0.016–0.020	0.45	0.018
0.35–0.45	0.014–0.018	0.40	0.016
3.00–4.25 at increments of 0.05 mm			
0.012–0.167 at increments of 0.002 in			

Setting

7.95 mm = 0.3129 in

31 mm = 1.22 in

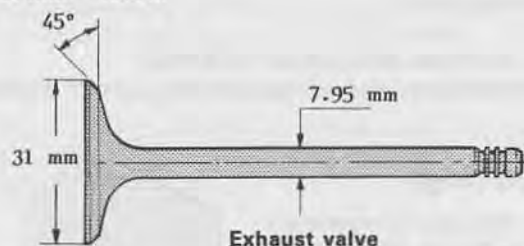

Exhaust valve


133715

Important! Exhaust valves are stellite coated and must not be ground by machine. Grind-in valve on seat with grinding paste.

30.4 mm = 1.1968 in

1.5 mm = 0.0590 in

2.4 mm = 0.094 in

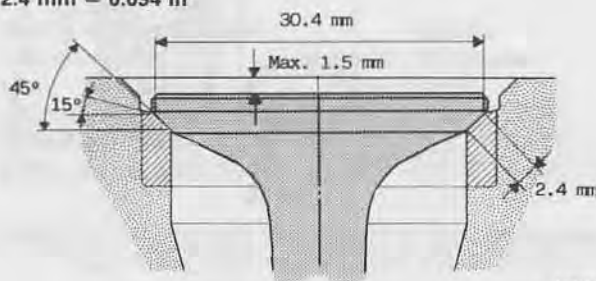


Exhaust valve seat

133759

Intake

Exhaust

37.090–37.105	33.090–33.105
1.4602–1.4608	1.3027–1.3033
37.290–37.305	33.290–33.305
1.4681–1.4687	1.3106–1.3112
37.000–37.016	33.000–33.016
1.4566–1.4573	1.2992–1.2998
37.200–37.216	33.200–33.216
1.4645–1.4651	1.3070–1.3077

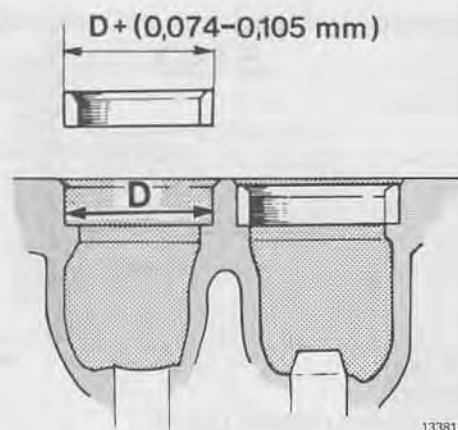


Note! When replacing valve seats: the interference between the valve seat and its bore in the cylinder head shall be 0.074–0.105 mm (0.029–0.041 in). That is, valve seat diameter must be 0.074–0.105 mm greater than the diameter of the bore in the cylinder head.


Valve guides mm (in)

Length	36.50–36.75 (1.4370–1.4468)
Inner diameter	8.000–8.015 (0.3149–0.3155)
Height above cylinder head lower surface	40.1–40.5 (1.5787–1.5944)
Clearance, valve stem-guide (see fig.), new	0.3 (0.018)
max	1.3 (0.0511)

Clearance is measured with new valve and with valve stem flush with valve guide.

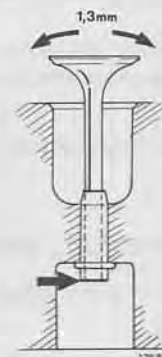

Valve springs

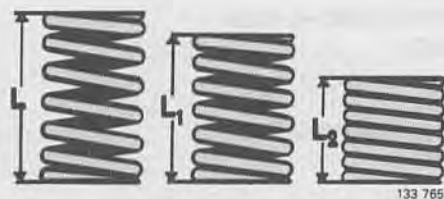

Inner valve springs

Length		Load	
mm	in	N	lbs
33.9	1.334	0	0
28.6	1.126	67–77	15–17.5
18.3	0.720	209–231	47–52.2

Outer valve springs

Length		Load	
mm	in	N	lbs
40.2	1.583	0	0
32.6	1.283	167–185	38–42
22.3	0.878	433–479	98–108

Tappets

Diameter	34.950–34.975 (1.3759–1.3769)
Height	28.0–28.8 (1.1023–1.1388)
Clearance, shim-tappet	0.016–0.046 (0.0006–0.0018)
tappet-cylinder head	0.025–0.075 (0.0010–0.0029)

Shims (for adjusting valve clearance)


Thickness	3.00–4.25 mm at increments of 0.05 mm
	0.118–0.167 at increments of 0.002 in
Diameter	30.950–30.975 (1.2185–1.2194)

TIMING GEARS

Toothed belts

Belt tension (measured with tool 5197)

check value	12-13
setting	12.5

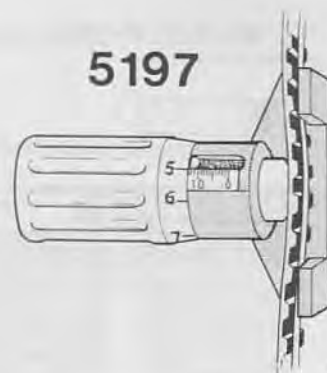

133536

Camshaft

Max lift height, intake	8.5 (0.334)
exhaust	9.0 (0.354)
Bearing journal diameter, front	31.925–31.950 (1.2568–1.2578)
others	29.939–29.960 (1.1787–1.795)
Bearing clearance, new	0.05–0.10 (0.0019–0.0039)
End clearance, max	0.15 (0.006)

Camshaft setting is checked by using gauge 5190

Camshaft bearings

Bearing diameter, front	32.000–32.025 (1.2598–1.2608)
other three	30.000–30.021 (1.1811–1.1819)

Crankshaft

Max run-out, two center bearings	0.06 (0.0023)
others	0.04 (0.0015)
Crankshaft end clearance, new	0.07–0.18 (0.0027–0.0071)
max	0.25 (0.0098)
Main bearing clearance, new	0.016–0.075 (0.0006–0.0029)
max	0.16 (0.0062)
Connecting rod bearings, side clearance, max	0.4 (0.0157)
repairing clearance, new	0.015–0.062 (0.0005–0.0024)
max	0.12 (0.0047)


Measured with two outer main bearings in V-blocks.

Main bearing journals


Out of round, max	0.003 (0.0001)
Taper, max	0.005 (0.0002)
Diameter standard	58.00 (57.955–57.975) mm
	2.2834 (2.2816–2.2824) in
undersize 1	57.75 (57.705–57.725) mm
	2.2736 (2.2718–2.2726) in
undersize 2	57.50 (57.455–57.475) mm
	2.2539 (2.2521–2.2529) in
undersize 3	57.25 (57.205–57.225) mm
	2.2342 (2.2324–2.2332) in

Connecting rod bearing journals

Out of round, max	0.003 (0.0001)
Taper, max	0.005 (0.0002)
Diameter, standard	47.80 (47.758–47.778)
	1.8118 (1.8802–1.8810) in
undersize 1	47.55 (47.508–47.528) mm
	1.8720 (1.8703–1.8711) in
undersize 2	47.30 (47.258–47.278) mm
	1.8622 (1.8605–1.8613) in

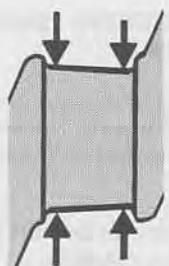


Taper

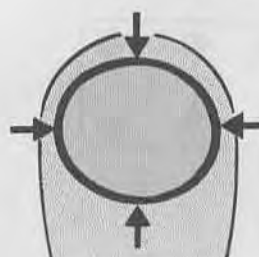

Out-of-round

Main bearing journals (when grinding)

		Width, bearing recess		Radius	Max
		Min	Max	Min	
Thrust bearing journal	mm	22.5	23.0	1.0	1.5
	in	0.8858	0.9055	0.0393	0.0590
Other main journals	mm	21.5	22.0	1.0	1.5
	in	0.8464	0.8661	0.0393	0.0590
Connecting rod journals	mm	24.6	25.0	2.0	2.5
	in	0.9658	0.9842	0.0787	0.9842

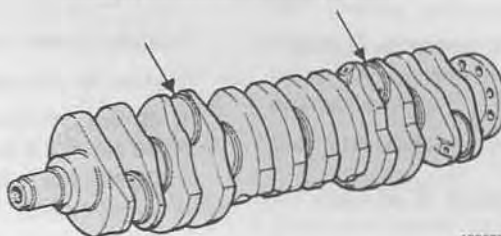**Connecting rods**

Only to be replaced in sets


Side clearance on crankshaft, max	0.4 mm (0.0157 in)
Length between centers	136 mm (5.3543 in)
Max weight deviation between connecting rods in same engine	6 grammes

Flywheel

Warp, max	0.05 mm at 150 mm diameter
	0.0019 in at 5.90 in diameter

TIGHTENING TORQUES

Tightening torques apply to oiled nuts and bolts. Degreased (washed) parts must be oiled prior to assembly.

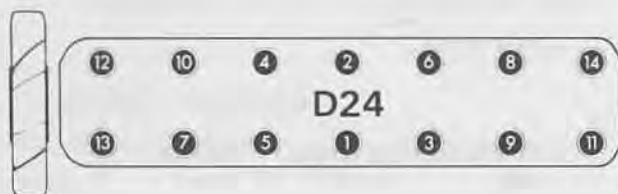

TIGHTENING SEQUENCE FOR CYLINDER HEAD BOLTS


Important! slacken bolts in reverse order when removing cylinder head.

Remove oil and dirt from bolt holes. Oil left in holes will reduce pressure on cylinder head gasket.

Bolt threads and washers must however be oiled, otherwise frictional forces will be too large.

Two types of bolts are in use: An early type with M 11 threads and a later type with M 12 threads. (Later type is threaded along entire length.)

TIGHTENING OF CYLINDER HEAD BOLTS

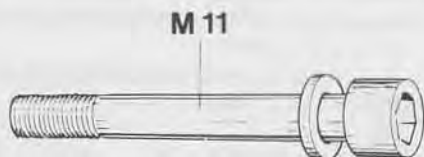


Use **new washers**, convex side upwards. Tighten in five stages:

1. **50 Nm** (37 ft lbs)
2. **70 Nm** (50 ft lbs)
3. **90 Nm** (65 ft lbs)
4. run engine until oil temperature is at least 50°C (122°F)
5. **90 Nm** (65 ft lbs)


Retightening

– After 600–1,200 miles (1,000–2,000 km). Engine should be cold or almost cold. Tighten each bolt separately in specified order, see above fig.:

1. Slacken bolt **30°**
2. Torque to **90 Nm** (65 ft lbs)

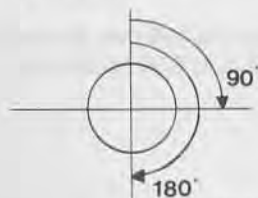

137 158

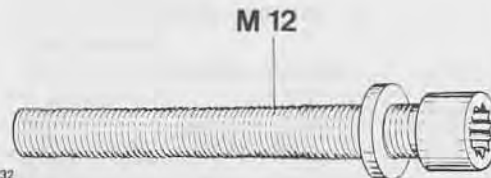

Use **new bolts**. Not necessary to replace washers.

Tighten in six stages:

1. **40 Nm** (30 ft lbs)
2. **60 Nm** (44 ft lbs)
3. **75 Nm** (55 ft lbs)
4. angle-tighten **180°** in one movement without stopping
5. run engine until oil temperature is at least 50°C (122°F)
6. angle-tighten **90°** in one movement without stopping

Retightening


After 600–1,200 miles (1,000–2,000 km). Engine should be cold or almost cold.

Tighten each bolt separately in specified order, see above fig.:

1. Angle-tighten bolt **90°** in one movement without stopping.

Do not slacken bolt first.

Crankshaft assembly

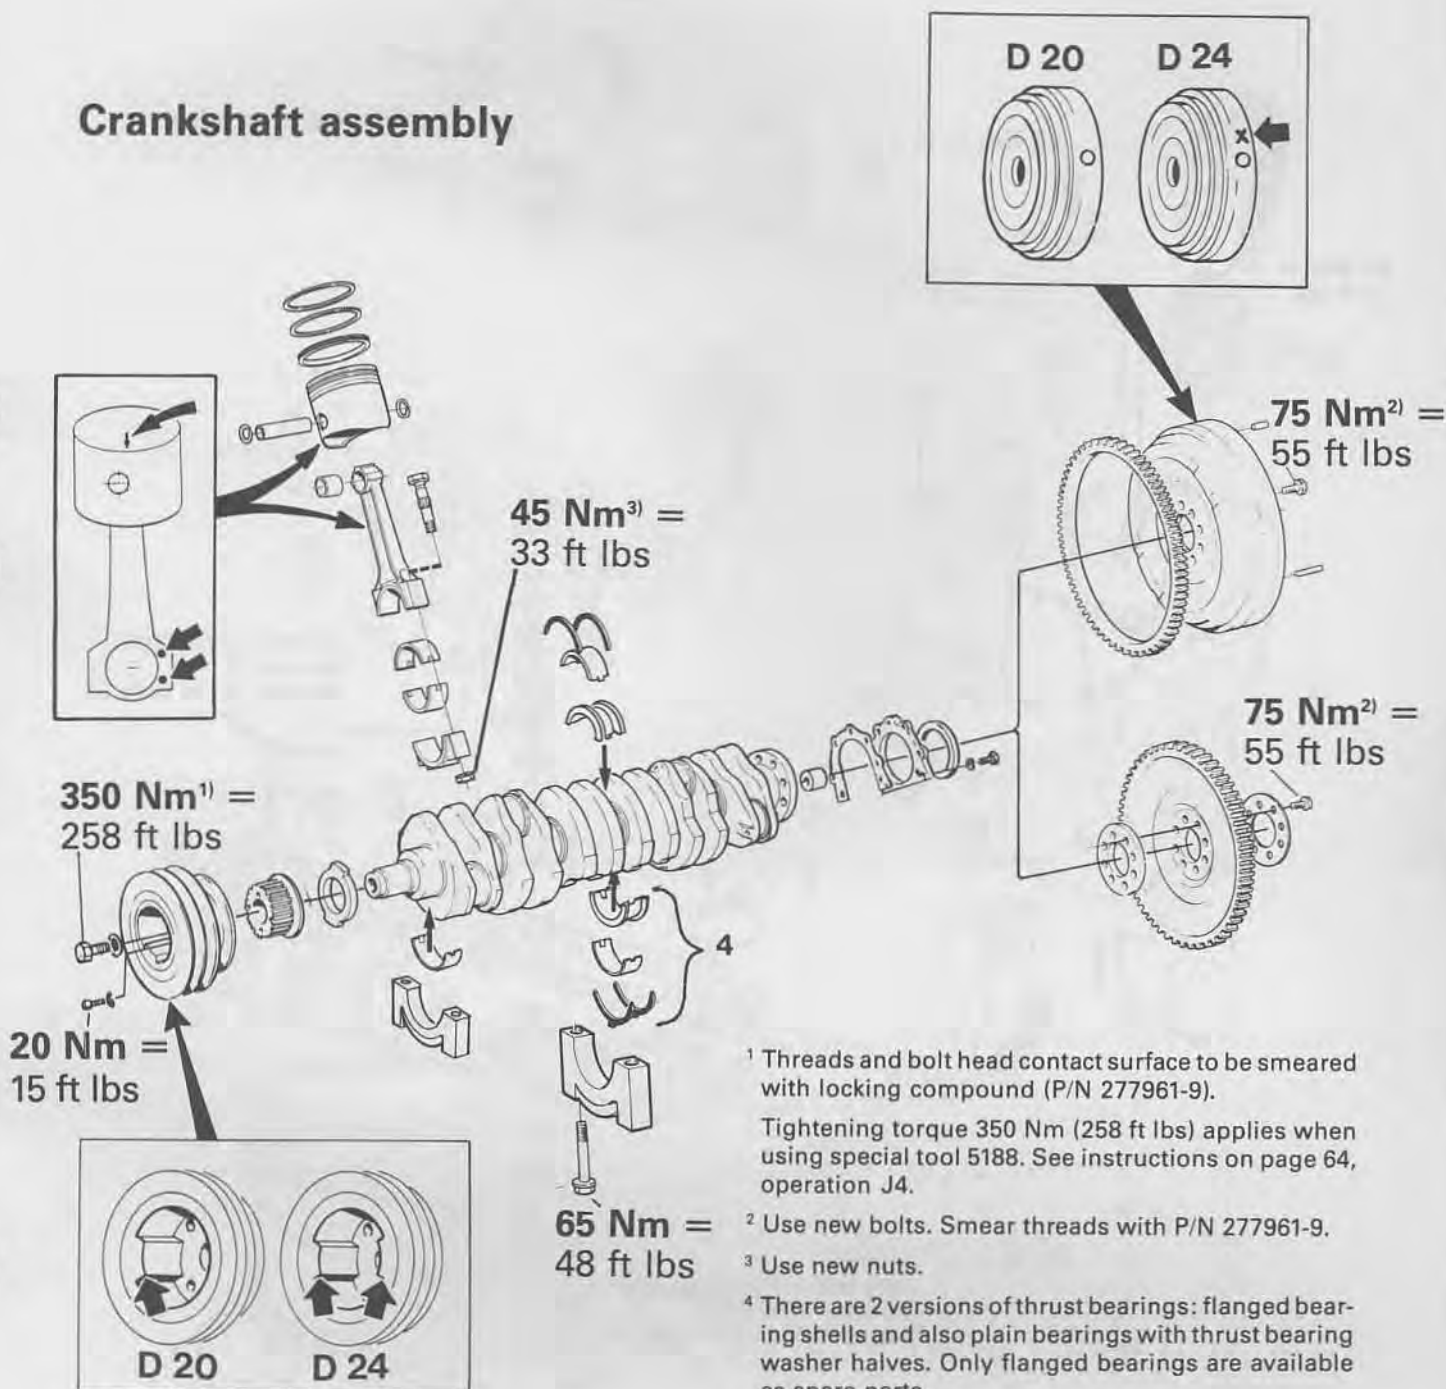

¹ Threads and bolt head contact surface to be smeared with locking compound (P/N 277961-9).


Tightening torque 350 Nm (258 ft lbs) applies when using special tool 5188. See instructions on page 64, operation J4.

² Use new bolts. Smear threads with P/N 277961-9.


³ Use new nuts.

⁴ There are 2 versions of thrust bearings: flanged bearing shells and also plain bearings with thrust bearing washer halves. Only flanged bearings are available as spare parts.

Timing gears, cylinder head

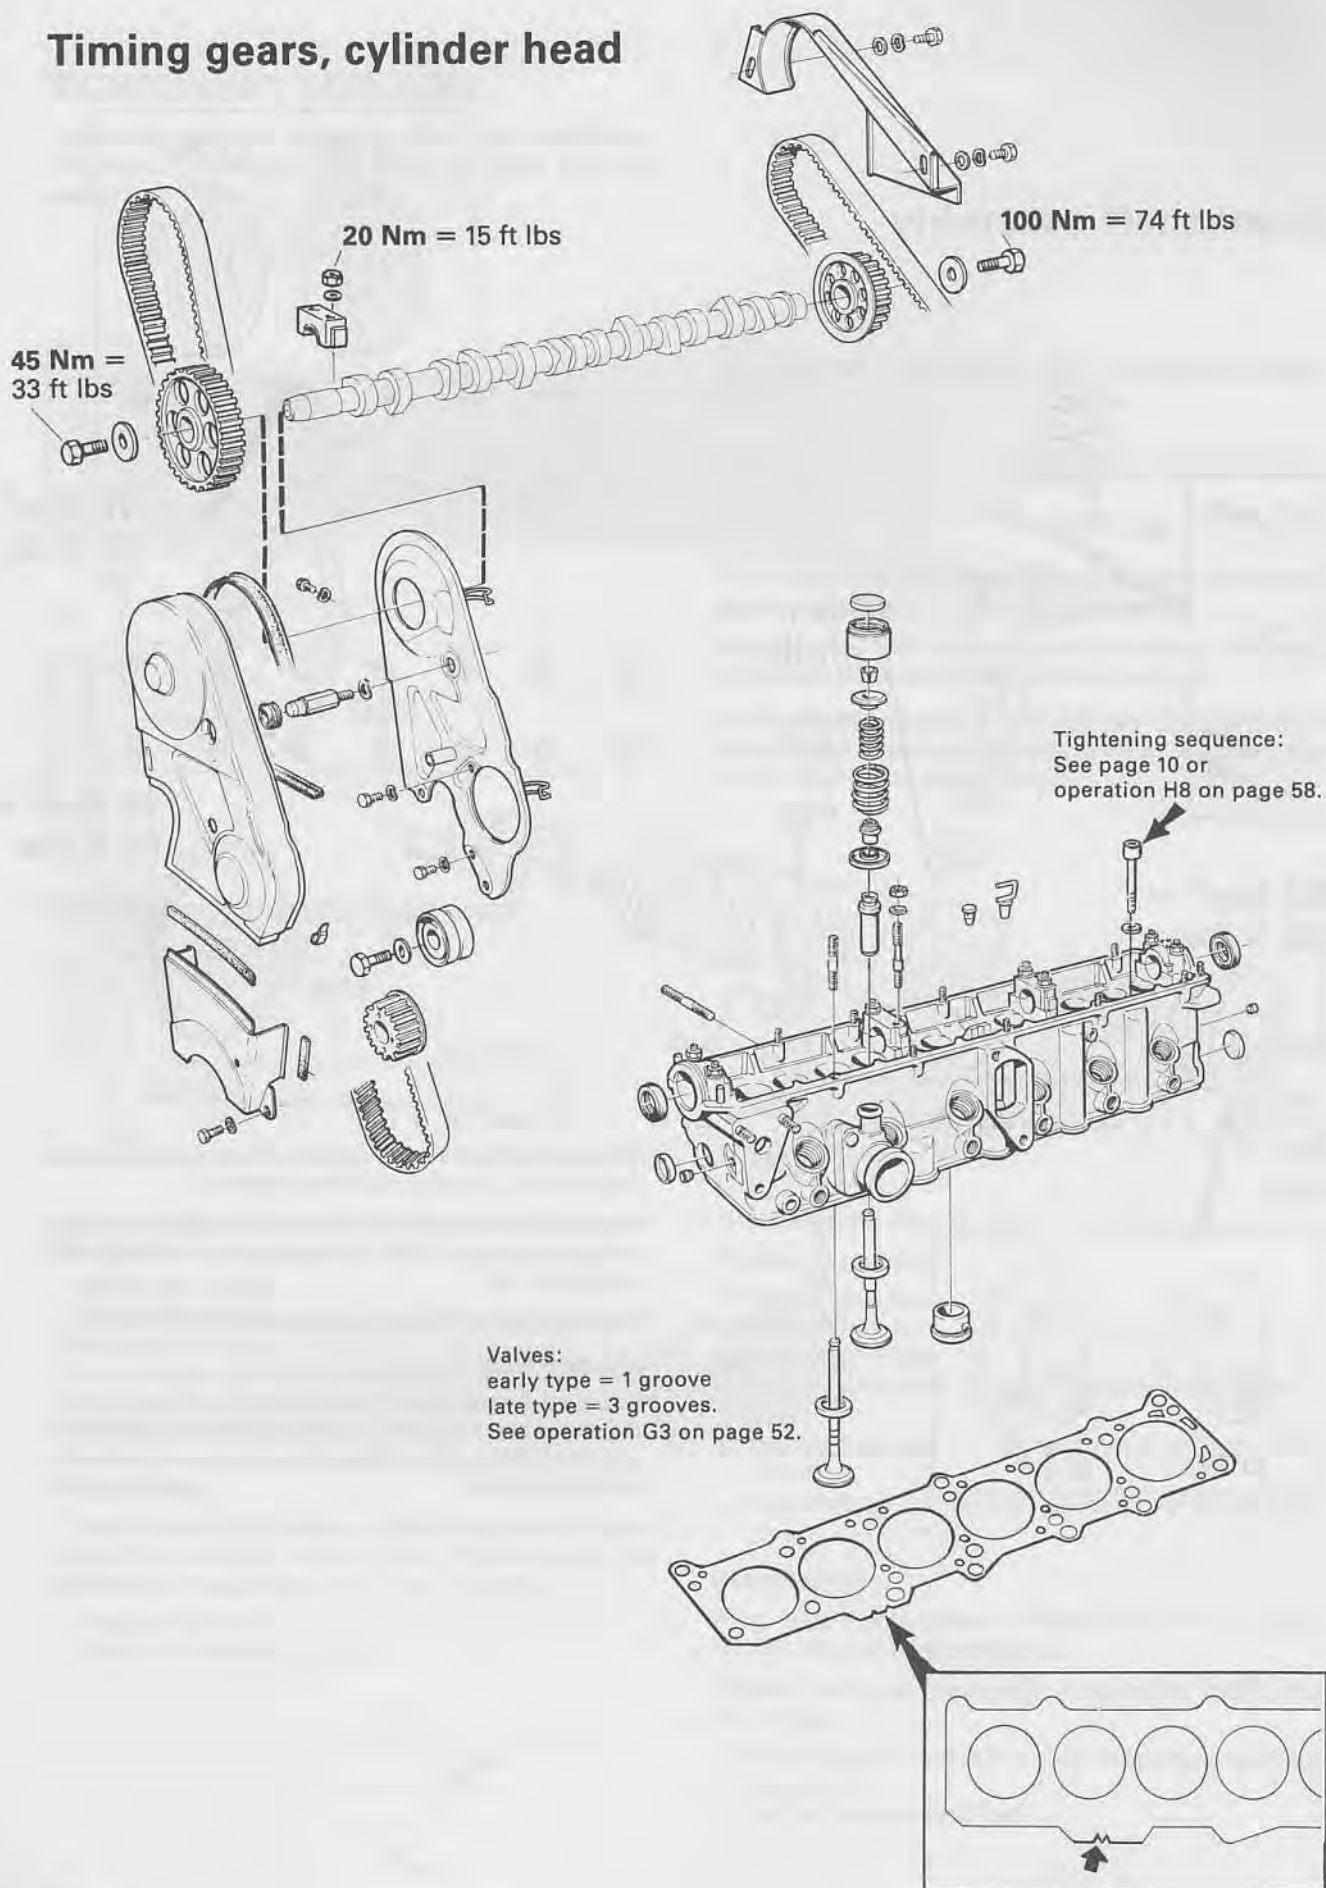


Lubricating system

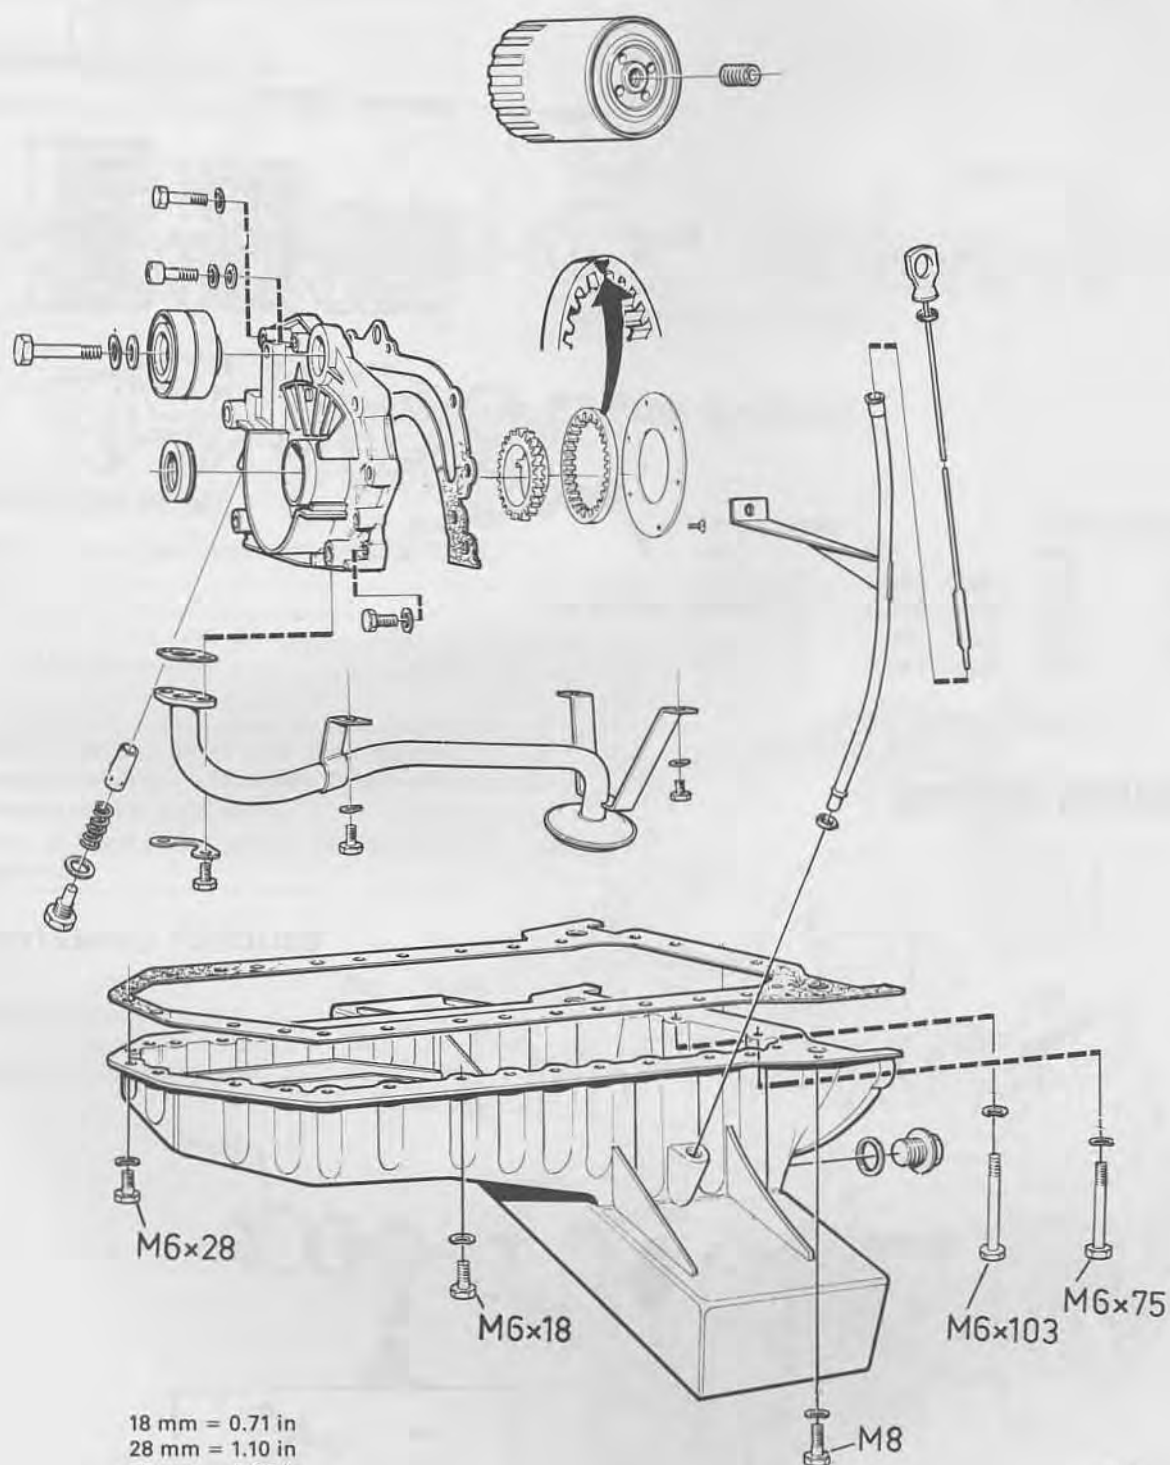


728 890

Intake and exhaust manifolds

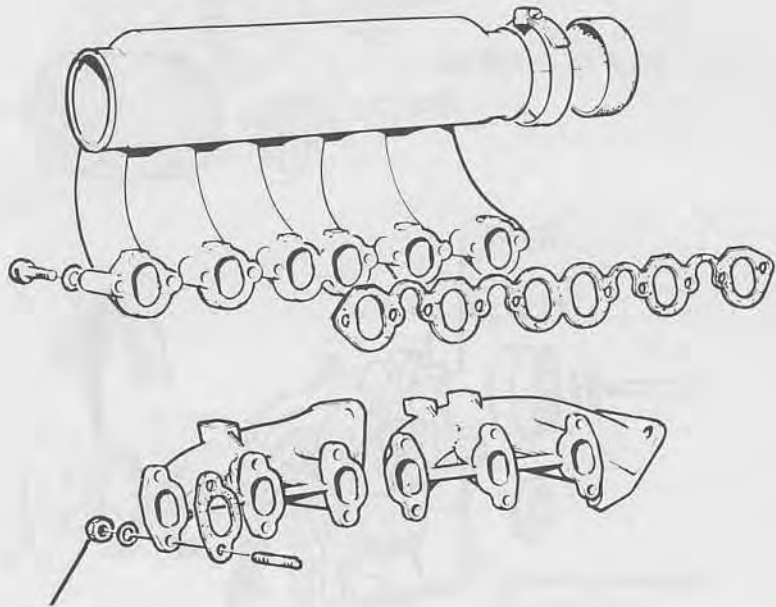

Always use new nuts

Cooling system

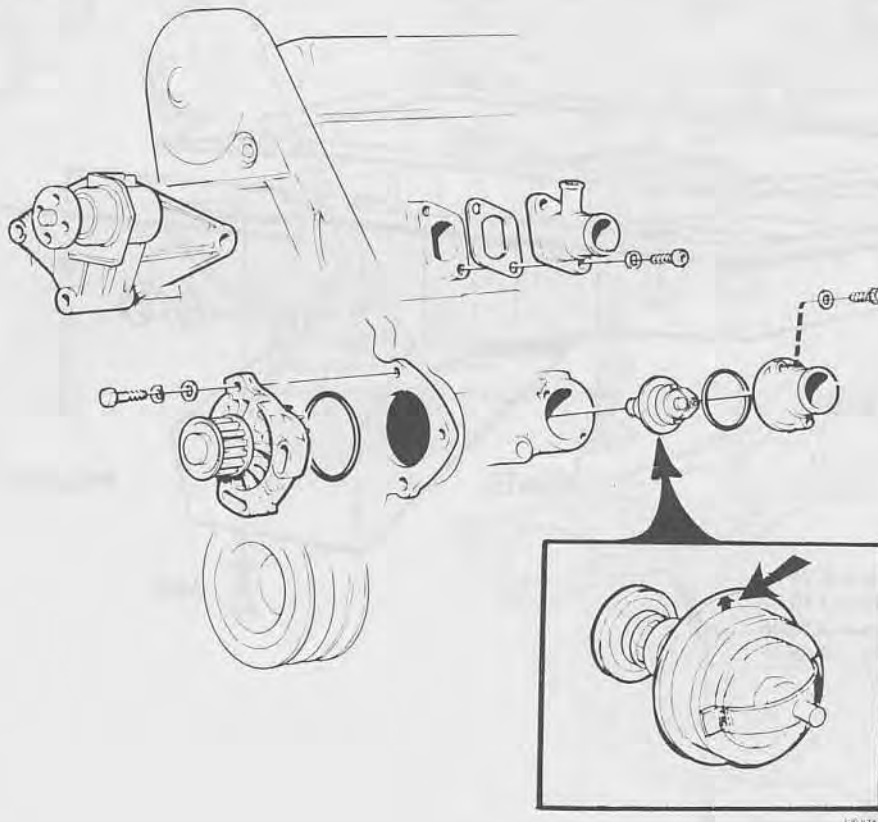

1/25 1/28


Group 22 Lubricating system

Oil pressure sensor

Cut-out point, indicator lamp goes out at 15–45 kPa 2.1–6.4 psi

Lubricating oil pump

Relief valve spring length at different loads:

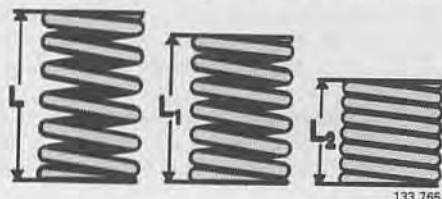

Length			Load	
mm	in	N		lbs
L = 49	1.93	0		0
L ₁ = 22	0.87	179–195		39–44
L ₂ = 19.8	0.78	approx 200		45
(completely compressed)				

Group 23 Fuel system

INJECTION PUMP

Injection timing (pump plunger stroke at T.D.C.)


	Check value		Setting value	
	mm	in	mm	in
D 20	0.75–0.83	0.029–0.033	0.80	0.031
D 24	0.65–0.73	0.025–0.029	0.70	0.027
D 24 USA/Canada 1979–81	0.65–0.73	0.025–0.029	0.70	0.027
D 24 USA/Canada 1982-	0.82–0.90	0.032–0.035	0.85	0.033

USA — vehicles up to 1983 must be adjusted for high altitude driving if main use is above 4000 ft (1,219 m):

Refer to appropriate service manual for adjustment.

TIGHTENING TORQUES

	Nm	ft lbs
Injector, in cylinder head	70	52
upper-lower sections ...	70	52
Injection pump, pump gear	45	33

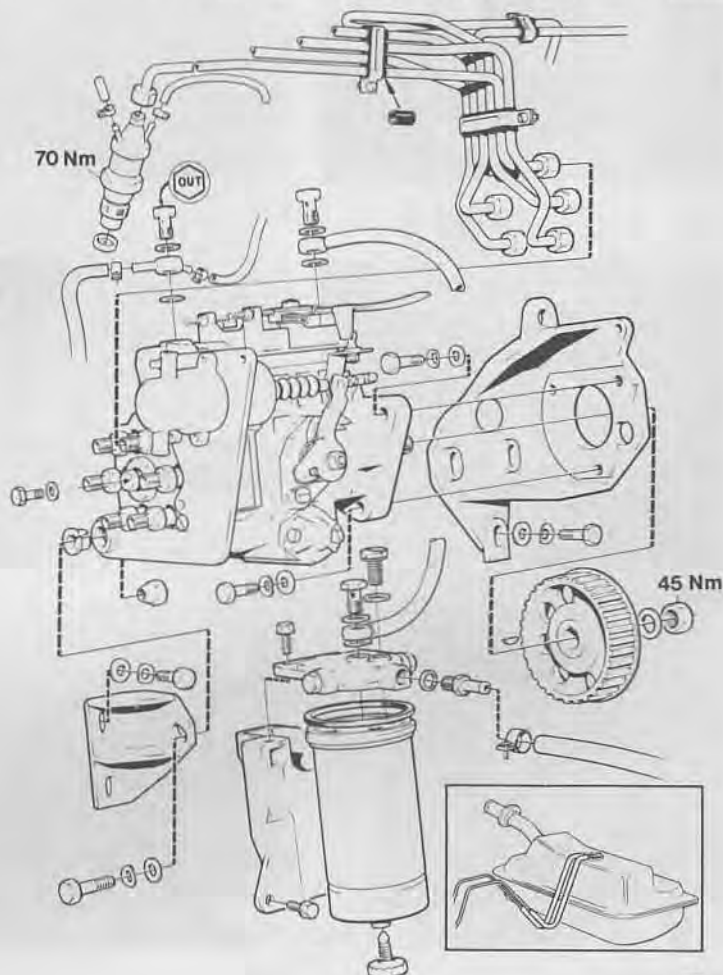

Special tools


999	Description – Use
1801-3	Standard handle: used with 5207 and 5208
2520-8	Stand: used with fixture 5206
2903-6	Oil filter wrench
4090-0	Puller: removing pilot bearing
5017-2	Drift: removing/installing crankshaft bushings
5112-1	Locking sector: locking flywheel
5187-3	Wrench: vibration damper
5188-1	Wrench with extension arm: for vibration damper center bolt
5190-7	Gauge: installing camshaft
5192-3	Support for dial indicator: measuring piston height



1801




2520

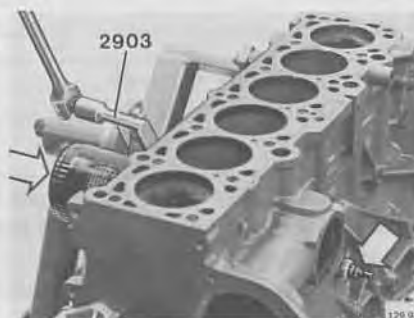


2903



4090

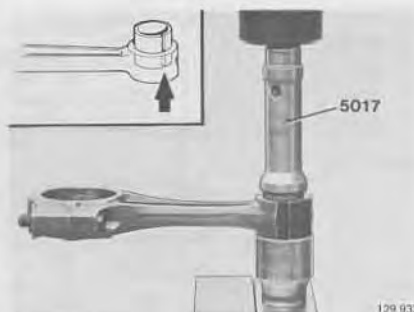

5017

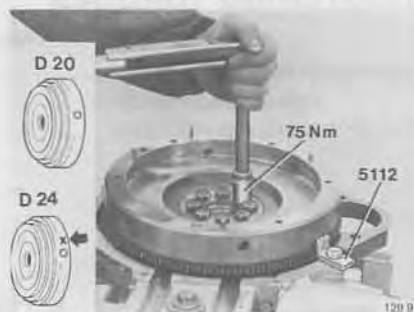

5112



5187, 5188



5190




5192

SPECIAL TOOLS (CONT.)


999	Description – Use
5193-1	Stop: locking injection pump gear
5194-9	Holder: for dial indicator when adjusting injection pump
5195-6	Pliers: removing valve discs
5196-4	Press tool: for valve tappets
5197-2	Belt tension gauge: timing gear belts and pump drive
5198-0	Straight edge: setting T.D.C. for cylinder 1 (flywheel casing removed)
5199-8	Wrench: front and rear camshaft gears
5200-4	Adapter: installing crankshaft front seal and camshaft seals
5202-0	Puller: for idler pulley
5203-8	Centering shaft: for clutch driven plate
5204-6	Puller: pump gear
5205-3	Puller: for crankshaft front seal
5206-1	Fixture: for engine
5207-9	Drift: installing needle bearing in crankshaft
5208-7	Drift: installing crankshaft rear seal
5218-6	Drift: removing/installing valve guides
5219-4	Tool: removing/installing valve seals
5220-2	Drift: installing intake valve seat
5221-0	Drift: installing exhaust valve seat
5222-8	Gauge: checking valve height in relation to camshaft
5224-4	Reamer: valve guide
5223-5	Guide pins M11 bolts (4 ×): installing cylinder head
5234-3	Guide pins M12 bolts (4 ×): installing cylinder head
5235-0	Tool: for removing guide pins




5193

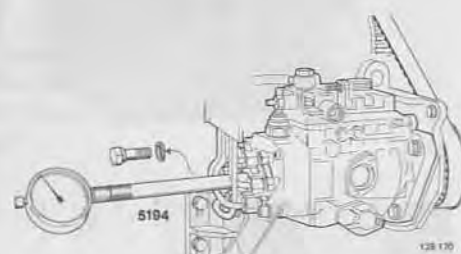


5194

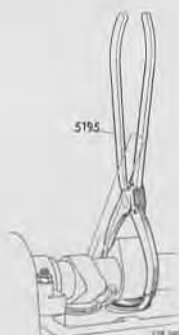

5195

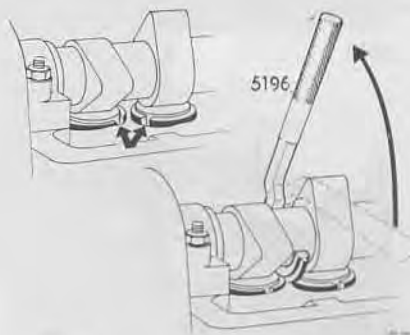

5196

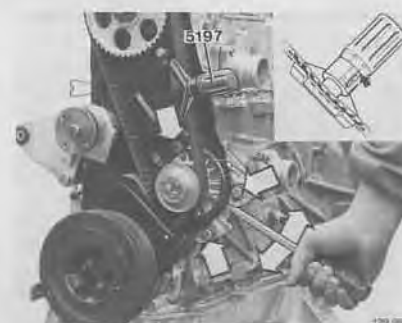

5197




5198



5199



5200

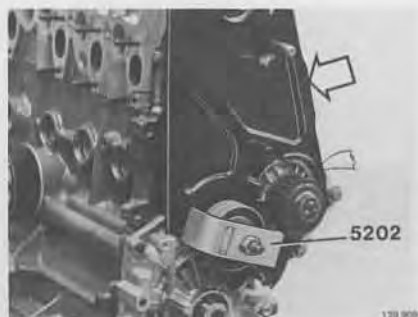


5202



5203



5204

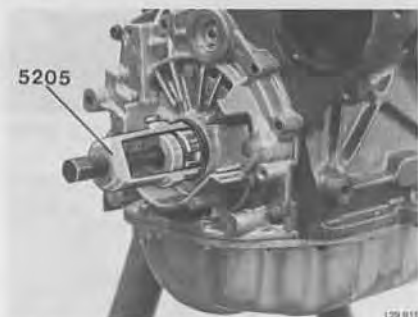

5205




5206




5207




5208

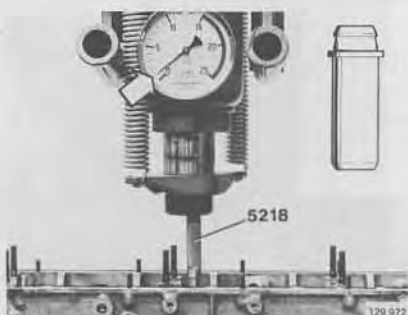


5218

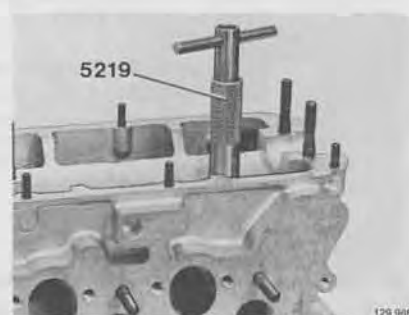

5219

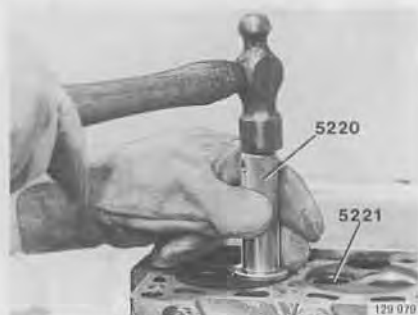


5220, 5221

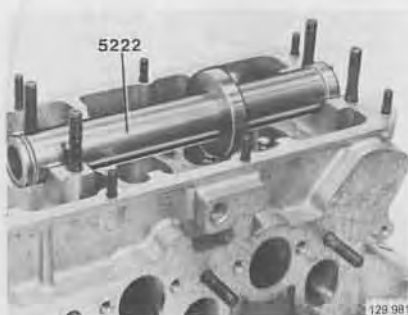


5222



5224

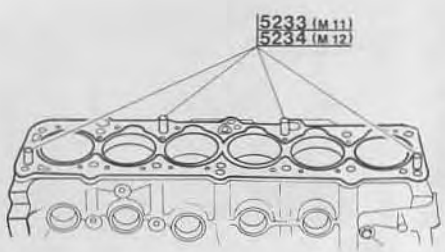

5233, 5234

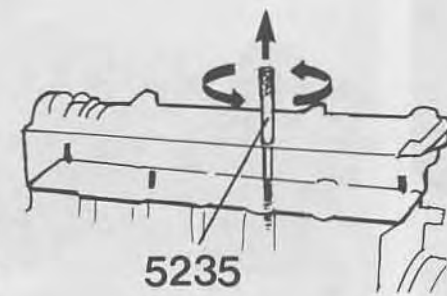


5235

Reconditioning engine

Special tools: 1801, 2520, 2903, 4090, 5017, 5112, 5187, 5188, 5190, 5192, 5193, 5194, 5195, 5196, 5197, 5198, 5199, 5200, 5202, 5203, 5204, 5205, 5206, 5207, 5208, 5218, 5219, 5220, 5221, 5222, 5224, 5233 (5234), 5235


A. Removing parts from engine block

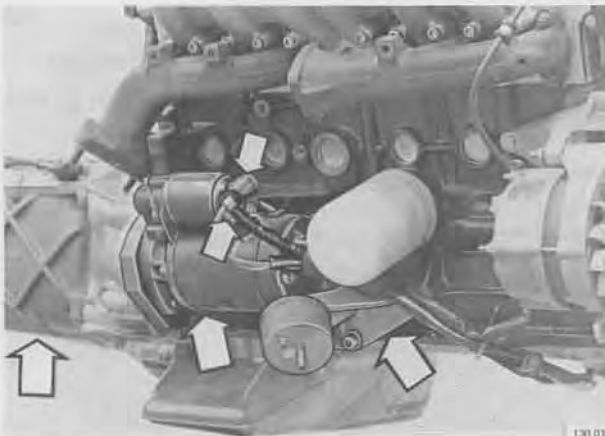

A1


Remove:

- wires from starter motor
- starter motor
- right engine mount
- transmission.

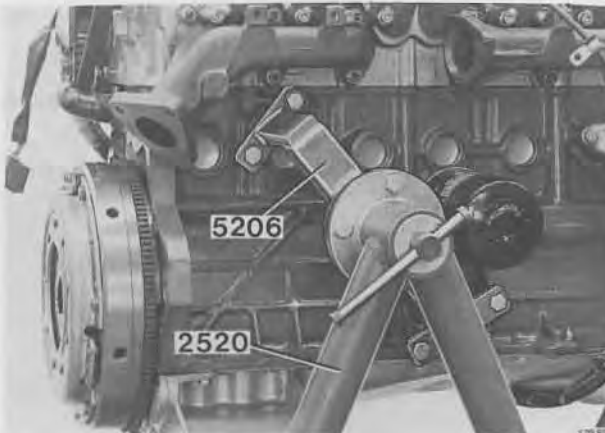

A2


Mount engine in stand 2520 with fixture 5206

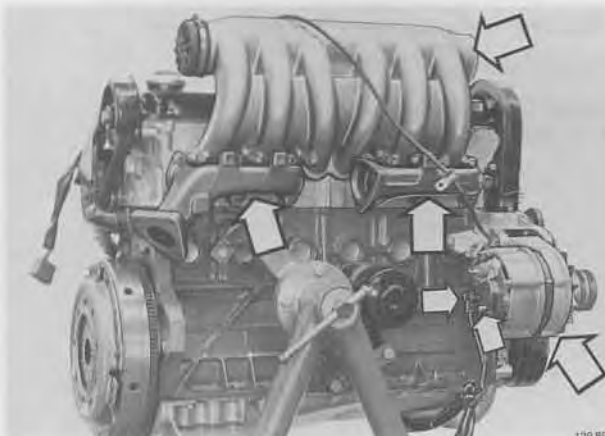

A3

Remove:

- wires from alternator
- alternator with mounting bracket arm
- intake manifold (6 mm Allen) and gasket
- exhaust manifold and gaskets.

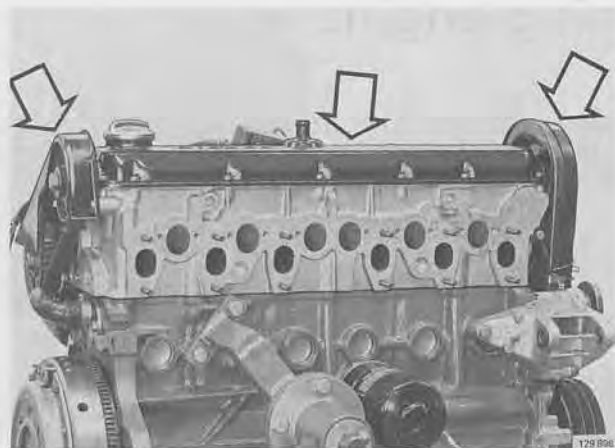

A4

Remove:

- valve cover and gaskets
- timing gear covers (front + rear).



A5

Turn engine until cyl. 1 is at TDC – injection

Always use the vibration damper center bolt to turn the engine.

Use a 27 mm socket.

Both cylinder 1 cams should point diagonally upwards and mark on pump gear should be opposite line on mounting bracket.

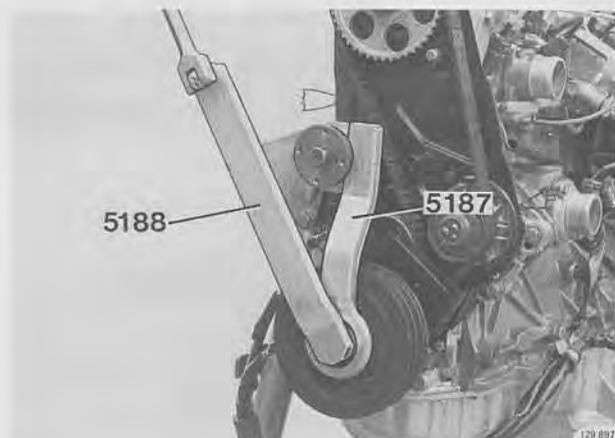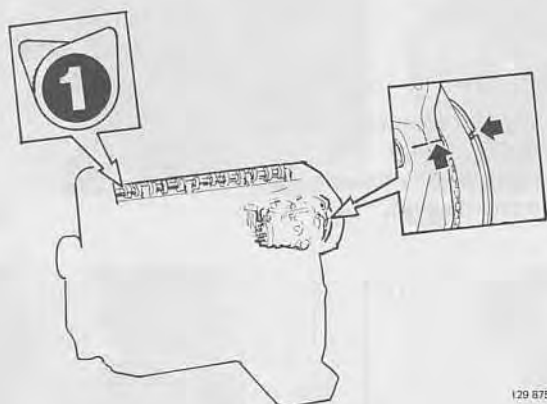


A6

Remove vibration damper

Use **5187** to prevent pulley from rotating, and wrench **5188** to unscrew bolt.


It may be necessary to turn engine slightly so that **5187** rests on fan bearing.

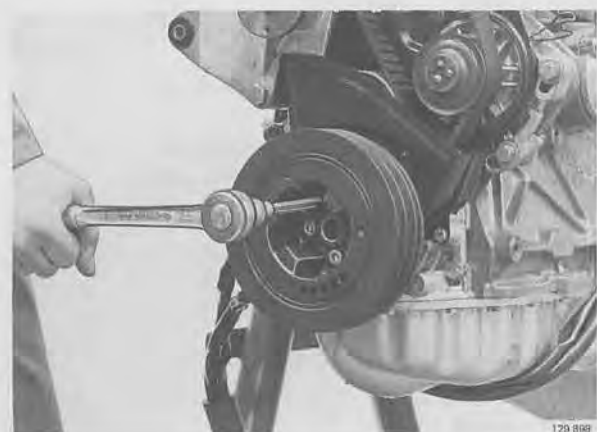

Remove 4 Allen screws (6 mm).

Pull off vibration damper.

Note! Crankshaft gear may sometimes stick to vibration damper.

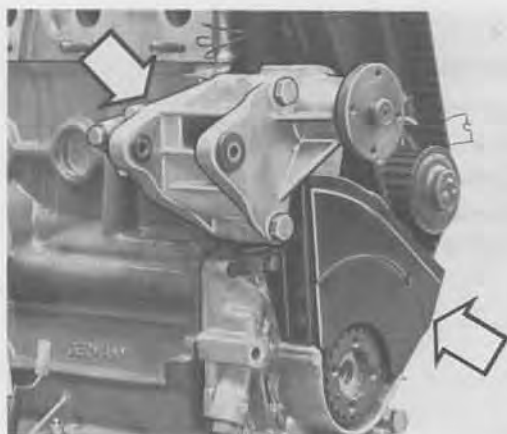


129 899

A7

Remove:

- lower timing gear cover
- fan/alternator mounting bracket.

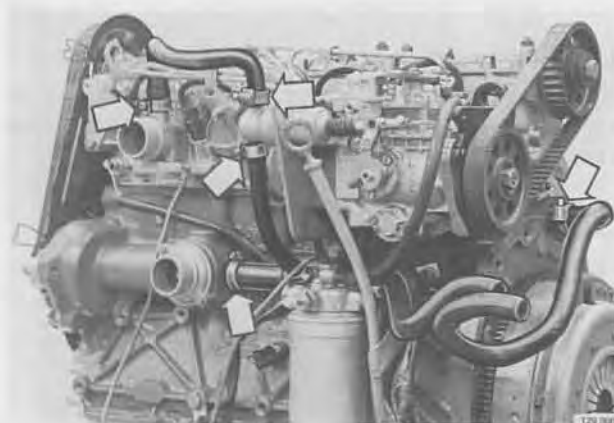

129 900

A8

Disconnect coolant hoses

Disconnect hoses from cold start device and heater.




129 901

A9

Remove vacuum pump with plunger and fuel delivery pipes

Clean all connections thoroughly before disconnecting.

Block off all ports and connections to prevent dirt entering fuel system.

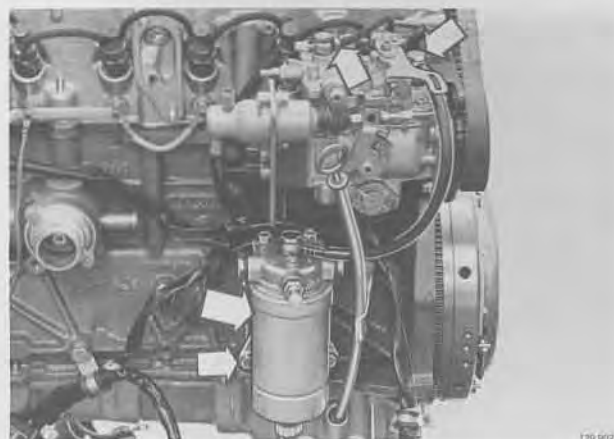


129 902

A10

Remove:

- return and supply fuel lines from injection pump. Plug ends to prevent dirt ingress.
- fuel filter with base
- mounting bracket for fuel filter.

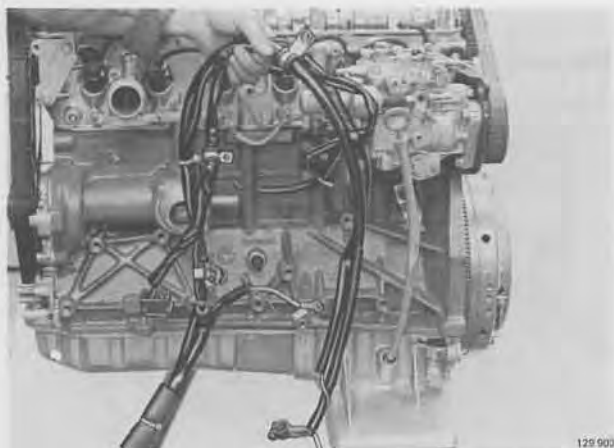


A11

Remove wiring harness

Cut both harness straps at rear of block.

Disconnect wires from temperature senders (2×), fuel valve, oil pressure sender and No. 2 glow plug.

Remove harness clamps (2×) at bottom of block and lift away wiring harness.

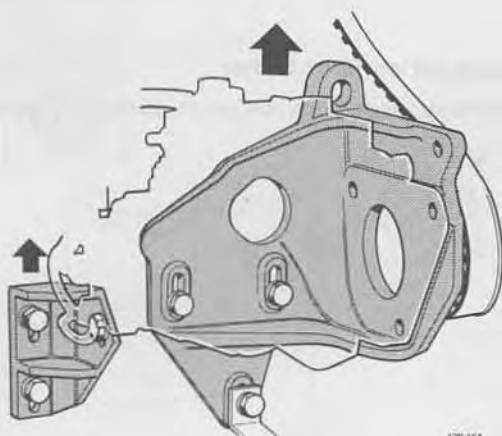

A12

Lift off pump belt


Slacken mounting bolts for injection pump bracket to release belt tension. Tighten one bolt so that pump remains in upper position. Lift off belt.



A13

Remove pump gear

Use stop 5193 to hold gear in position when removing nut and washer.

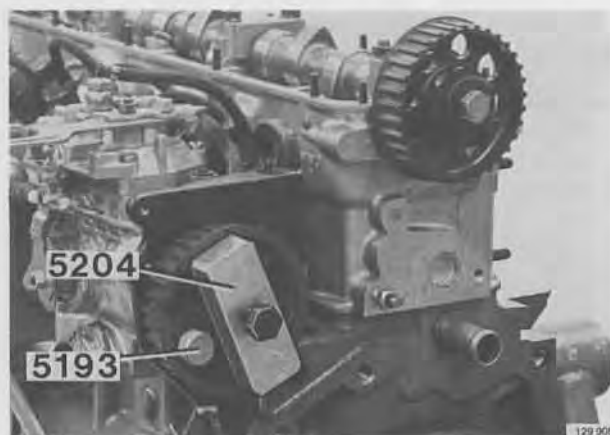


Remove gear with puller 5204.

A14


Remove injection pump

Remove front mounting bracket for pump.

Detach pump from rear mounting bracket. Use a long 6 mm Allen key to remove inner bolt.

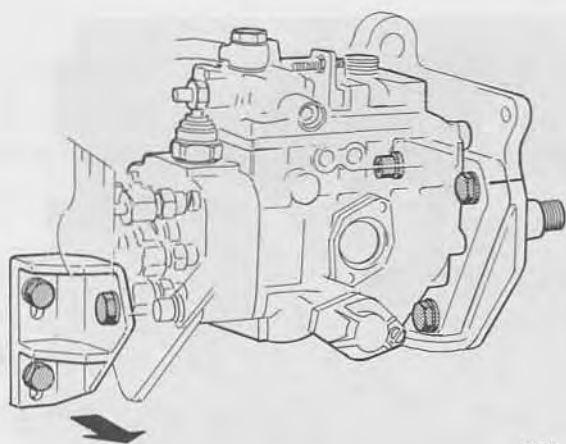

128 181

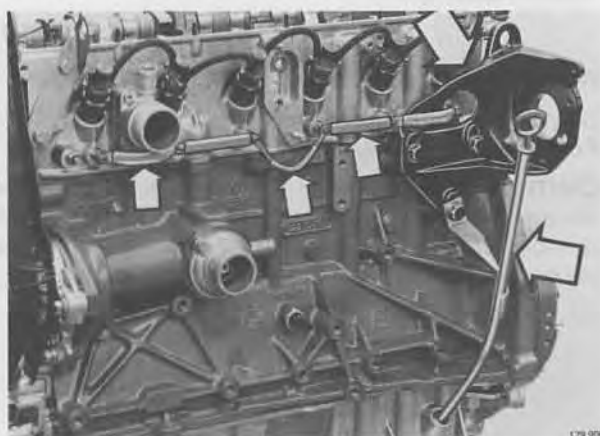

129 906

A15

Remove:

- copper connecting strips from glow plugs
- oil dipstick with tube
- rear pump mounting bracket.

B. Disassembling engine


TIMING GEARS

B1

Remove timing gear belt and crankshaft gear

Slacken cooling pump mounting bolts and belt. Remove belt and crankshaft gear.

CAUTION! Once the timing gear belt is removed neither the crankshaft nor camshaft may be turned before the cylinder head is removed, otherwise the valves can strike the pistons and cause serious engine damage.

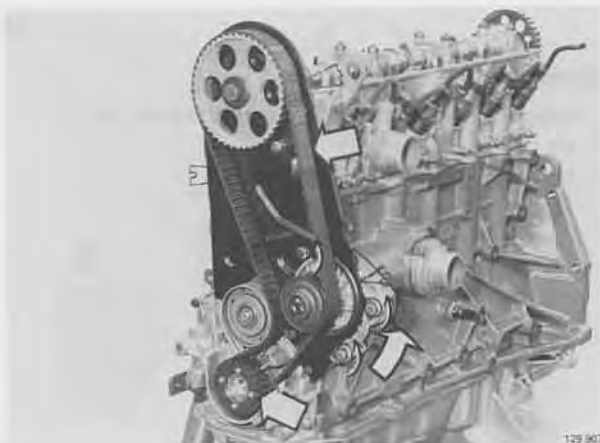


B2

Remove front and rear camshaft sprockets

Hold the camshaft in position with wrench 5199.

Tap the front gear to remove it from camshaft.

Note! Take care not to rotate the camshaft.

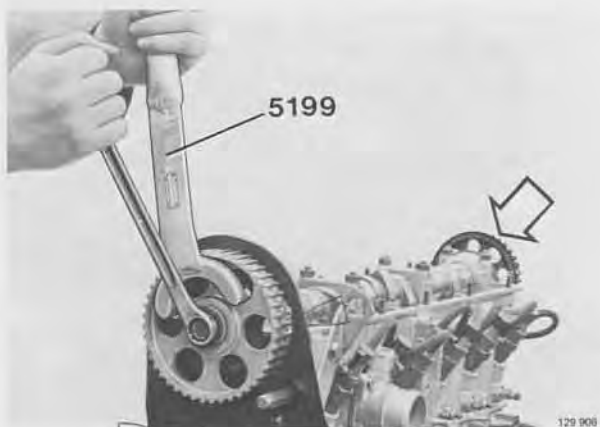


B3


Remove idler pulley and plate

Unscrew and remove center bolt.

Withdraw pulley using puller 5202.

Remove cover plate.

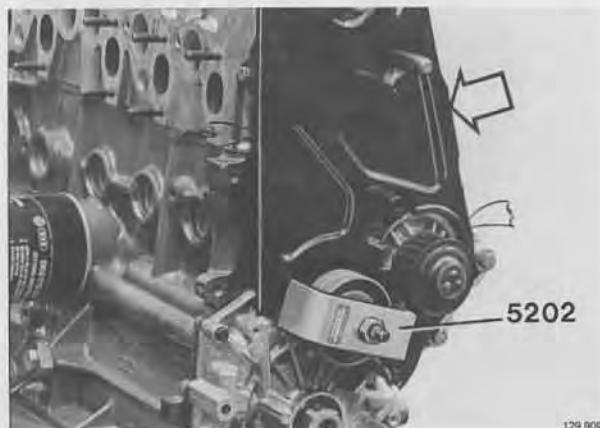

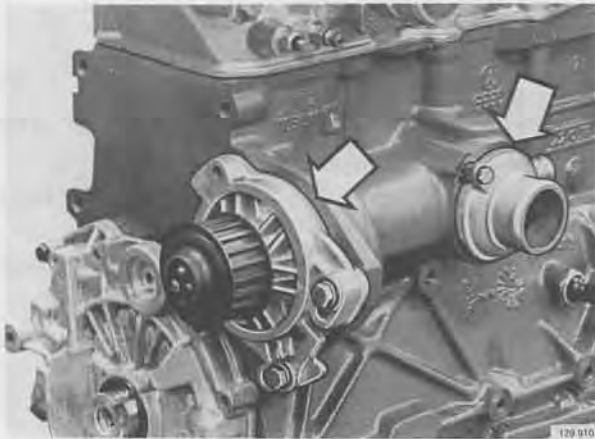

B4

Remove coolant pump, thermostat housing and thermostat

Place a drip pan beneath engine and tilt engine forward to drain coolant.

CYLINDER HEAD



B5

Remove injectors

Remove dirt around injectors.

Disconnect fuel lines.

Remove injectors, (27 mm socket). Lift out heat shields from cylinder head.

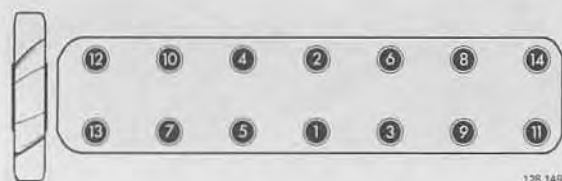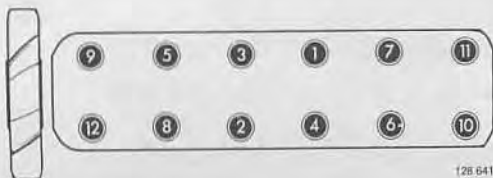


B6

Remove cylinder head


Important! Slacken bolts in reverse sequence to tightening, i.e. start at 12 (or 14) and finish at 1.

Illustration shows **tightening** sequence. Bolts must be slackened in reverse sequence.

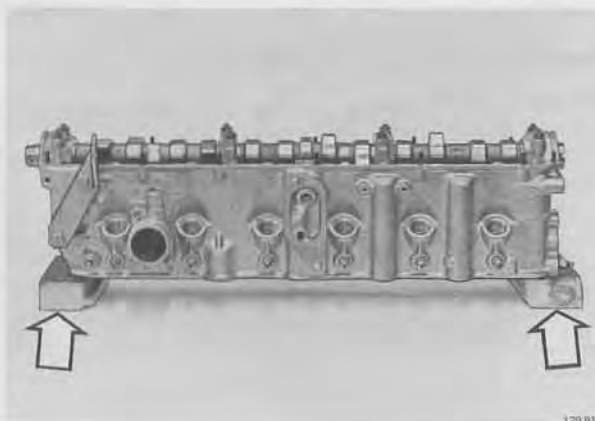

Lift away cylinder head, checking that valves do not contact cylinder walls.

Place cylinder head on wooden blocks so that it does not rest on valves. Remove gasket.

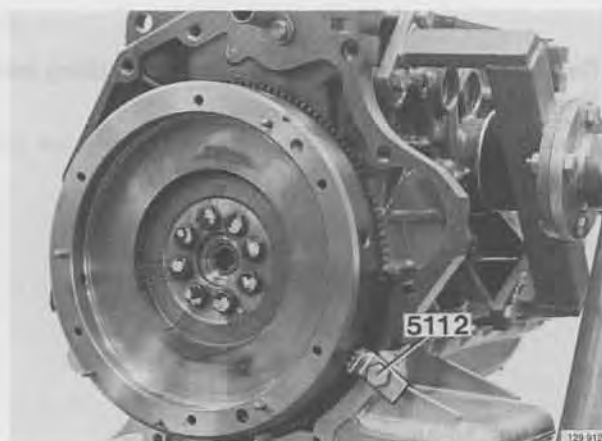


FLYWHEEL, CRANKSHAFT OIL SEALS

B7

Remove pressure plate, driven plate and flywheel

Unscrew clutch pressure plate mounting bolts crosswise a few turns at a time to prevent warp.


Use locking sector **5112** to prevent flywheel from moving.

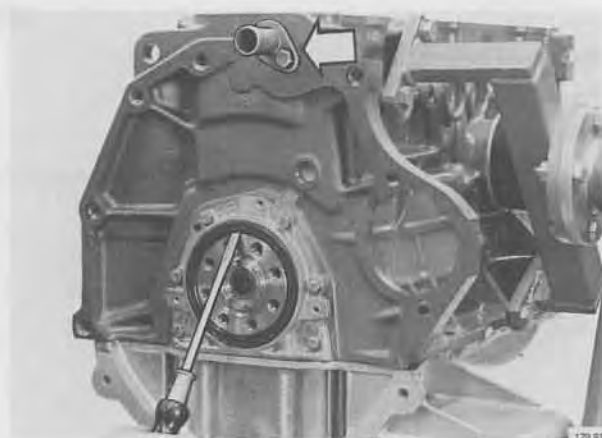

B8

Remove hose connector at rear of block and crankshaft rear oil seal


Pry out seal with a screwdriver placed between seal and crankshaft.

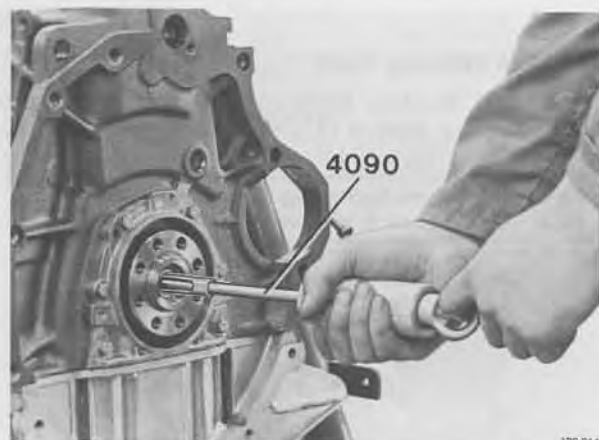

B9

Check pilot bearing


Replace bearing if damaged. Use puller **4090**.

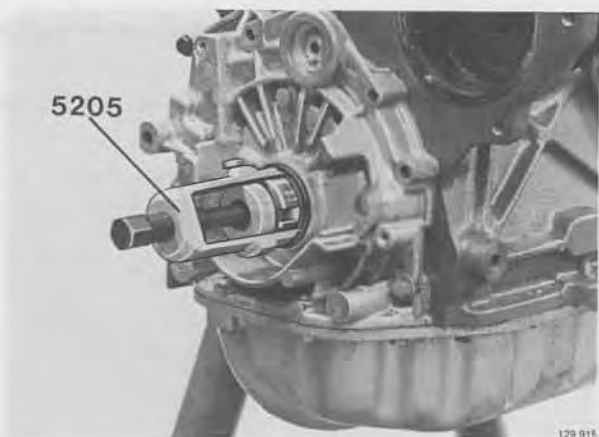

B10

Remove crankshaft front oil seal

Use puller **5205**.

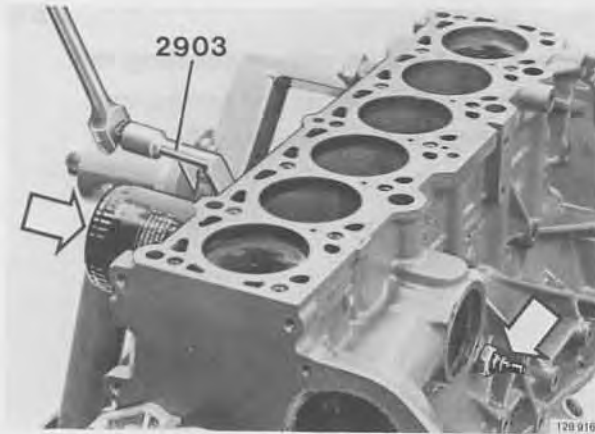


SUMP, OIL PUMP

B11

Remove oil pressure sender and filter

Use strap wrench 2903 to remove oil filter.

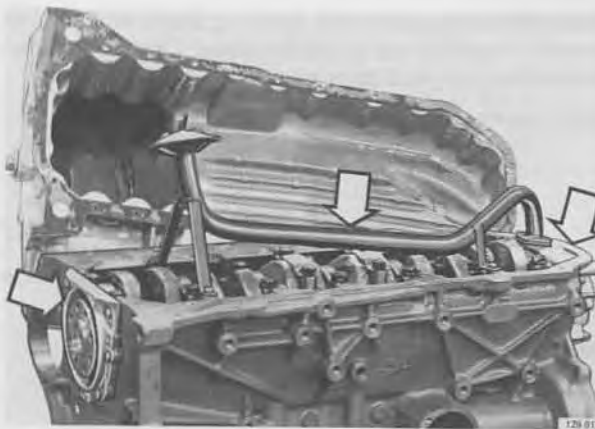

B12

Remove:

- sump
- oil strainer
- oil pump
- rear sealing flange.



PISTONS, CONNECTING RODS


B13

Check connecting rod side clearance

Use a feeler gauge.

Clearance = max 0.4 mm (0.016 in).

If clearance is too large, connecting rods must be replaced. Note that connecting rods must be replaced in sets.

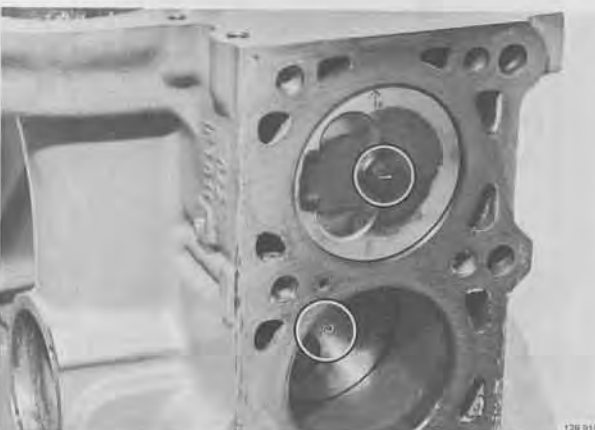

B14

Mark pistons

B15


Remove ridge at top edge of cylinder bore



B16

Remove No. 1 piston with connecting rod

Remove connecting rod cap and bearing shell.
Push out piston and connecting rod.

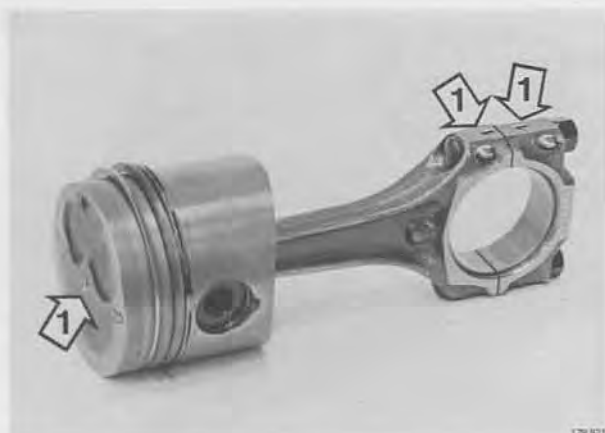

Assemble connecting rod, bearing shells and caps to prevent interchange of parts. **Note!** Casting lugs on connecting rod and caps must face the same way.

Mark connecting rod-cap.

B17

Remove remaining pistons and connecting rods as above

Note! Do not interchange bearing shells.



CRANKSHAFT

B18

Remove crankshaft

Check identification marks on main bearing caps.
Mark as necessary.


Remove main bearing caps and shells.

Lift away crankshaft.

Remove bearing shells from cylinder block.

Note! Do not interchange bearing shells.

C. Cleaning, checking engine

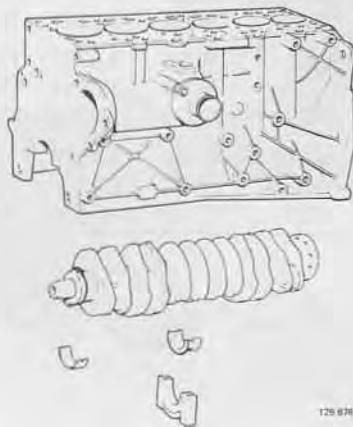

C1

Clean

- cylinder block (pieces of gasket, mating surfaces, bearing seats, oilways etc). Polish sealing surface for coolant pump O-ring.
 - bores for cylinder head bolts, and bolts
 - polish cylinder bores to remove scratch marks etc
 - crankshaft-blow-out oilways
 - main bearing caps and bearing shells
- Check all parts for damage and wear.


C2

Measure crankshaft


Use a micrometer to measure out-of-round and taper of bearing journals. Measure at several points.

Max out-of-round = **0.003 mm** (0.0001 in)


Max taper = **0.005 mm** (0.0002 in).

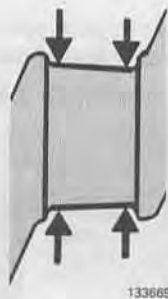

taper

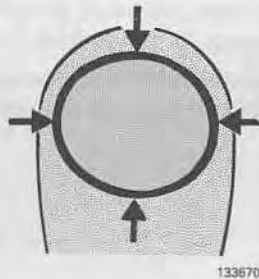

out-of-round

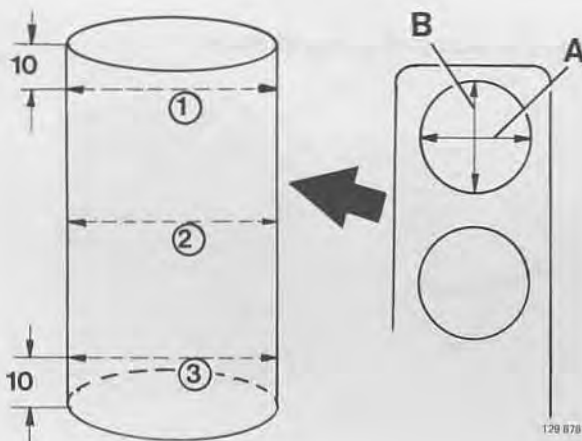


C3

Measure cylinder bore

Use a dial bore indicator (50–100 mm = 1.95–3.95 in).

Measure diameter A (crosswise) and B (lengthwise) at points "1", "2" and "3".

Bore must not deviate by more than **0.04 mm** (0.0016 in) at any two points.

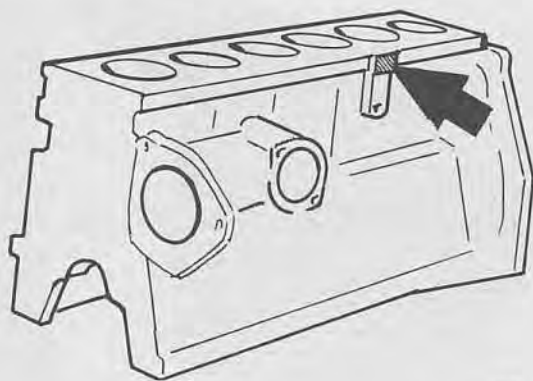

129 877

Cylinder bore is stamped on cylinder block (last 3 figures = honing group).

If cylinders are rebored, new bore must be stamped on side of block.

	Marking (honing- group)	mm	Piston Diameter in	mm	Bore Diameter in
Standard	651	76.48	3.0110	76.51	3.0122
	652	76.49	3.0114	76.52	3.0126
	653	76.50	3.0118	76.53	3.0130
Oversize 1	676	76.73	3.0209	76.76	3.0220
	677	76.74	3.0211	76.77	3.0224
	673	76.75	3.0217	76.78	3.0228
Oversize 2	701	76.98	3.0307	77.01	3.0319
	702	76.99	3.0311	77.02	3.0323
	703	77.00	3.0315	77.03	3.0327
Oversize 3	751	77.48	3.0504	77.51	3.0516
	752	77.49	3.0508	77.52	3.0520
	753	77.50	3.0512	77.53	3.0524



129 923

C4

Measure piston diameter

Take measurements at right angles to gudgeon/piston pin bore, 15 mm (0.6 in) from lower edge of piston.

Diameter must not deviate by more than **0.04 mm** (0.0016 in) from value in table above.



129 879

Diameter stamped on top of piston.



129 924

Remove piston rings from piston

Use piston ring pliers.

C5




129 925

Disassemble connecting rods – pistons

Remove circlips from gudgeon/piston pins with a small screwdriver. Push out pins with a suitable drift. If difficult to remove, heat pistons to approx. 60°C (140°F).

C6

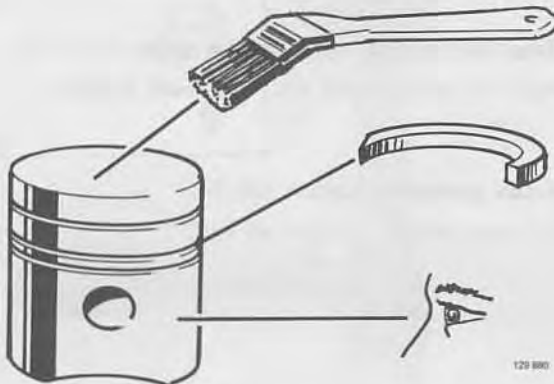

129 926

Clean pistons

Remove carbon deposits. Use a groove cleaner or part of a ground piston ring to clean grooves.

C7

Check pistons

Check for cracks, wear etc.

Pistons with rounded top edges must not be reused. (Since this is caused by defective injectors, the injectors should be checked/reconditioned as well.)

C8



129 926

Measure piston ring side clearance

Use a feeler gauge.

	Side clearance mm (in)		Max mm (in)
	New mm	(in)	
Upper compression ring	0.06–0.09	(0.0024–0.0035)	0.2 (0.0079)
Lower compression ring	0.05–0.08	(0.0020–0.0031)	0.2 (0.0079)
Oil scraper ring	0.03–0.06	(0.0012–0.0024)	0.15 (0.0060)

C9




129 927

C10

Check gudgeon/piston pin fit

Make sure that pin is not loose and that bore is not oval.

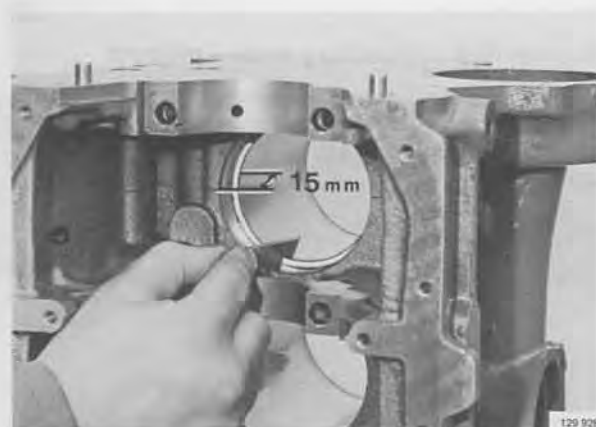

129 928

C11

Measure piston ring gap

Using an inverted piston, insert rings in cylinder one at a time. (This ensures that rings take up correct position.)

Measure ring gap 15 mm (0.6 in) from lower edge of cylinder.

Use a feeler gauge.

	Gap New mm	(in)	Max mm (in)
Compression rings	0.3–0.5	0.0118–0.0197	1.0 0.0394
Oil scraper ring	0.25–0.40	0.0098–0.0157	1.0 0.0394

C12

Clean and check connecting rods

Check for wear, cracks etc. Also check threads.



129 929

C13

Check gudgeon/piston pin fit

Pin must be push fit in small end.

Replacing connecting rod studs (if damaged) Operations C14–15

C14

Tap out old stud


Remove bearing cap and bearing shells.

Hold connecting rod on a hard level surface. Tap stud out with a plastic mallet.



129 930

C15

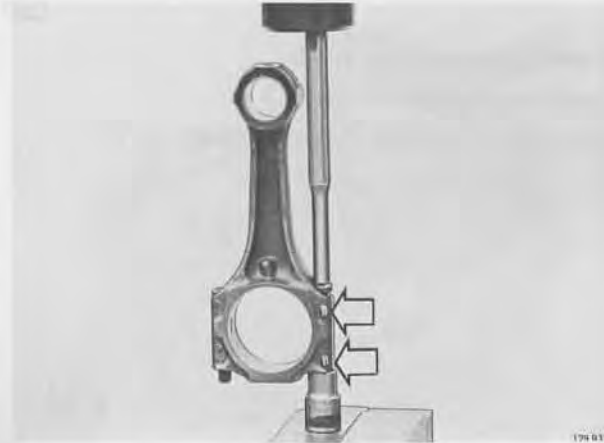**Fit new stud**


Place new stud in connecting rod. Tap bolt into position with a plastic mallet.

Install cap. **Note!** Identification marks.

Place a socket (e.g. 12 mm) beneath cap and press in stud until it bottoms.


Replacing connecting rod bushings
 Operations C16–19

C16

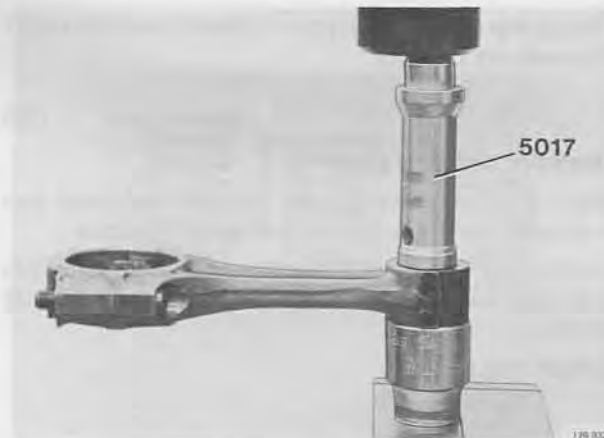**Press out bushing**

Use drift **5017** (narrow end) and a suitable socket, placed beneath connecting rod.

C17

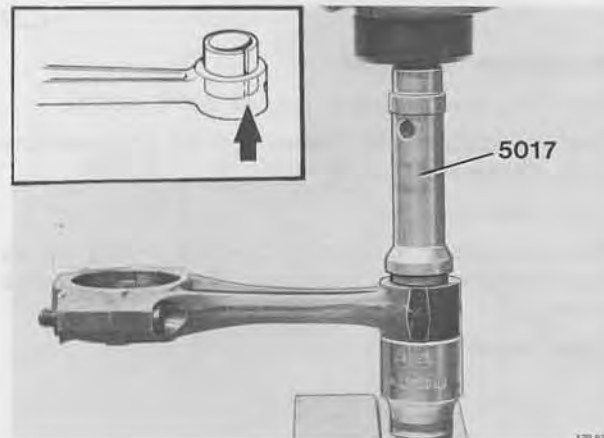**Press in new bushing**

Use drift **5017** (wide end) and a suitable socket, placed beneath connecting rod.

Bushing should be flush with connecting rod.

Note! To ensure correct lubrication, install bushing with split diagonally upwards but not blocking oil channel.

C18

**Drill lubricating hole in bushing**

Mount connecting rod in vice protected by soft jaws to prevent damage. Use a 6 mm (0.24 in) drill bit.

C19

Ream bushing

Gudgeon/piston pin must have a light push fit in connecting rod.



Check connecting rods

Use a connecting rod aligner.

Check for out-of-true, distortion and S-form.

C20



Replacing starter ring gear (manual gearbox only) Operations C21–22

C21

Remove old ring gear

Make a punch mark exactly between two cogs and opposite one of the milled recesses in flywheel.

Drill through ring gear with a 10 mm drill. **Note!** Do not drill into flywheel. If necessary split ring gear with cold chisel.

Lift off ring gear.



C22

Install new ring gear

Place ring gear in oven at approx. 250°C (480°F).

Check temperature by means of solder (40% tin, 60% lead). Solder melts at 220–230°C (430–450°F).

Clean mating surfaces.

Place ring gear in position, bevelled side facing flywheel. If necessary tap ring gear into position with a brass drift.

Leave to cool.



Oil pump Operations C23–28

C23


Disassemble oil pump

C24

Clean and check all parts

Check for damage, wear etc. Pay special attention to the half moonshaped segment and surface between inlet and outlet ports.

If defective, pump must be replaced since separate parts are not available. Parts are available for relief valves.

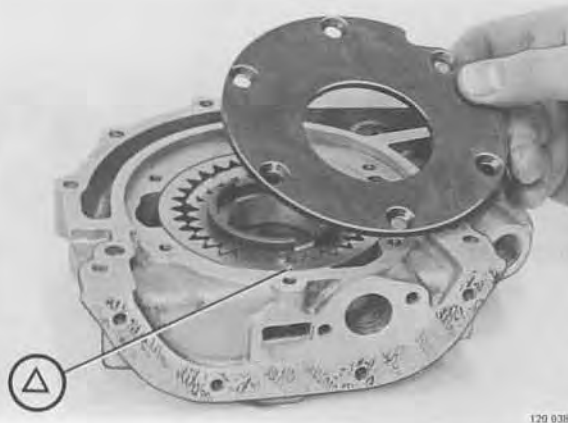

129 938

C25


Place pump gears in housing and check play/backlash

Place large pump gear in housing with (Δ) up and then install small gear.

Check play/backlash. If too large, replace entire pump.

C26

Install cover

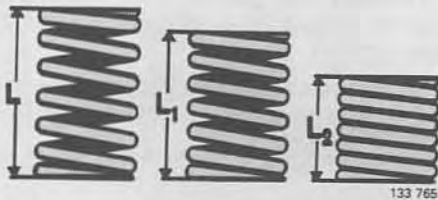


133 765

C27

Test relief valve spring

Load N	lb	Length	
		mm	in
0	0	49	1.930
175-195	39	22	0.866
approx. 200	45	19.8	0.780 (fully compressed)

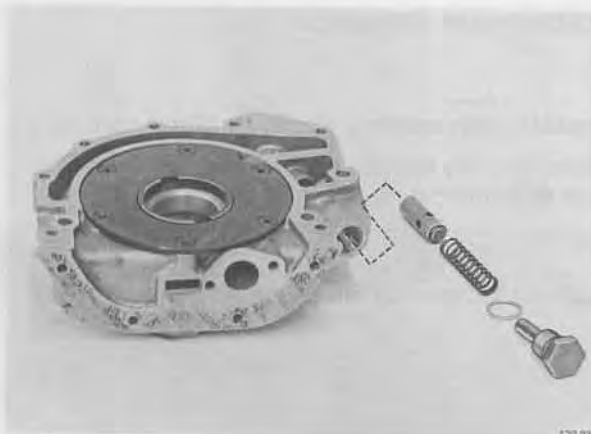

129 939

C28

Install relief valve


Check that plunger moves freely.

Install new copper washer.

Tightening torque 40 Nm (30 ft lbs).

D. Assembling engine

New gaskets, O-rings and oil seals should be used throughout when assembling the engine.

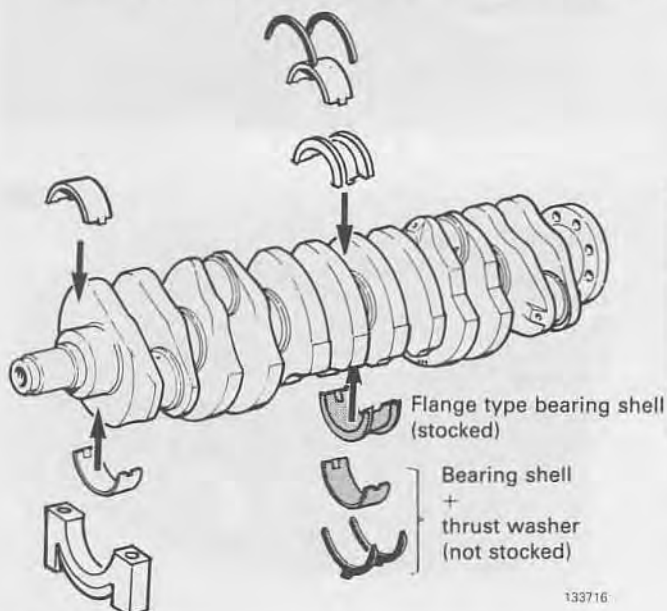

D 24: Modified crankshaft bearings

Two type of bearing shells are in use:

Type 1: **Flanged type bearing shell**, fitted to vehicles with engine numbers up to CW 70978. Type 1 spares are available.

Type 2: From engine number CW 70978; thrust washer halves are used with separate bearing shells. These parts are not stocked.



CRANKSHAFT, OIL SEALS

D1

Install main bearing shells in block and caps

Note that only bearing shells on block side are equipped with lubricating holes.

D2

Lubricate bearing shells

D3

Position crankshaft

Lubricate bearing seats.

D4


Install main bearing caps

Lubricate bolts.

Install No. 4 cap first.

Note! Identification numbers must face towards oil filter side. No. 1 cap must face vibration damper end and No. 7 cap the flywheel end.

Tighten each cap to **65 Nm (47 ft lbs)**. Make sure that crankshaft can be rotated after each cap is installed.

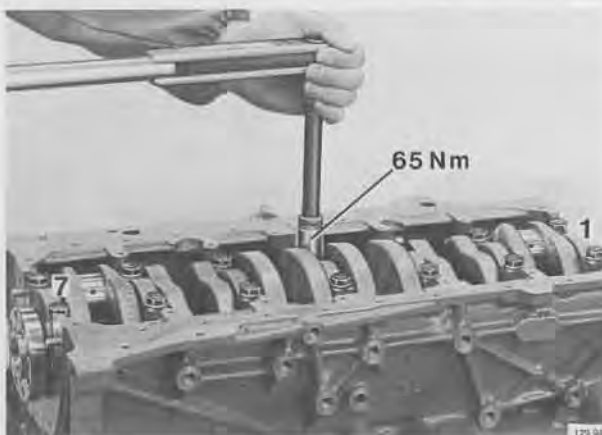


D5

**Check crankshaft end float**

Use a dial indicator to measure the clearance between both end positions of crankshaft.

End float

new	0.07–0.18 mm (0.0028–0.0071 in)
max	0.25 mm (0.0098 in)

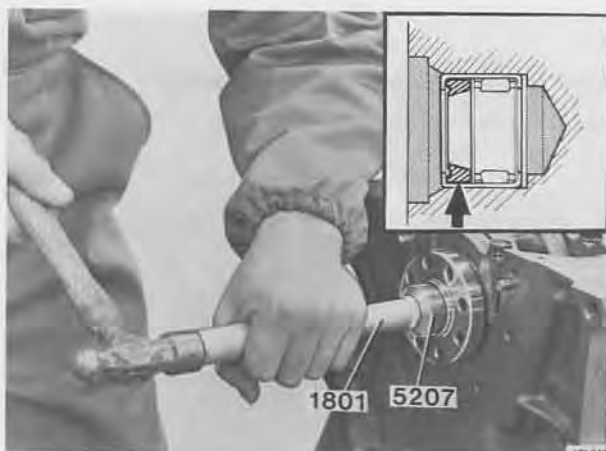**Manual transmission**


D6

Install new pilot bearing

Install bearing with oil seal and mark on outer race facing out.

Use standard handle **1801** and drift **5207** to tap in bearing until it abuts crankshaft.

Press in a small amount of grease (1.3–1.5 gram) in the space beyond the bearing.

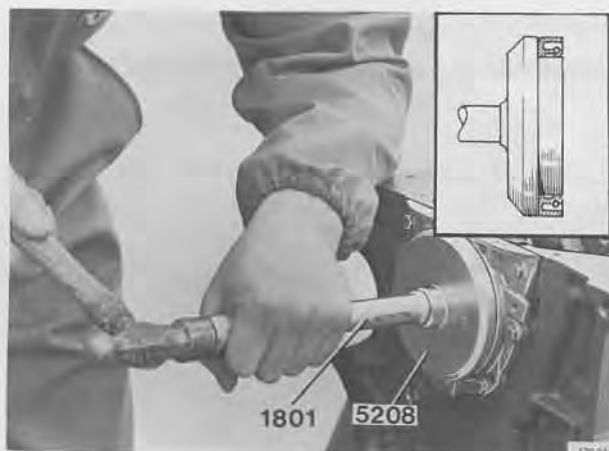

D7

Install rear sealing flange

Use a new seal.

(6 bolts M6 × 18)


D8

Install crankshaft rear oil seal

Assemble standard handle **1801** and drift **5208**.

Smear all mating surfaces with oil.

Place seal on drift and tap in until it abuts crankshaft.

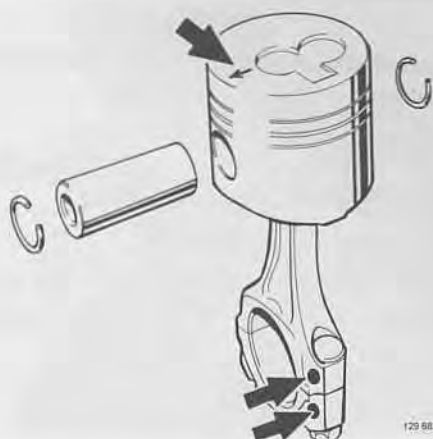
**PISTONS, CONNECTING RODS**

D9

Assemble pistons and connecting rods

Casting lugs on connecting rod and arrow on top of piston must face same direction.

Insert one snap ring and press in gudgeon/piston pin using a suitable drift. If this is difficult, heat piston to approx. 60°C (140°F). Install other snap ring.

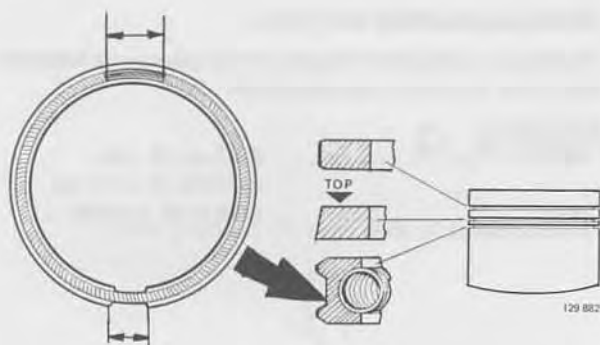

Install piston rings


Install ring with spring in bottom groove.

Install oil scraper ring. **Note!** Make sure that gap in oil ring and spring are opposite each other, see fig.

Install lower compression ring, TOP facing up.

Install upper compression ring.


D10

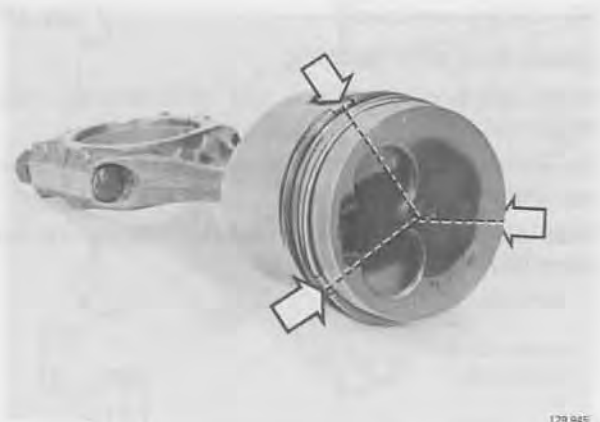

Turn rings until gaps are 120° apart

Note! Do not rotate oil scraper ring.

D11

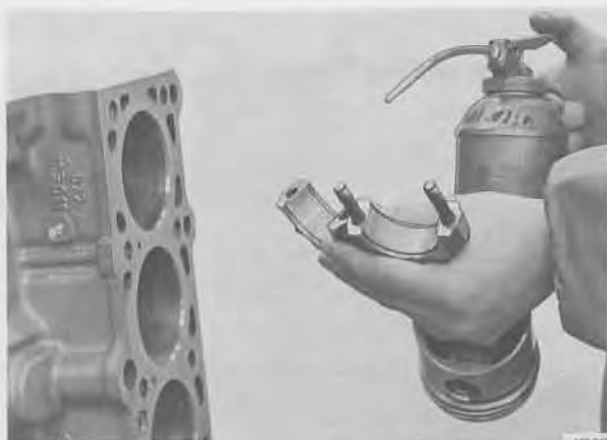


Install bearing shells in connecting rod and caps

D12

Lubricate cylinder bores, pistons and bearing shells

D13

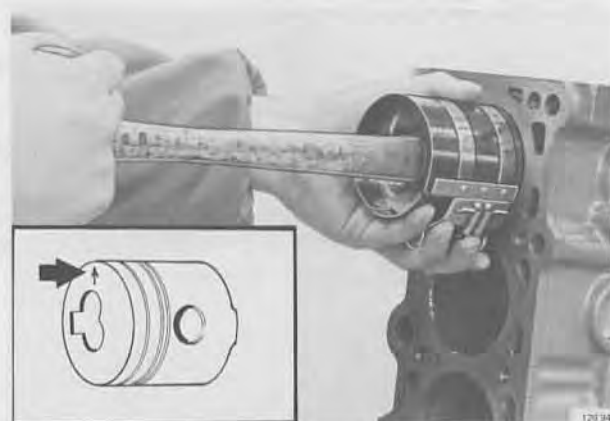

Turn crankshaft until cyl. 1 crank journal points straight down

D14

Install No. 1 piston in cylinder bore

Use a piston ring compressor tool.

Push in piston and position connecting rod on crank.

Note! Arrow on top of piston must point forwards.


D15

D16

Install connecting rod cap

Check identification marks. Casting lugs (arrowed) must face forwards. Install new nuts, lubricate contact surfaces.


Torque to **45 Nm** (32 ft lbs).

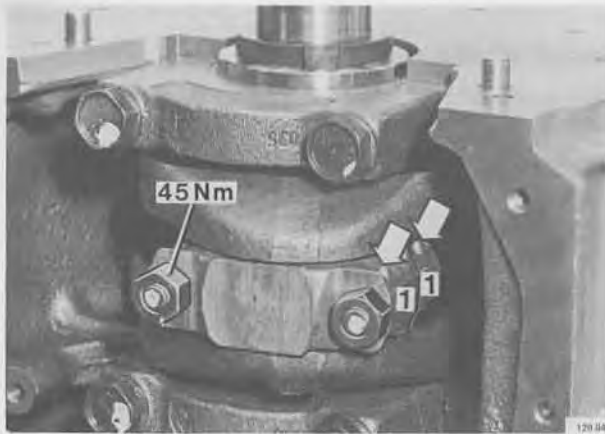

D17

Install remaining pistons


Follow operations D14–D16.

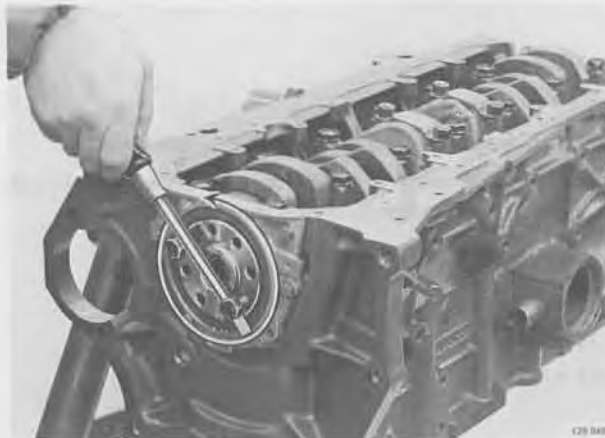

D18

Check that crankshaft can be rotated

Use two old flywheel bolts and a screwdriver as illustrated to rotate crankshaft.

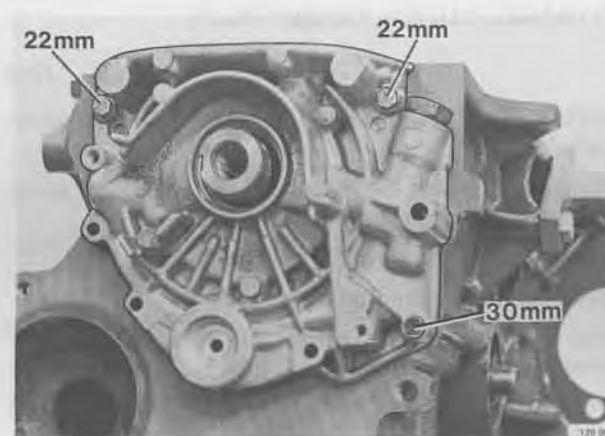**OIL PUMP, SUMP (PAN)**

D19

Install oil pump


Install pump with new oil seal.

Align pump gear on crankshaft flange. Install three bolts (arrowed). Other bolts will be installed at a later stage.

Note! Oil pump bolts are of different lengths.

22 mm = 0.87 in

30 mm = 1.18 in

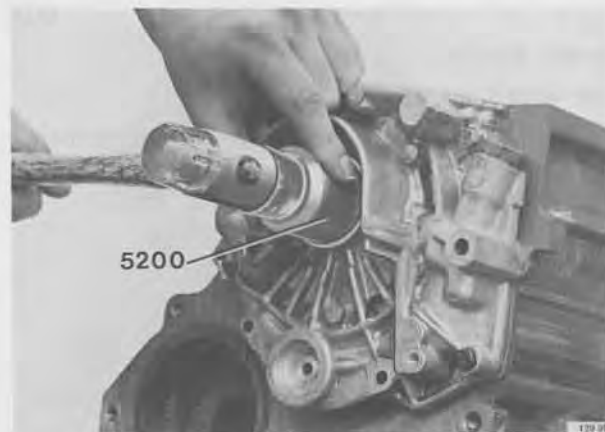


D20

Install crankshaft front oil seal

Pack space between sealing lips with grease.

Tap in oil seal with **5200** and a plastic mallet.

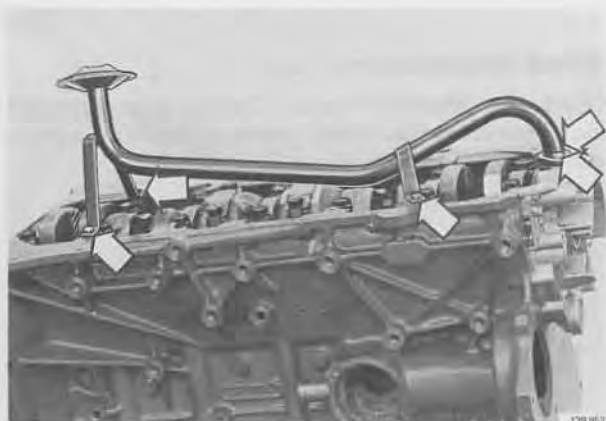


D21

Install oil strainer

Use a new oil seal and new locking strap for oil pump bolts.

Tightening torque 10 Nm (6.5 ft lbs).

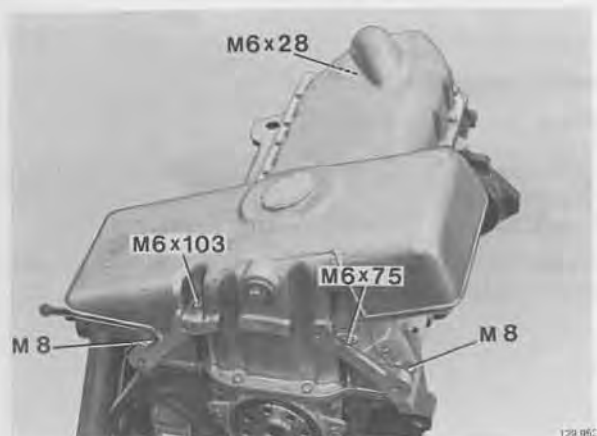

D22

Install sump

Use a new gasket.

Note! Different bolt lengths and dimensions.


Rear edge of sump must be flush with engine block.
(Use a straight edge to check this.)

All other bolts = M6 × 18

28 mm = 1.10 in

75 mm = 2.95 in

103 mm = 4.05 in

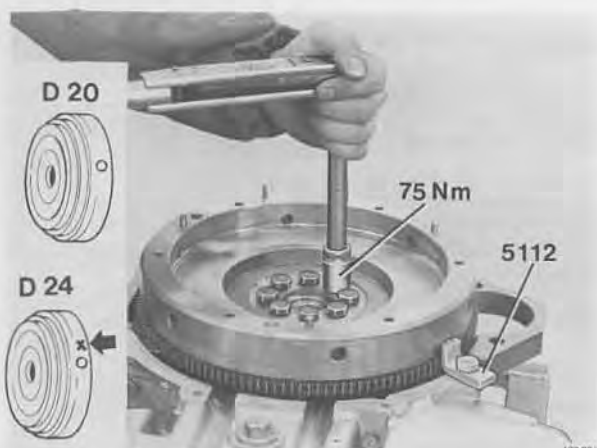

FLYWHEEL, CLUTCH, CARRIER PLATE

D23

Install flywheel (manual), carrier plate (automatic)

Flywheel can only be installed in one position since bolts are asymmetrically located.


Note! Support panel on automatic vehicles.

Use new bolts, smeared with sealer P/N 277 961-9.

Use locking sector **5112** to prevent crankshaft from rotating and torque bolts to **75 Nm** (55 ft lbs).

Note! Different types of flywheels for D 20 and D 24 engines.


D24

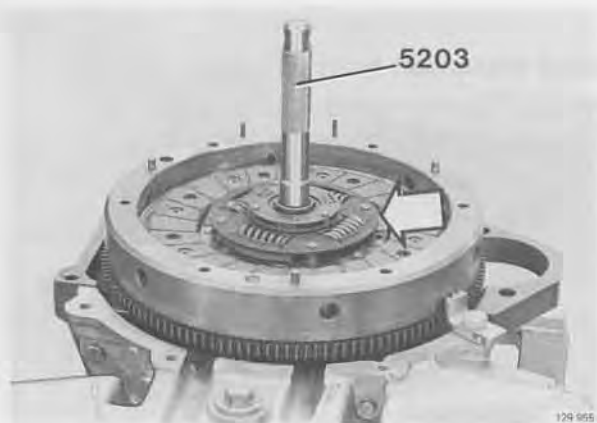

Install clutch

Use centering shaft 5203.

Install disc with hub facing out, away from flywheel.

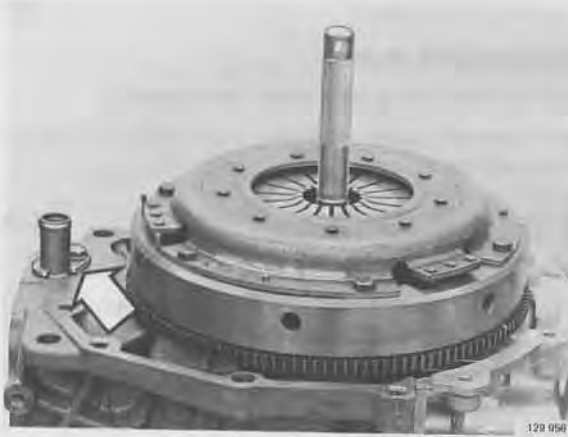

D25

Install pressure plate

Tighten bolts crosswise, a few turns at a time to avoid warp.

Remove locking sector 5112 and centering shaft 5203.

MISCELLANEOUS

D26

Reconnect hoses at rear of engine block

Use new O-rings.

Automatic gearbox**Check installation measurement of carrier plate**


(To be carried out after replacement of carrier plate)
Installation measurement = 17.2–18.8 mm (0.667–0.740 in).

If carrier plate is installed incorrectly (i.e. installation measurement is wrong), distance to torque converter carrier will be too long. This may cause carrier plate to crack and possibly noise when driving.


D27

To measure

Place a steel ruler between carrier plate and engine block. Ruler should rest against engine to gearbox mounting flange and should rest against both sides of flange. Turn crankshaft until one of holes in carrier plate coincides with steel ruler. Measure B with an outside caliper equipped for depth measurement.

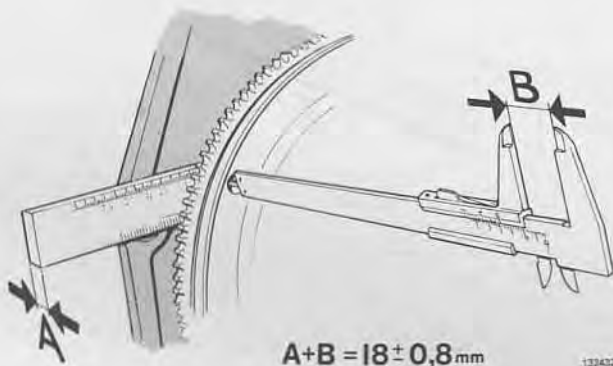

Measured value B plus thickness of steel ruler should = 17.2–18.8 mm (0.667–0.740 in). If distance is less than 17.2 mm = 0.677 in, place a spacer washer (P/N 1257377-0) between crankshaft and carrier plate.

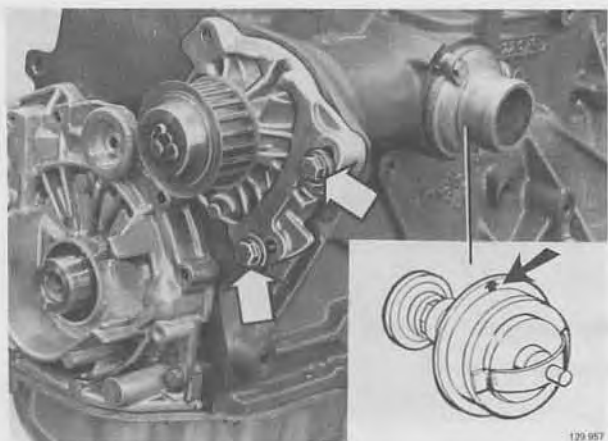

D28

Install coolant pump


Install a new O-ring, lubricated with grease.

Install the two outer retaining bolts only, but do not tighten at this stage.

D29

Install

- thermostat, new O-ring and thermostat housing. Arrow on thermostat must face up.

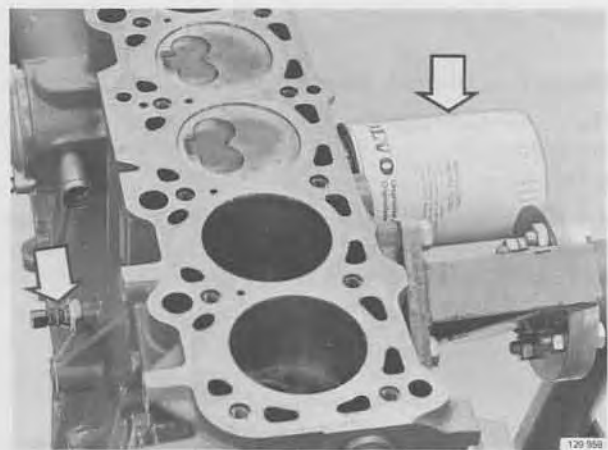


D30

Install


- oil pressure sender, use a new washer
- oil filter, see instructions on cartridge.

E. Cylinder head, disassembly

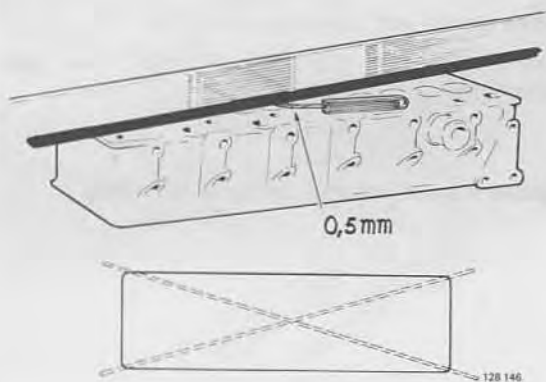


E1
Clean gasket surfaces on cylinder head and cylinder block.

E2
Check for damage and warp
Use a straight edge and feeler gauge.
Replace cylinder head if warp exceeds:
– lengthwise **0.5 mm** (0.02 in)

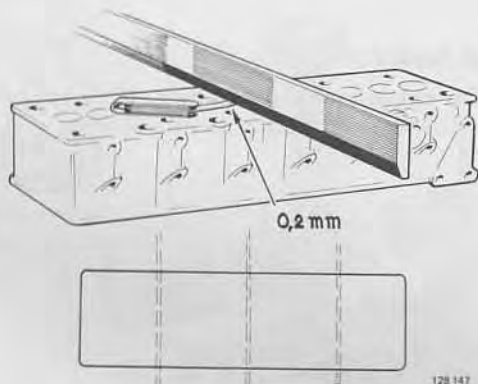


– crosswise **0.2 mm** (0.008 in)

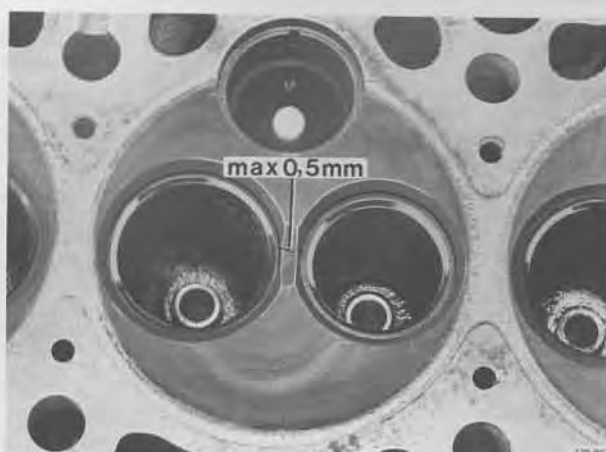


Note! Small cracks 0.5 mm (0.02 in) do not warrant replacement of cylinder head since they do not impair engine function.

For gasket replacement only see "Cylinder head installation" on page 55.

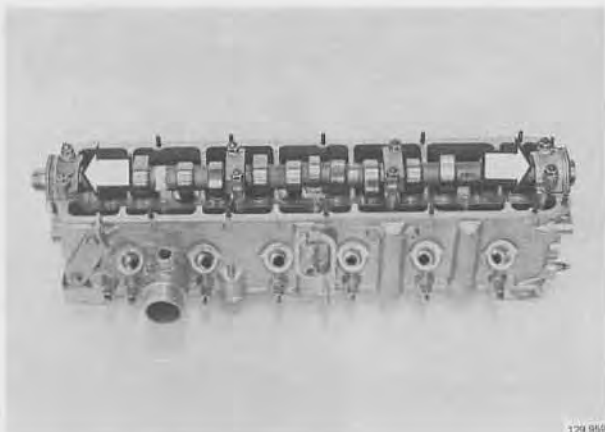

Remove camshaft bearing caps 1 and 4


E3

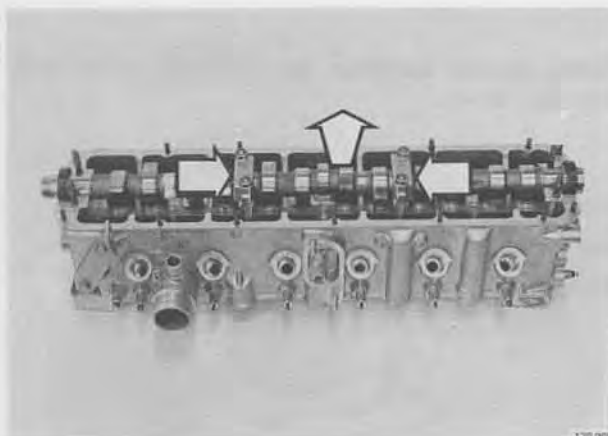

Remove camshaft bearing caps 2 and 3

E4


Slacken nuts crosswise to avoid placing uneven load on camshaft.

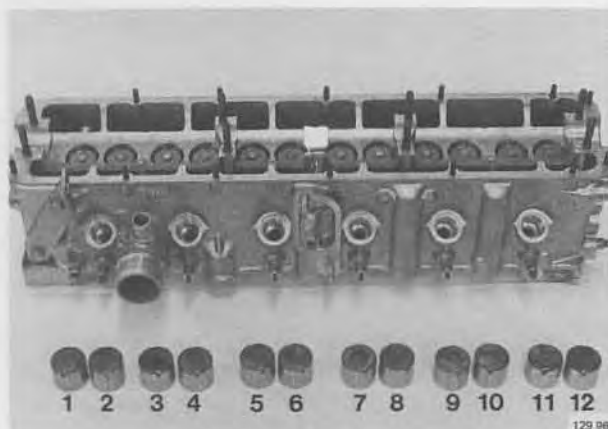

Lift out tappets

E6

Note! Do not interchange tappets. Mark tappets so that they can be installed in same position.

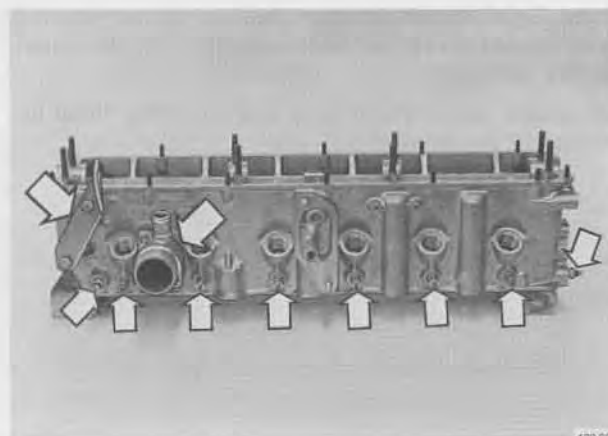

Remove from cylinder head:


E7

- lifting eyes
- connecting flange for coolant hose (Allen 5 mm)
- glow plugs
- temperature senders (2 X).

E8

Tap out swirl chambers

Use a long narrow punch (0.6 mm = 0.24 in diameter), length 150 mm (6 in).

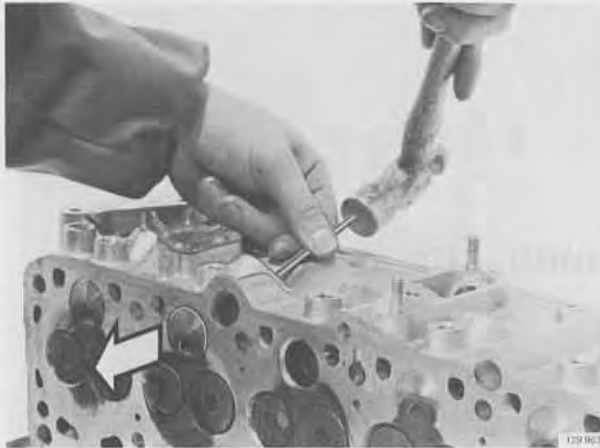

E9


Remove valve springs and valves

Important! Do not interchange parts.

Depress valve springs with a spring compressor tool.

Remove:


- retainers (collet)
- upper spring seat
- springs
- valve.

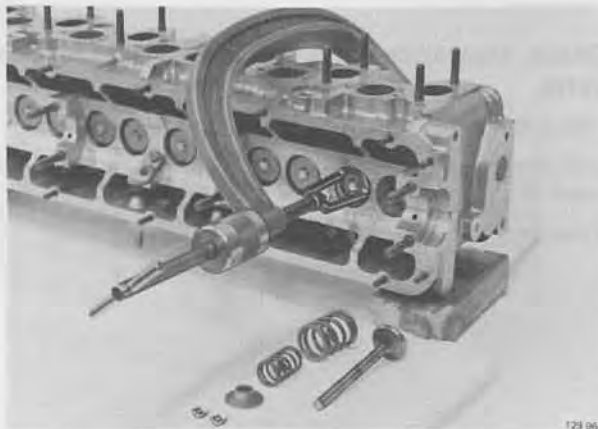

E10

Remove seals from valve guides


Use tool 5219.

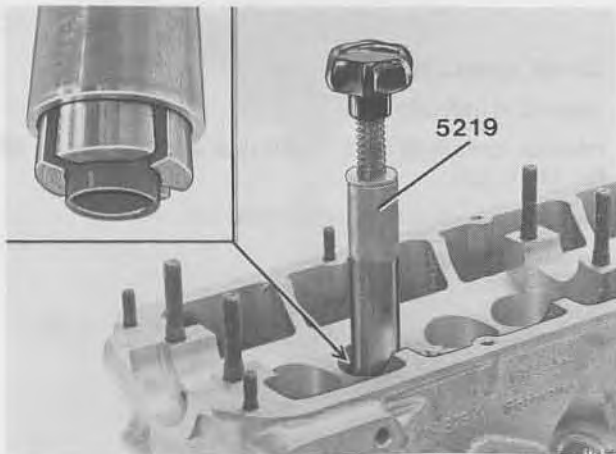


E11

Remove lower valve spring washers

Use a pair of external lock ring pliers with flat jaws.

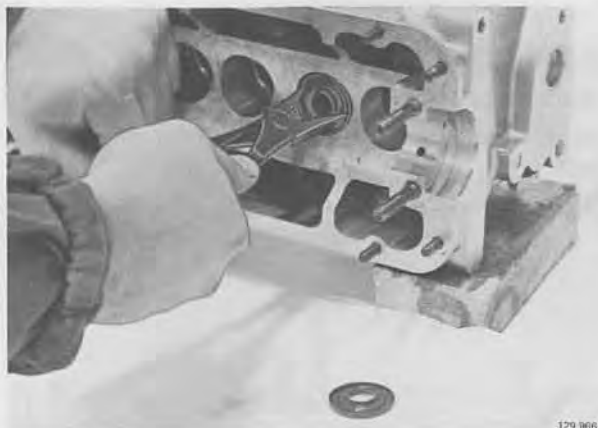

F. Cylinder head, cleaning – inspection

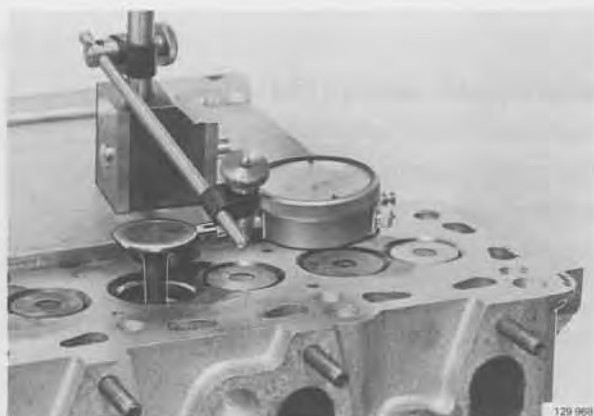


F1

Check clearance between valve guides and valve.

Use a dial indicator.

Use new valves (intake and exhaust) with end of valve stem flush with valve guide.

Clearance = **1.3 mm** (0.05 in).

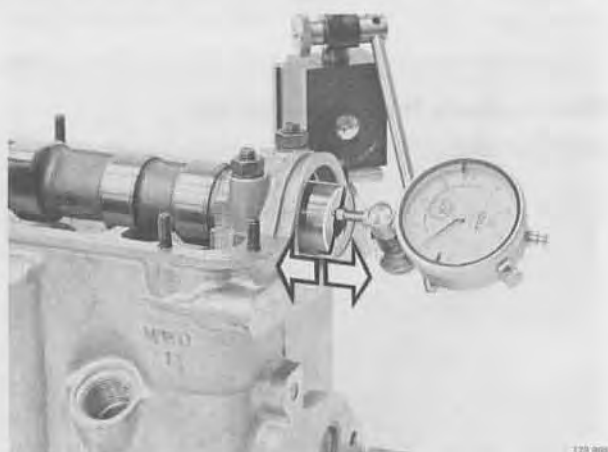

F2

Check camshaft end float

Use a dial indicator.

Position camshaft and install rear cap. Torque to **20 Nm** (15 ft lbs).

Clearance = max **0.15 mm** (0.006 in).

Remove cap and camshaft.



F3

Check discs

Check disc play. Replace disc if worn or scored.

Install discs with numbers facing down, towards tappets.

Clearance, new parts 0.016–0.046 mm
(0.0006–0.0018 in)




Check tappets

Place tappets in cylinder head.

Check fit and clearance.

Clearance, new parts 0.025–0.075 mm
(0.001–0.003 in)

F4

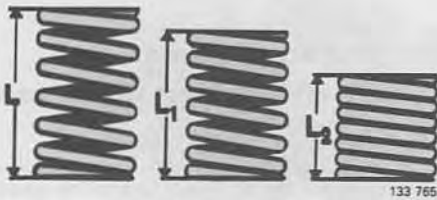

Check valve springs

Inner springs


Length		Load	
mm	(in)	N	(lbs)
33.9	(1.334)	0	(0)
28.6	(1.126)	67–77	(15–17,5)
18.3	(0.720)	209–231	(47–52.2)

Outer springs

Length		Load	
mm	(in)	N	(lbs)
40.2	(1.583)	0	(0)
32.6	(1.283)	167–185	(38–42)
22.3	(0.878)	433–479	(98–108.3)

Replacing valve guides
Operations F6–8


F5

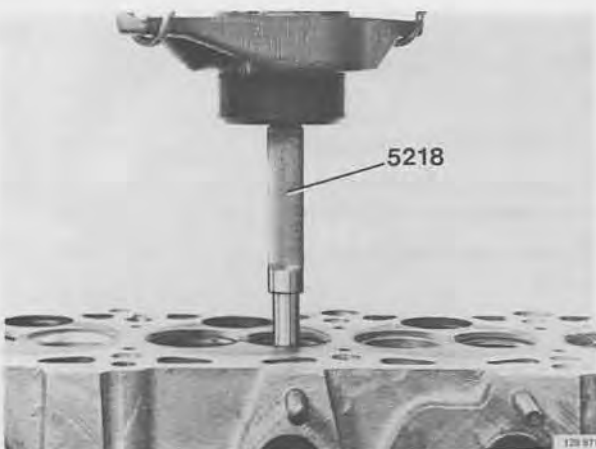

Press out valve guide

Use drift 5218. Press from combustion chamber side.

F6

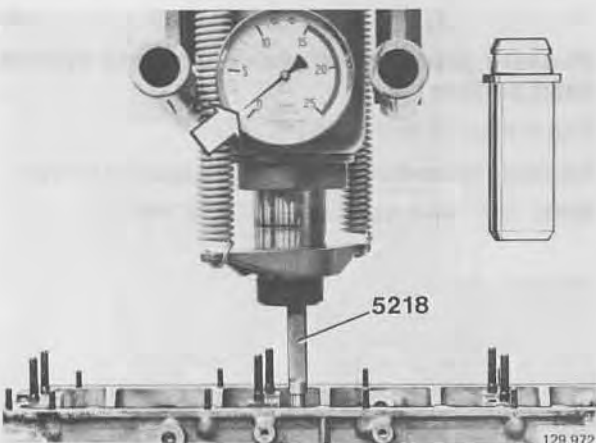


Press in new valve guide

Lubricate valve guide.

Use drift 5218. Press in from camshaft side.

Press in guide until flange on guide contacts cylinder head. In this position press force must not exceed 1 ton since flange may break off.

F7

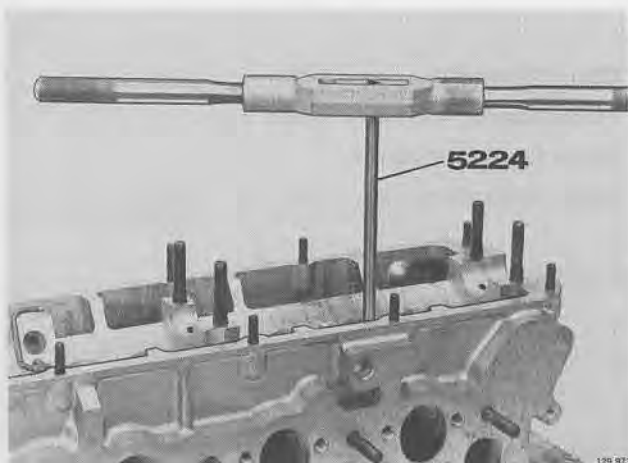


F8

Clean inside of valve guide

Use reamer 5224.

Note! Cutting oil must be used when reaming.

Valves and seats must be ground-in after valve guide replacement.

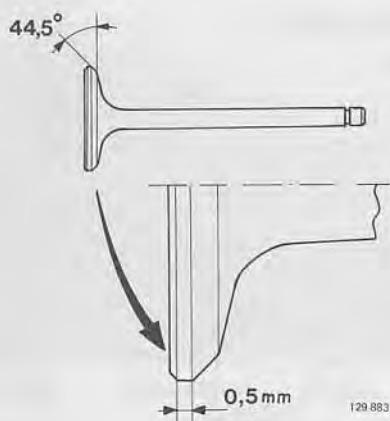


Grinding-in valves and seats Operations F9–12

F9

Machine grind intake valves

Edge of intake valve must not be less than 0.5 mm (0.02 in).

Important! Exhaust valves are stellite coated and must not be ground by machine. Grind-in valve on seat with grinding paste.

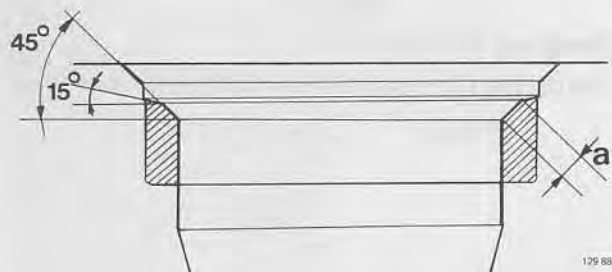

F10

Mill or grind valve seats


Grind to 45°.

Contact surface (a) must be:

- 2.0 mm (0.08 in) for intake valve
- 2.4 mm (0.09 in) for exhaust valve.

If contact surface is too wide reduce area with a 15° cutter.

Important! Outer diameter of cutter must not exceed 35.2 mm (1.39 in) for intake valve seats and 33.2 mm (1.31 in) for exhaust valve seats.

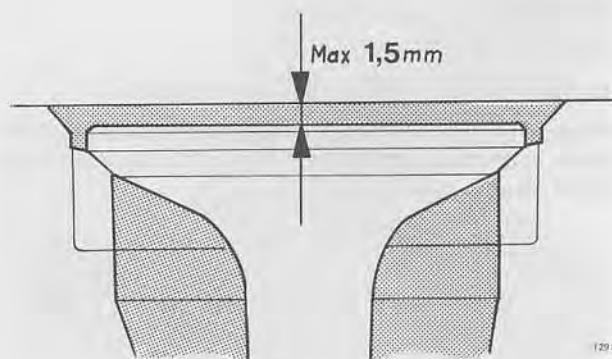

F11

Measure gap between valve disc and cylinder head surface

Gap = max 1.5 mm (0.06 in).

Replace seat and possibly valve if gap is too large.


Note! Two valve types are available, see G3.



Grind-in valves with paste

Clean valves thoroughly after grinding.

F12

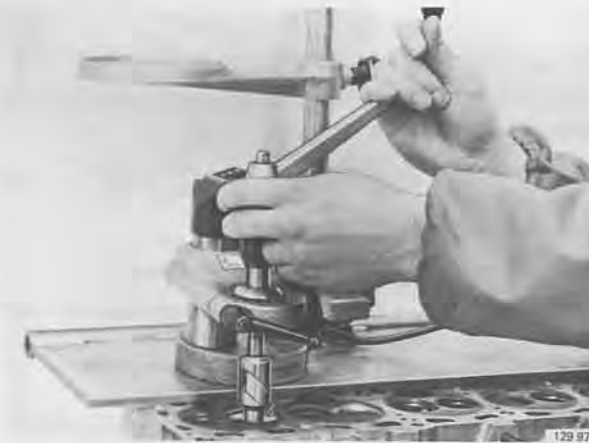

Replacing valve seats Operations F13–21

Valve guides must be replaced before replacing seats, see F6–8, page 47.

F13

Clean combustion chamber

Edge of seat must be clearly visible after cleaning.

F14



Remove valve seat

Mill valve seat, using cutters such as Mira (P/N 9986045). Refer to manufacturer's instructions. Make sure that seat in cylinder head is not damaged.

Clean surfaces thoroughly.

F15

Measure diameter of seat recess in cylinder head and of valve seat

Use an internal micrometer to measure seat recess.

Standard

(production version)

Diameter, seat recess, mm (in)

intake 37.000–37.016 (1.4567–1.4573)

exhaust 33.000–33.016 (1.2992–1.2998)

Diameter, seat,

intake 37.090–37.105 (1.4602–1.4608)

exhaust 33.090–33.105 (1.3028–1.3033)

Oversize

(replacement parts version)

Diameter, seat recess, mm (in)

intake 37.200–37.216 (1.4646–1.4652)

exhaust 33.200–33.216 (1.3071–1.3077)


Diameter, seat,

intake 37.290–37.305 (1.4681–1.4687)

exhaust 33.290–33.305 (1.3106–1.3112)

When replacing valve seats: the interference between the valve seat and its bore in the cylinder head shall be **0.074–0.105 mm** (0.0029–0.0041 in) i.e. valve seat diameter must be 0.074–0.105 mm (0.0029–0.0041 in) greater than the diameter of the bore in the cylinder head. Replace cylinder head if interference is too small. Mill seat recess if interference is too large.

$D + (0,074-0,105 \text{ mm})$

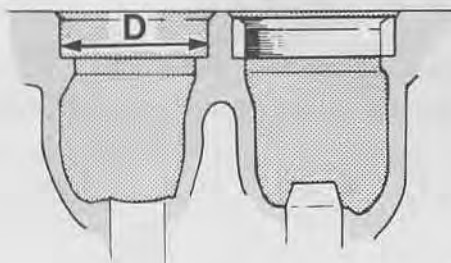

133815



Heat cylinder head

Heat to 100°C (212°F).

F16



Place new seat in installation tool

Use drift 5220 for intake valve seats and 5221 for exhaust valve seats.


F17

Cool valve seat

Wear protective gloves and safety glasses.

Use liquid carbon dioxide to cool seat down to -70°C (-94°F).

F18

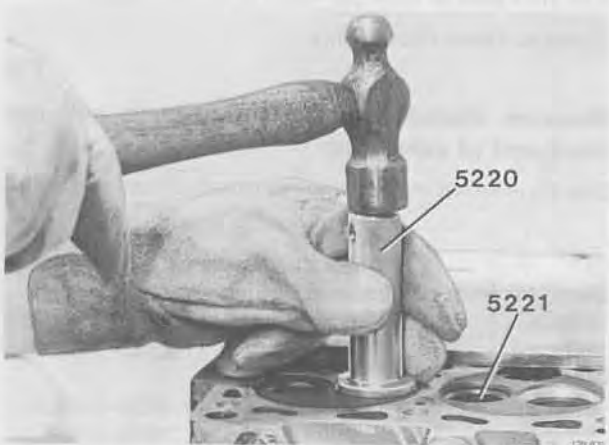

Tap-in valve seat

Note! This must be done quickly, within 3–4 seconds to avoid temperature loss.

F19

Check fit of valve seat

Make sure that the seat has bottomed correctly and is secure. If not, replace cylinder head.

F20


Grind valves and mill seats

See instructions on page 48, operations F9–12.

F21

G. Cylinder head, assembly

New cylinder head

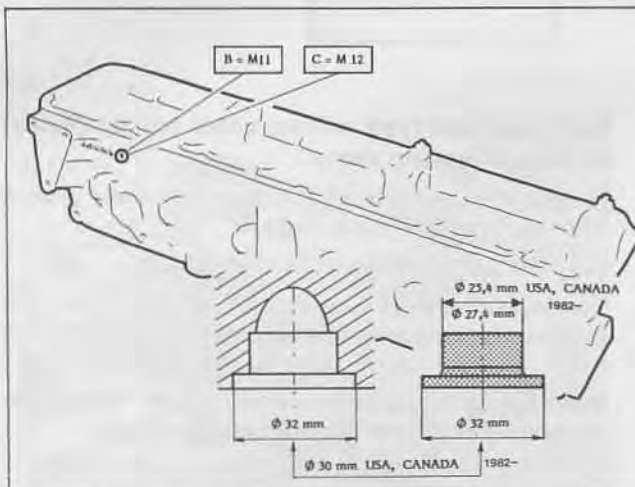


Important

- New cylinder head must be the same type as the old. Cylinder heads designed for use with M 12 bolts must not be used with M 11 bolts.

Cylinder heads can be identified as follows (see illustration at left):

- Number series followed by B = M 11
- Number series followed by C = M 12

- USA/Canada 1982- has a different type of cylinder head and swirl chamber. Swirl chamber and its bore is 2 mm (0.080 in) smaller in diameter than other types.

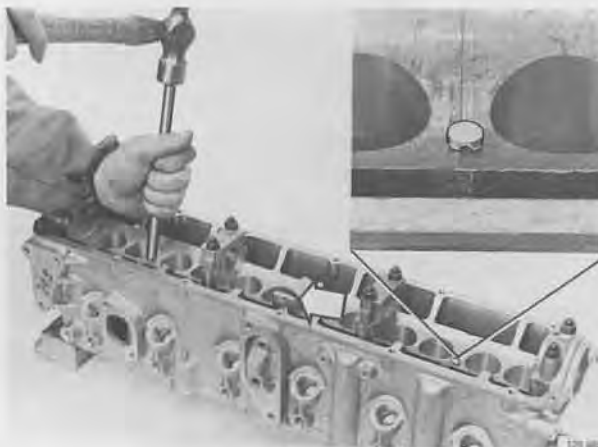

New cylinder head

Operation G1

G1


Install oil jets and pin studs in cylinder head

Carefully tap in oil jets using a brass punch.

Note! Turn outer jets to point across cylinder head, see fig.

Important! Check specification and type of cylinder head. M 12 bolts must not be used with M 11 bolts.

Different type cylinder heads are used for USA/Canada.

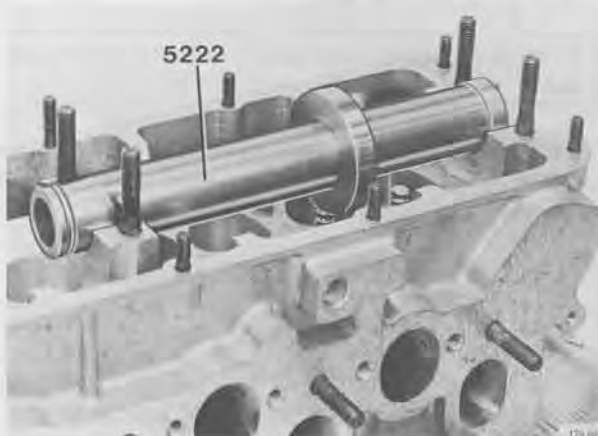

G2


Check valve stem position in relation to camshaft

This measurement is carried out to ensure that there is sufficient adjustment latitude for valves.

Place gauge **5222** with largest diameter ring, on cylinder head. (Small ring is for B17-B23 engines).

Note! Front bearing recess diameter is larger than others. Make sure that gauge is positioned correctly.


Taking each valve in turn, check that stem does not contact gauge. If this happens, grind valve stem.

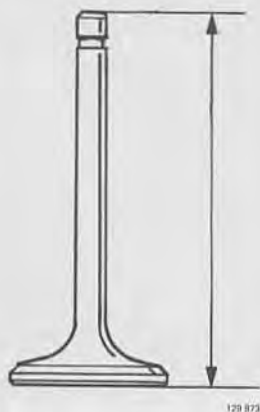

129 873

Valve length, mm (in)

	New	Min
Intake valve	104.8 (4.126)	104.3 (4.106)
Exhaust valve	104.6 (4.118)	104.1 (4.098)

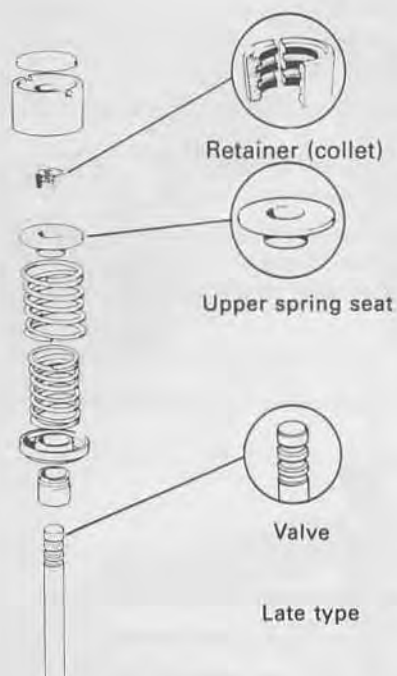

Late type

135006

G3

Early and late type valves, valve collets (locks) and upper spring seats

Early type valves and collets have one locking groove whereas late types have three.

Only late types are available as spare parts.

Consequently when installing a new valve, the collet and upper spring seat must also be replaced with new parts.

New spring seats are either copper coated or chromed. Early types are bright or black.

G4


Install:

– upper spring seats, flanged side up.


Install valve stem oil seal.

Protective sleeves must be used when installing oil seal.

To install valve, place valve in cylinder head and place protective sleeve on stem. Use tool **5219** to install oil seal, note that tool should abut flange seal.

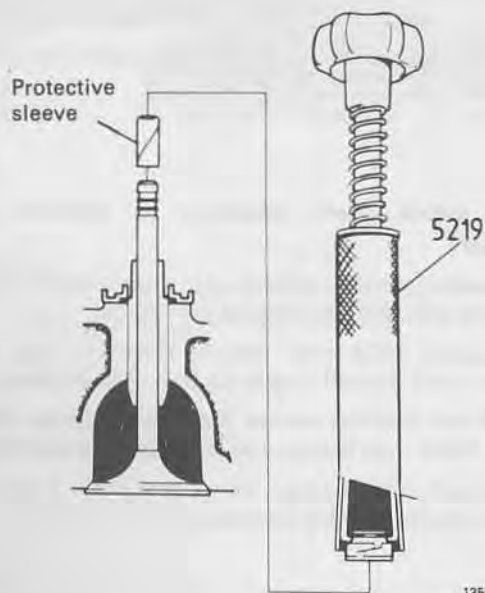

135569

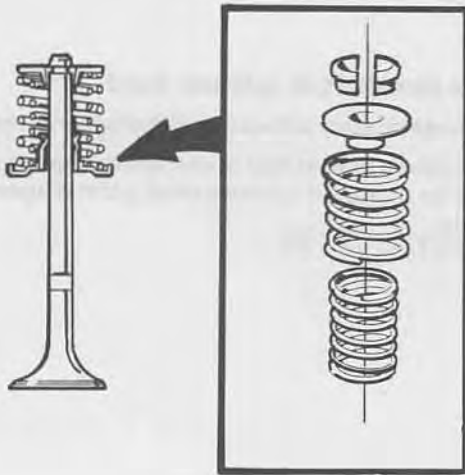

136 687

G5

Install:

- inner and outer valve springs
- upper valve seat
- retainer (collet).

Important! Two types of valves, upper spring seats and collets are in use.



139 982

G6


Install swirl chambers

Check that steel ball is in chamber.

If not, install new swirl chamber.

Make sure that ball fits in slot in cylinder head. Tap down swirl chambers.

Important! Special swirl chambers (different diameter) for USA/Canada 1982-.

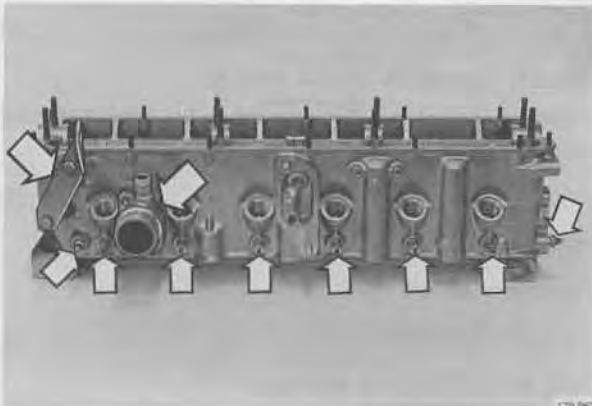

139 987

G7

Install:

- glow plugs. Tightening torque 40 Nm (30 ft lbs)
- temperature senders (2X). Same type front and rear
- connecting flange for coolant hose (Allen 5 mm). Install new gasket. Tightening torque 10 Nm (7 ft lbs).
- lifting eyes.



139 984


G8

Install tappets with discs

Smear tappets and discs with oil before installing.

Number on discs should face down.

Check that tappets slide easily without sticking.

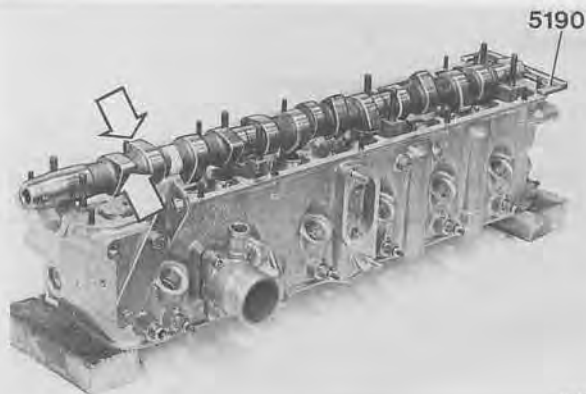


129 986

G9

Place camshaft in cylinder head

Lubricate contact surfaces of camshaft and bearings.

Place gauge **5190** at rear of camshaft. **Important!** Both cams for number 1 cylinder must point diagonally up, see fig.

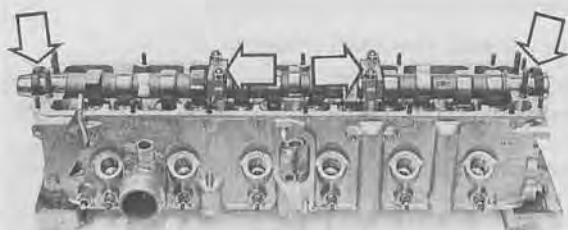

129 986

G10

Install camshaft caps 2 and 3

Install caps correctly, center is off-set.

Tighten nuts crosswise to avoid distortion. Hold camshaft in position with gauge **5190** at rear when tightening caps.

Remove gauge **5190**.

G11

Press in new camshaft oil seals

Lubricate seals.

Do not push in seals to bottom position. Make sure that seals are "square".

G12

Install camshaft caps 1 and 4

Make sure that the thrust washer for camshaft cap 4 sits correctly.

G13


Torque all four caps

Torque = **20 Nm** (15 ft lbs).

G14


Tap in oil seals to bottom

Use sleeve **5200** and a plastic mallet.

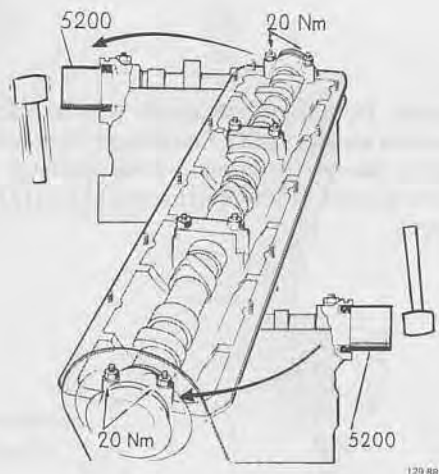

129 987

H. Cylinder head, installing

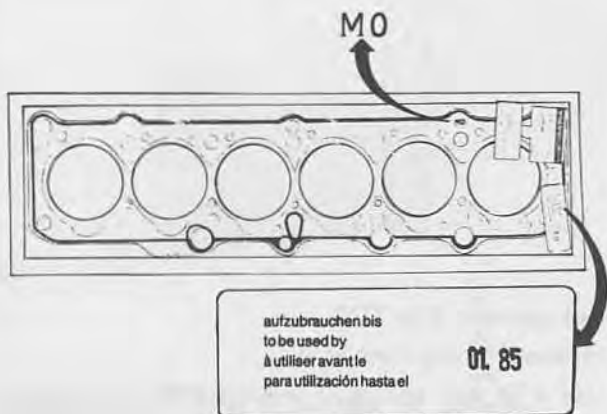

132978

Cylinder head gasket

Observe date code on gasket and packet. Gasket must be used before this date.

Only gaskets with code **M0** or later may be used on D 24 engines.

Date code

To avoid impairing sealing properties of gasket do not open packet until gasket is to be used.

Month	Jan	A
	Feb	B
	Mar	C
	Apr	D
	May	E
	June	F
	July	G
	Aug	H
	Sept	J
	Oct	K
	Nov	L
	Dec	M
Year	1980	0
		1
		2
		etc.

MO




128 148

Take care not to damage packet and cause damage to gasket, (teflon strip, rubber seal).

Install same type of gasket as before (i.e. same no. of notches), OBEN facing up.

If pistons, connecting rods etc. are replaced, piston height must be measured, and gasket chosen according to table on page 56.


Three different types of gaskets are available. Type to be fitted depends on piston height above cylinder block.

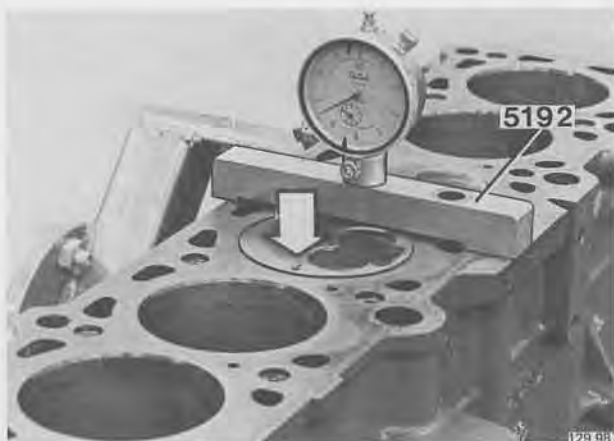

H1

Measure piston height above cylinder block and select gasket

Piston height above cylinder block mm (in)	Gasket	
	notches	thickness mm (in)
0.67-0.80 (0.026-0.031)	1	1.4 (0.055)
0.81-0.90 (0.032-0.035)	2	1.5 (0.059)
0.91-1.02 (0.036-0.040)	3	1.6 (0.063)

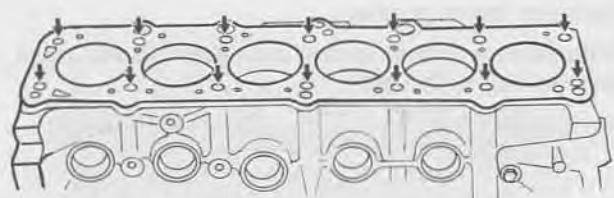


133523

H2

Clean holes for cylinder head bolts

Oil and dirt must be removed from holes otherwise gasket may leak as a result of insufficient tightening pressure.

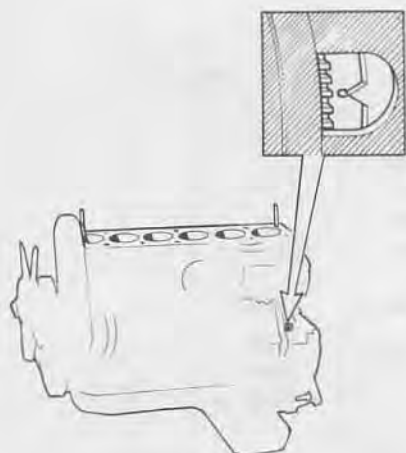


128165

H3

Set cylinder 1 to TDC

Flywheel timing mark at '0'.

Use a 27 mm socket or wrench 5188 on vibration damper center bolt to turn engine.

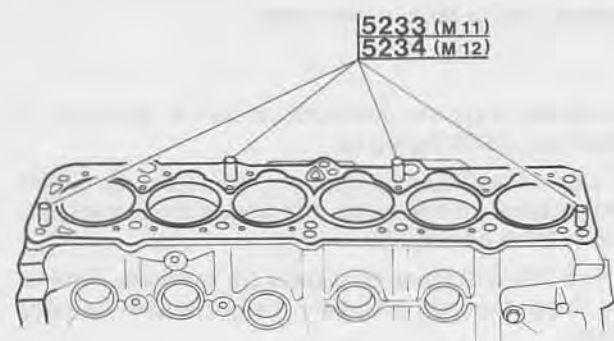

133524

H4

Install guide pins in cylinder block

5233 for blocks with M 11 bolts.

5234 for blocks with M 12 bolts.

Two outer pins on right side hold gasket in position. Cylinder head is prevented from sliding and damaging gasket by two inner pins on left.

Important! Use all four pins, located as illustrated.

H5

Install new cylinder head gasket

OBEN facing up.


H6

Position cylinder head

First set camshaft so that number 1 cylinder is at injection (both cam lobes should point diagonally upwards).

Prevent camshaft from moving with stop 5190.

Important! Camshaft must be locked otherwise valves may strike pistons.

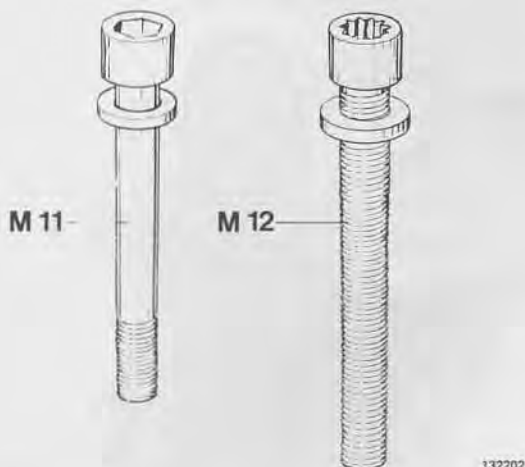

Cylinder head bolts

Two types of cylinder head bolts are in use.


Early type bolts have M 11 threads. These bolts can be reused with **new** washers. Fit washers with cup shape facing up.

Late type bolts have M 12 threads along entire length. These bolts **must not** be reused. Washers may however be reused.

H7


Install cylinder head bolts

Lubricate threads and sliding surface of washers. Place bolts in holes without guide pins.

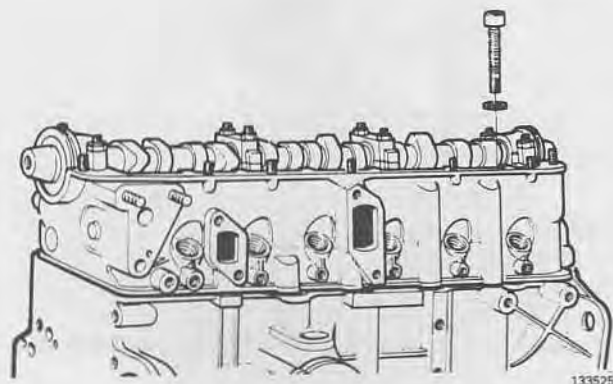


Remove guide pins. Use tool 5235.


Install remaining bolts.

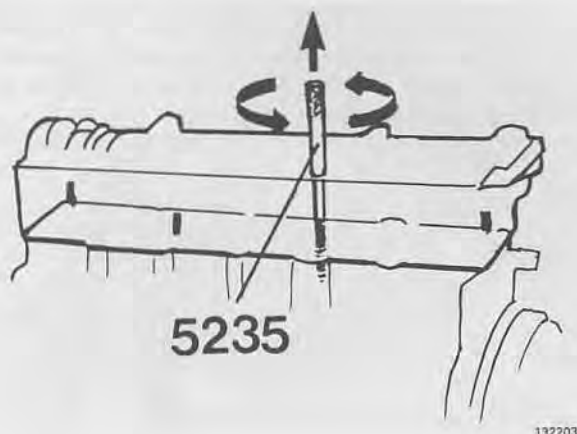

H8

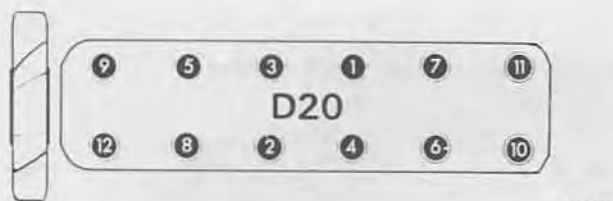

133537

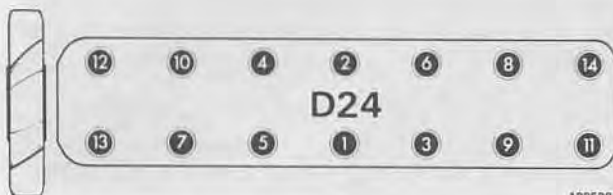

133538

Torque cylinder head bolts

Tighten all bolts one at a time in order specified adjacent before proceeding with next stage.



M 11 bolts

Allen key 10 mm

133529



1159082



M 12 bolts

12-sided wrench P/N 115 9082-5

133530

Tighten in three stages:


1. 50 Nm = 37 ft lbs
2. 70 Nm = 51 ft lbs
3. 90 Nm = 66 ft lbs

Tighten in four stages:

1. 40 Nm = 29 ft lbs
2. 60 Nm = 44 ft lbs
3. 75 Nm = 55 ft lbs
4. angle-tighten **180°** in one movement without stopping.


Important! Cylinder head bolts must be torqued again after the engine is warmed-up. Refer to specifications in front of manual for torque procedures to be used after engine has been run.

Important! Cylinder head bolts must be torqued again after the engine is warmed-up. Refer to specifications in front of manual for torque procedures to be used after engine has been run.

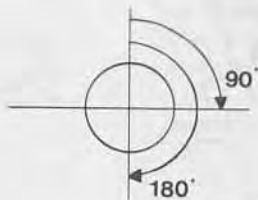

137 158

J. Assembly

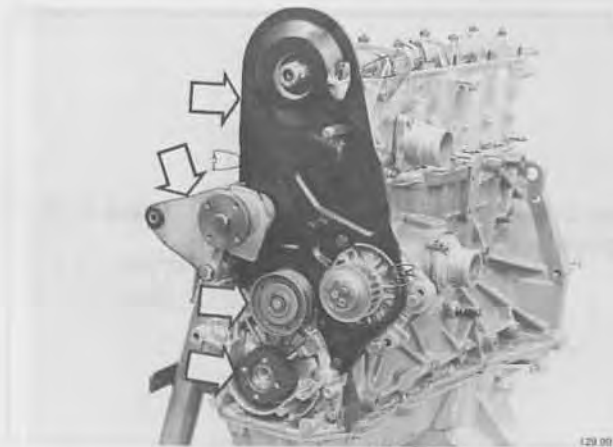


TIMING GEAR

J1

Install


- cover plate. Do not tighten coolant pump mounting bolts fully at this stage
- fan/alternator mounting bracket
- idler pulley. Tap pulley into position and install center bolt
- crankshaft gear.

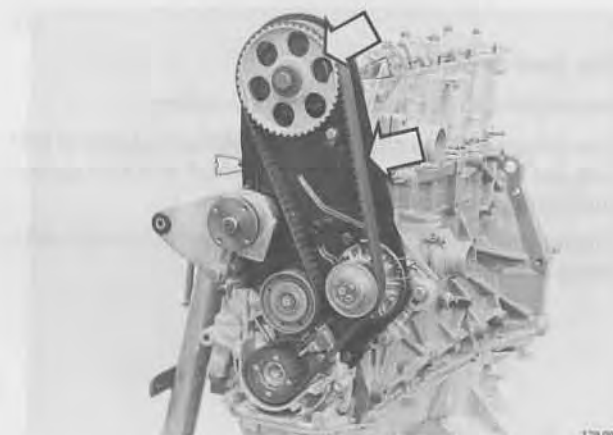

J2

Install camshaft front sprocket and gear belt

Ensure that belt sits correctly on all gears. Tighten center bolt by hand, it should be possible to turn sprocket on camshaft.

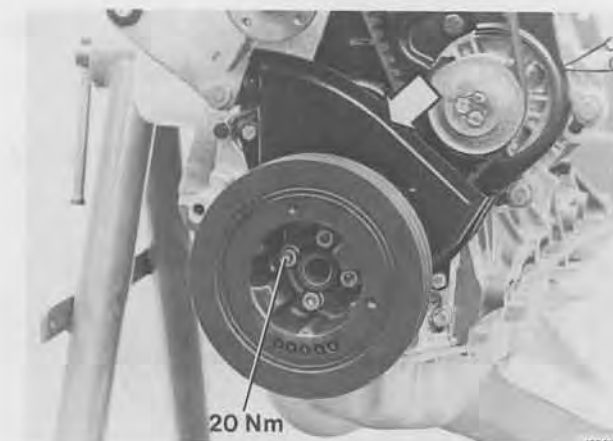


J3

Install lower timing gear cover and vibration damper

Damper can only be fitted in one way. Pin on crankshaft must fit in vibration damper.

Torque inhex bolts to 20 Nm (15 ft lbs).

J4

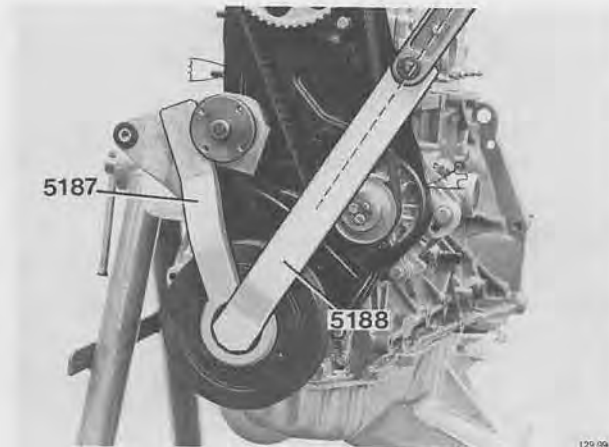


Install center bolt

Smear threads and mating surface with sealer P/N 277961-9.


Use wrench **5187** (rest on cooling fan journal) to hold vibration damper and wrench **5188** to torque center bolt to **350 Nm** (255 ft lbs).

Important! Torque 350 Nm (255 ft lbs) applies only if wrench 5188 is used. Also, torque wrench must be in line with wrench 5188.

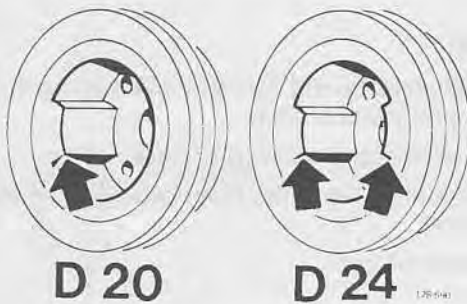

Note! Different vibration dampers for D 20 and D 24 engines.

J5

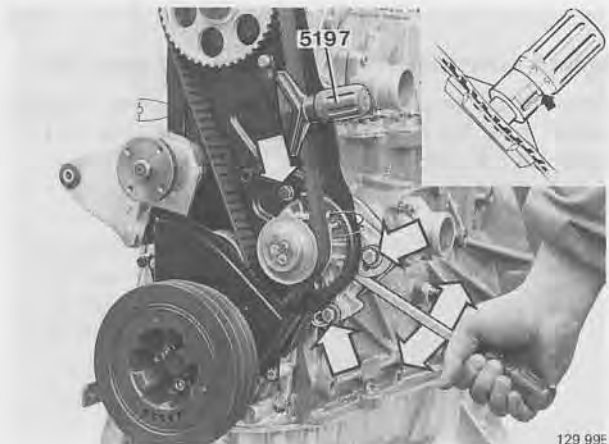


Set belt tension

Adjust tension by moving coolant pump.

Use gauge **5197** to check tension. Attach gauge to belt and set to **12.5** units. Stretch belt until mark on gauge plunger is flush with sleeve.

Tighten mounting bolts. Depress belt strongly with hand and recheck/adjust tension.


J6

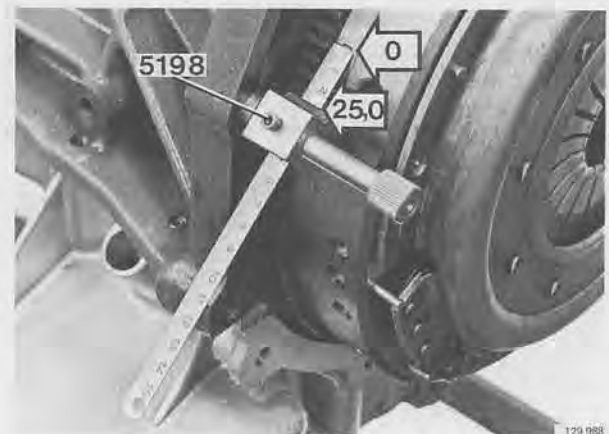

Check that cyl. 1 is at TDC – injection

Use tool **5198**. Set gauge to 25.0.

Zero mark on flywheel should coincide with zero of ruler. Adjust if necessary.

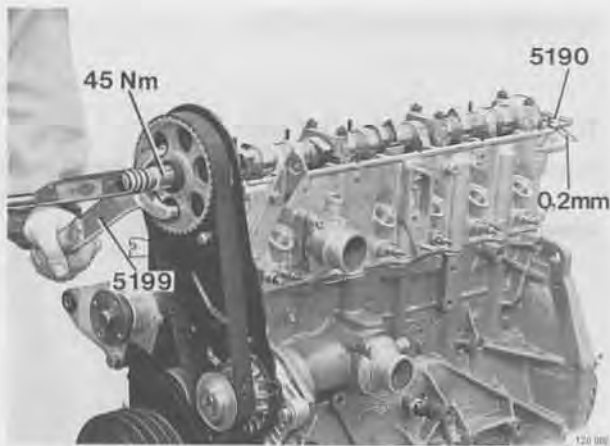**Lock camshaft in O-position**

Place gauge **5190** at rear of camshaft. Insert a **0.2 mm** feeler gauge beneath left side of gauge to compensate for timing gear clearance.

J7

Tighten camshaft front sprocket and remove gauge 5190

Use **5199** to prevent sprocket from turning.

Torque center bolt to **45 Nm** (33 ft lbs).

Remove gauge **5190** and feeler gauge.


J8

**Valve adjustment
Operations J9-17****Turn engine until cyl. 1 is at TDC – injection**

Always use vibration damper center bolt to turn engine. (27 mm socket or wrench **5188**).

Both cylinder 1 cams should point obliquely upwards.


J9

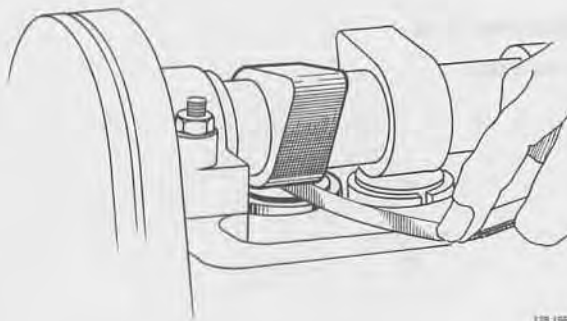**Check valve clearance for cyl. 1****Checking values**


	mm	in
Cold engine		
Intake	0.15–0.25	0.006–0.010
Exhaust	0.35–0.45	0.014–0.018
Warm engine		
Intake	0.20–0.30	0.008–0.012
Exhaust	0.40–0.50	0.016–0.020

If the clearance is according to the above values it does not need to be adjusted.

J10

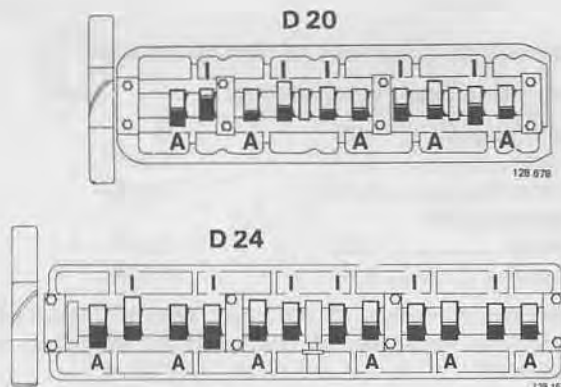

I = intake valve
A = exhaust valve

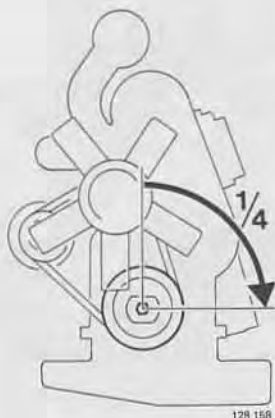


Incorrect clearance (J11-15)

J11

Turn engine approx. 1/4 turn


Piston must not be at top dead center when setting valve clearance, otherwise valves will contact piston when tappet is depressed.

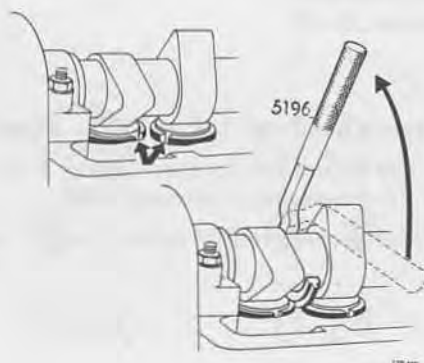

J12

Depress tappets


Turn tappets until grooves point slightly inward. Using tool 5196, depress tappets to obtain access to disc.

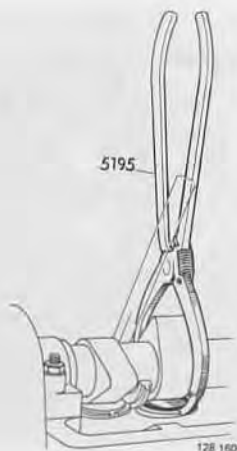

J13

Remove disc

Use 5195.

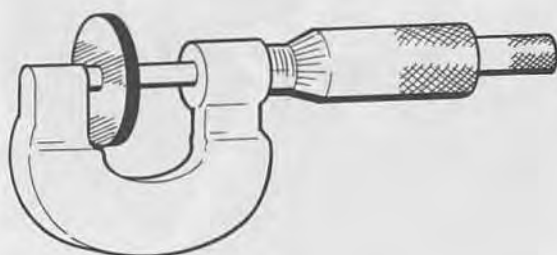

J14

Calculates thickness of disc to be used

Valve clearances when setting:

	mm	in
Cold engine		
Intake	0.20	0.008
Exhaust	0.40	0.016
Warm engine		
Intake	0.25	0.010
Exhaust	0.45	0.018

Measure thickness of cold disc with a micrometer. Calculate thickness of new disc to be used, see overleaf.




Example	mm	in
Measured valve clearance	0.20	0.55
Specified valve clearance	0.25	0.45
	-0.05	+0.10
Thickness, old disc	4.00	4.00
	-0.05	+0.10
Thickness, new disc	3.95	4.10

Always use new discs. Disc thicknesses available = 3.00–4.25 mm at increments of 0.05 mm.

J15

Position new disc and remove pliers

Disc should be lubricated and installed with numbers facing down.

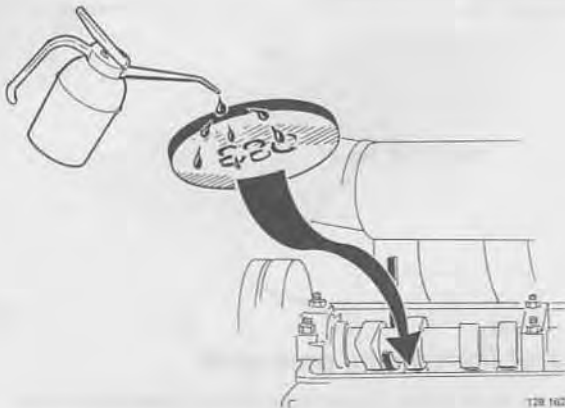


J16

Check/adjust valve clearance for remaining cylinders in following order

D 20, 1-2-4-5-3

D 24, 1-5-3-6-2-4

Important! Do not forget to rotate crankshaft 1/4 turn before check/adjusting valve clearance.

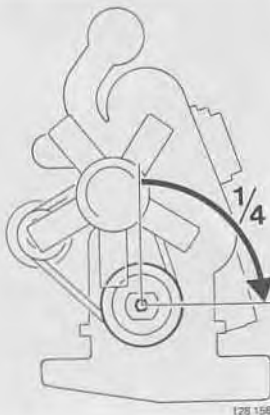

J17

Recheck valve clearance for all cylinders

Rotate engine several turns before rechecking.

J18


Turn engine until cyl. 1 is at TDC – injection

Both cyl. 1 cams should point obliquely upwards.


Use tool 5198.

Set gauge to 25.0.

Zero mark on flywheel should coincide with zero of ruler. Adjust if necessary.

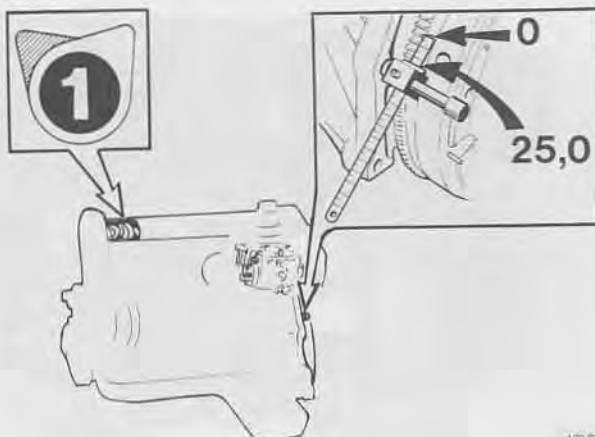

J19

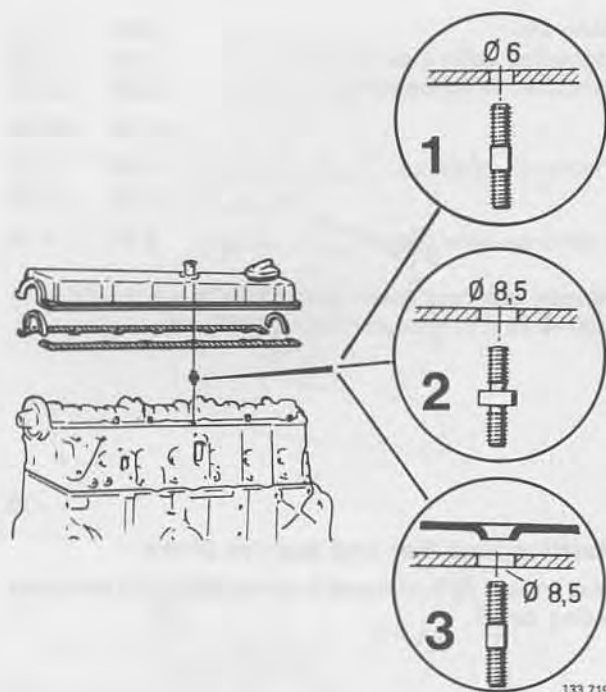

Install valve cover

If necessary install new gaskets.

Three different types of assemblies are in use:

Type 1.

Pin stud without spacer, gasket stud hole = 6 mm (0.24 in) diameter.

Type 2.

Pin stud with spacer, gasket stud hole = 8.5 mm (0.33 in) diameter.

Type 3.

Pin stud without spacer, stud holes in valve cover are countersunk, gasket stud hole diameter = 8.5 mm (0.33 in) diameter.



J20

Install front timing gear cover

Check both timing gear covers for loose parts etc.

K. Installing parts on engine



K1


Install injectors

Place new heat shields in cylinder head. Turn shields as illustrated.

Screw in injectors. Torque to **70 Nm** (50 ft lbs).

Reconnect fuel delivery lines between injectors.

It is advisable to check condition of injectors when reconditioning cylinder head. See instructions in service manual section 2(23-29) D 20, D 24 engines.

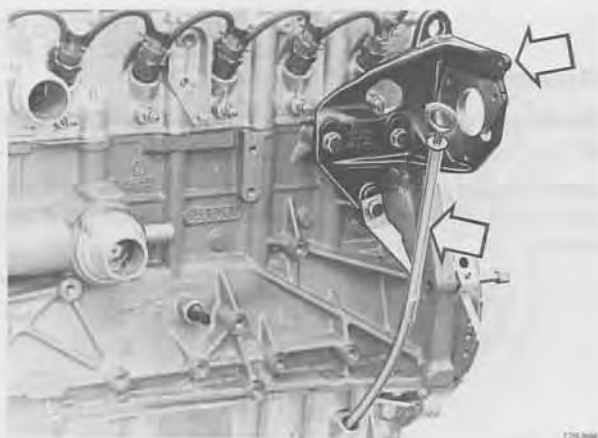

K2

Install pump rear mounting bracket and dipstick + tube

Slide pump bracket to the upper position and tighten one of the bolts.


Install a new O-ring on oil tube.




K3

Install:

- copper connectors + leads between glow plugs. Do not screw on nut on number 2 glow plug since wiring harness is secured by this nut at a later stage.
- mounting bracket for fuel filter
- fuel filter and base.

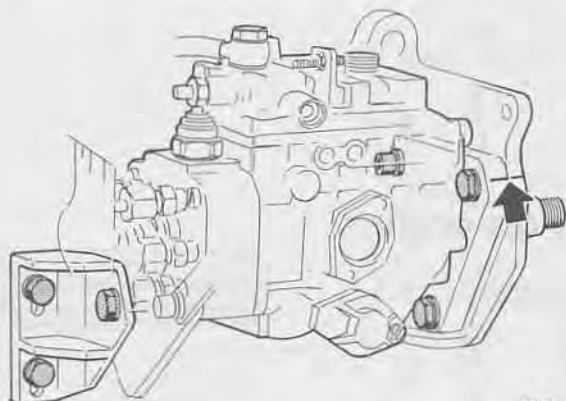

128 182

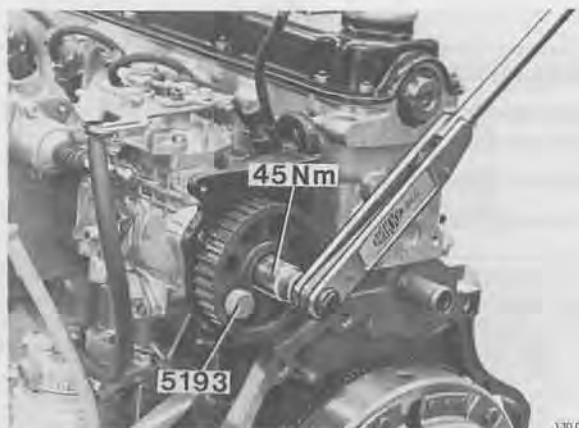

130 030

INJECTION PUMP

Removing/installing
Operations K4–14

K4

Position injection pump

Mount pump on engine and secure it with retaining bolts and front mounting bracket. Do not tighten bolts fully at this stage.

Align mark in pump with mark in mounting bracket. Then tighten retaining bolts for pump – mounting brackets.

K5

Install pump gear

Note! Be sure to place key in pump shaft. Install gear, washer and nut.

Torque nut to **45 Nm** (33 ft lbs).


Use **5193** to hold sprocket and **5201** to tighten nut.

K6

Disconnect cold start device

Slacken screw 1. Push lever forward and rotate sleeve 90°.

Note! Do not turn screw 2, otherwise it will be necessary to remove cold start device and reset it on a test bench.

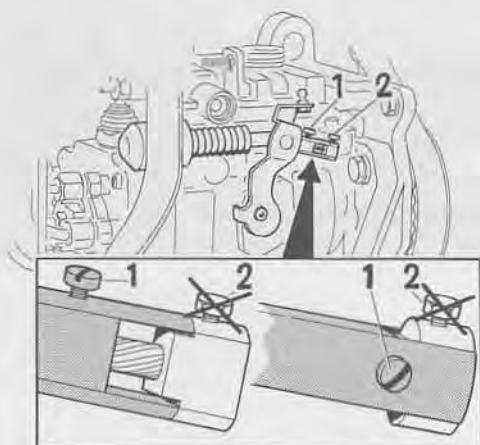

128 188

Connected Disconnected

K7

Set dial indicator to zero


Lock pump gear at cyl. 1 injection using stop 5193

Unscrew and remove plug from injection pump distributor.


Install holder **5194** and dial indicator (measuring range 0–3 mm). Set gauge to approx. 2 mm.

Turn pump gear clockwise until mark on gear and mounting bracket coincide.

Continued overleaf

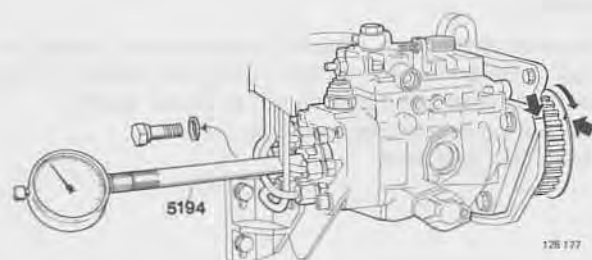

128 177

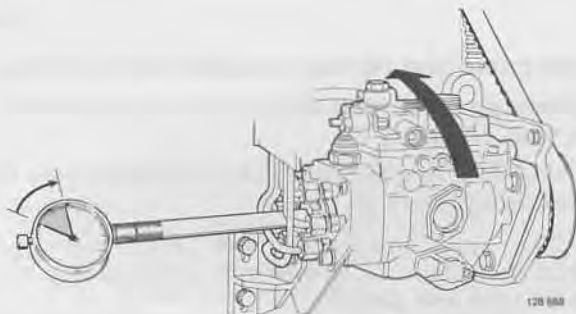

Then turn pump gear back slightly until min reading registers on dial indicator. Set indicator to zero.


Turn pump gear clockwise until mark on gear and pump mounting bracket coincide. Lock gear in this position with stop **5193**. (Insert stop through pump gear into mounting bracket.)



K8

Install camshaft rear sprocket and timing belt

Tighten center bolt by hand, it should be possible to turn sprocket on camshaft.

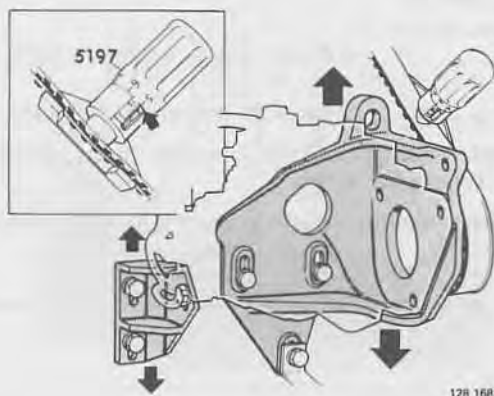

K9

Set belt tension

Adjust tension by moving injection pump.

Use gauge **5197** to check tension. Attach gauge to belt and set to **12.5** units. Stretch belt until mark on gauge plunger is flush with sleeve.

Tighten mounting bolts. Depress belt strongly with hand and recheck/adjust tension.

Altitude adjustment USA only (Vehicles up to 1983)

Legal requirement

Environmental Protection Agency (EPA) defines:



– high altitude as an elevation exceeding 1219 metres (4000 ft)

New vehicles sold for principal use at high altitudes must be adjusted before being delivered to the customer. After adjustment a decal must be affixed to the firewall (beside the emissions information decal) and also to the injection pump.

The following adjustment must be made to vehicle for use at high altitudes:

Injection timing: advanced 0.07 mm (0.0028 in) for every 1000 m (3300 ft) increase in altitude.

Injected quantity decreased by 2.3 mm³ for each 1000 metre increase in altitude. This is equivalent to turning adjustment screw 35° anticlockwise.

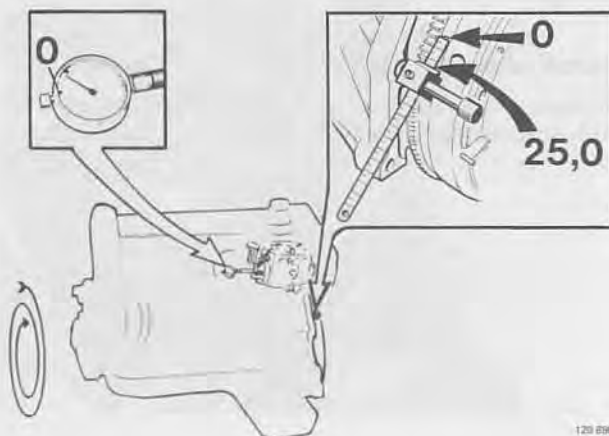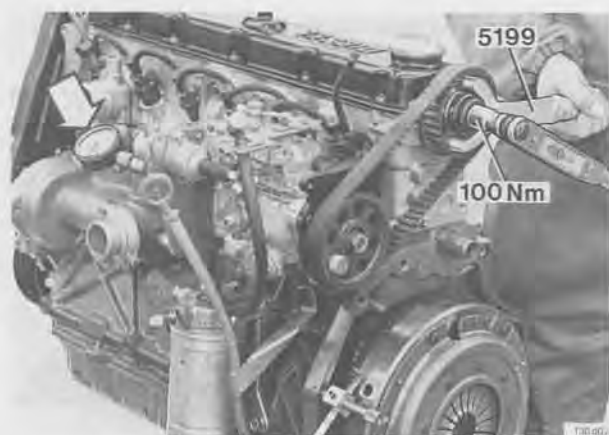

K10

Set pump and tighten camshaft rear sprocket

Check that ruler 5198 is set at 25.0 and that flywheel 'O' is flush with ruler 'O'.

Using 5199, turn sprocket slowly clockwise until dial indicator shows:

D 20	0.80 mm	(0.0315 in)
D 24	0.70 mm	(0.0276 in)
D 24 USA and Canada		
1979-1981	0.70 mm	(0.0276 in)
1982-	0.85 mm	(0.0335 in)

Hold sprocket in this position and torque bolt to 100 Nm (73 ft lbs). Take care that camshaft and sprocket do not move.

K11

Remove stop 5193 from pump gear

K12

Check pump setting

Turn engine two full turns until cyl. 1 is at TDC – injection, again. If engine is turned too far it must be turned back approx. 1/4 turn and then to zero mark otherwise setting will be incorrect.

Dial indicator should show:

D 20	0.75–0.83 mm	(0.0295–0.0327 in)
D 24	0.65–0.73 mm	(0.0256–0.0287 in)
D 24 USA and		
Canada 1979-		
1981	0.65–0.73 mm	(0.0256–0.0287 in)

1982-	0.82–0.90 mm	(0.0323–0.0354 in)
-------------	--------------	--------------------

Correct reading: Tighten injection pump mounting bolts. Proceed to K13.


Incorrect reading: Readjust according to instructions below.


Readjusting pump setting:

D 20	0.80 mm	(0.0315 in)
D 24	0.70 mm	(0.0276 in)
D 24 USA and Canada		
1979-1981	0.70 mm	(0.0276 in)
1982-	0.85 mm	(0.0335 in)

Reading less than specified:

Slacken pump mounting bolts and turn pump **inwards** to obtain correct value. Tighten mounting bolts and repeat check of pump setting.

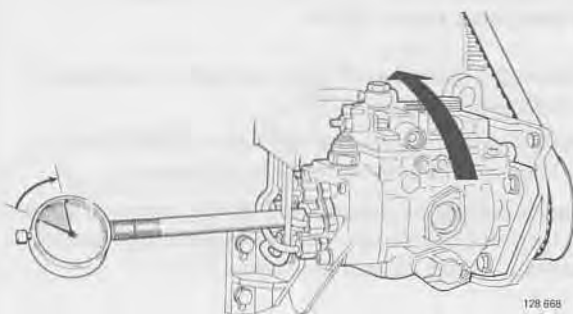

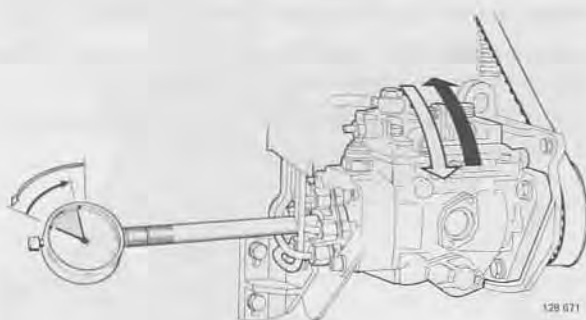

128 671

Reading more than specified:

Slacken pump mounting bolts and turn pump **outwards** until dial indicator shows **approx**:

D 20	0.70 mm	(0.0276 in)
D 24	0.60 mm	(0.0237 in)
D 24 USA and Canada 1979- 1,3-1,61981	0.60 mm	(0.0237 in)
1982-	0.75 mm	(0.0295 in)


Then turn pump **inwards** until specified value is obtained. Tighten mounting bolts and recheck pump setting.

Important! Injection pump must not be tapped or knocked as this will alter its setting.

K13

Remove dial indicator and holder 5194. Install plug with new seal.

Tightening torque 9 Nm (6.5 ft lbs).

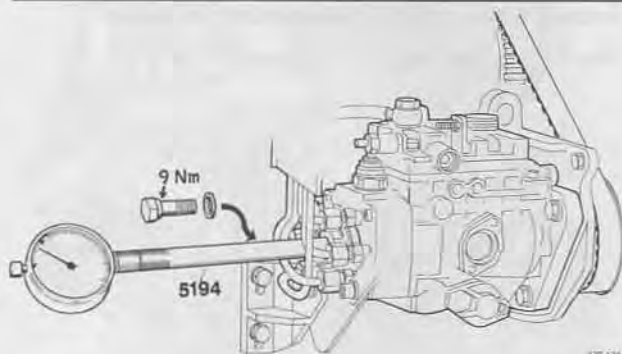


128 174

K14

Install cold start device

Press lever forward and turn sleeve 90°. Retighten screw 1.

Note! Do not turn screw 2, otherwise it will be necessary to remove cold start device and reset it on a test bench.

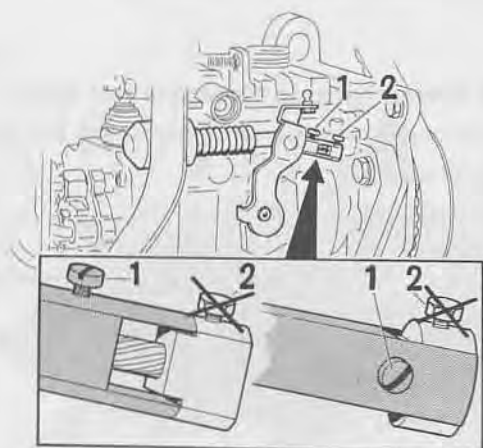

128 189

Connected

Disconnected


K15

Remove ruler 5198 from cylinder block rear

K16

Install:

- delivery pipes. Tightening torque 25 Nm (18 ft lbs)
- supply lines to pump. Tightening torque 25 Nm (18 ft lbs)
- return line from rear injector to pump.
- rear timing gear cover. (Do not install nut on pump bracket stud since wiring harness must be attached at a later stage).

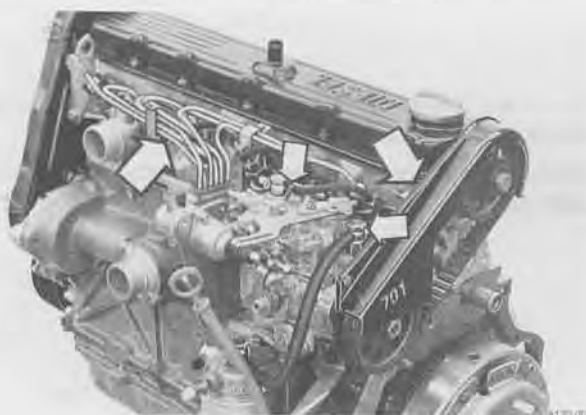

A130 001




K17

Install pump plunger and vacuum pump

Lubricate plunger. Install plunger in same position as before (check wear marks on end of plunger).

Install new O-ring on vacuum pump. Apply sealer to O-ring.

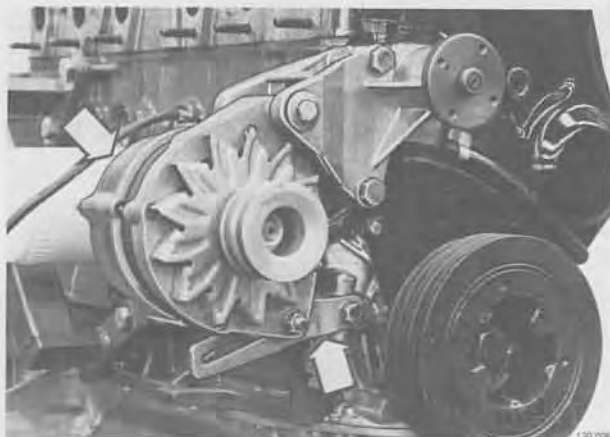

K18

Install alternator and adjusting bracket

Do not tighten retaining bolts at this stage.




K19

Attach wiring harness to engine left side

Clamp wiring harness beneath thermostat housing.

Reconnect wiring.

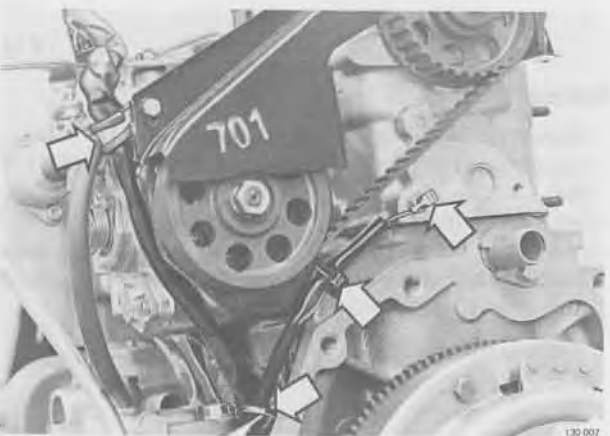

Tie wiring harness to holder for oil tube and at rear of cylinder block as illustrated.

Clamp wiring harness to retaining bolt for rear timing gear cover.



K20


Attach wiring harness to engine right side

Clamp wiring harness to lower edge of cylinder block.

Connect wires to alternator as follows:

- thick red to B+
- thin red to D+


Slide plastic cover over B+ wire.

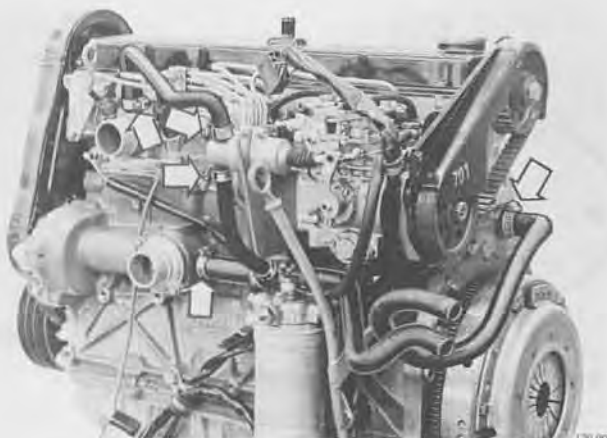

K21

Reconnect coolant hoses to:

- rear of cylinder block
- thermostat housing
- cold start device
- connector on cylinder head.

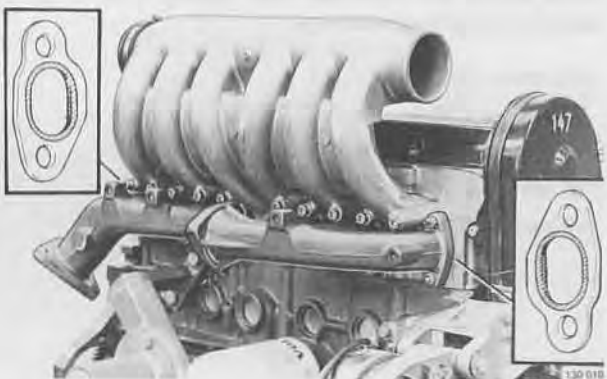

K22

Install exhaust manifold

Install new gaskets and use new nuts for exhaust manifold.

Gasket must be turned with raised edge outwards, facing manifold.

Tightening torque 25 Nm (18 ft lbs).

K23

Install intake manifold

Install new gasket. Turn gasket with green side facing cylinder head.



Apply sufficient oil to gasket so that it remains attached to cylinder head.

Tightening torque 25 Nm (18 ft lbs). Allen = 6 mm.


K24

Remove engine from stand

Lower engine to floor, but leave most of the weight on the lifting tool.

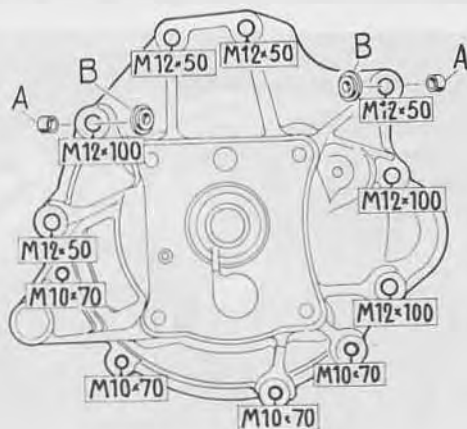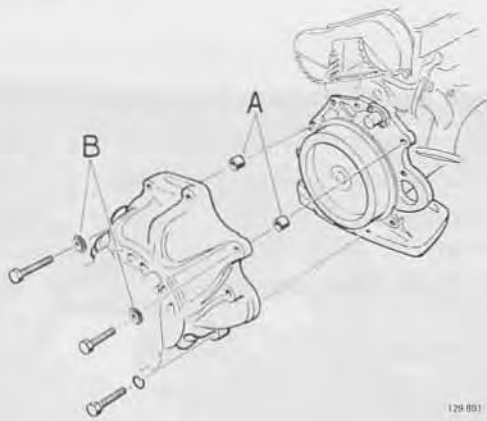

Manual gearbox

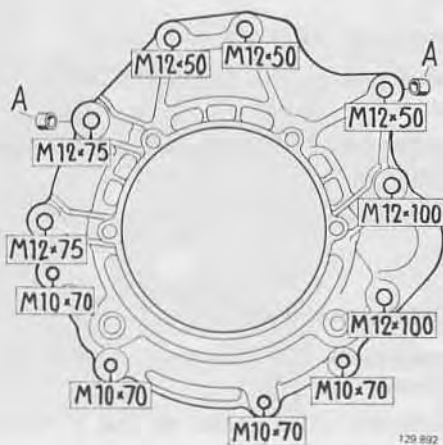

Automatic gearbox

K25

Install gearbox and starter motor

Check that guide pins are installed.

Note different bolt sizes and bolt lengths, see fig.

Manual gearbox: install washer (B = 4.5 mm thick) on bolts which are installed with spacer (A). All other bolts have spring washers.

4.5 mm	= 0.18 in
50 mm	= 1.97 in
70 mm	= 2.75 in
75 mm	= 2.95 in
100 mm	= 3.94 in



K26

Reconnect wires to starter motor

Connect two thick red wires to starter motor and blue/yellow wire to solenoid.

K27

Attach right engine mount**Install engine**


Refer to appropriate manual for installation procedure.

Important! Cylinder head bolts must be retorqued after the engine is warmed-up. Follow the procedure below:

1. Run engine until the oil temperature is at least 50°C/ (122°F).
2. **M 11 bolts:** torque bolts to 90 Nm (66 ft lbs).

M 12 bolts: angle-tighten bolts 90° in one movement without stopping. Do not slacken bolts first.

After driving 1000–2000 km (600–1200 miles) the cylinder head bolts must be torqued again.

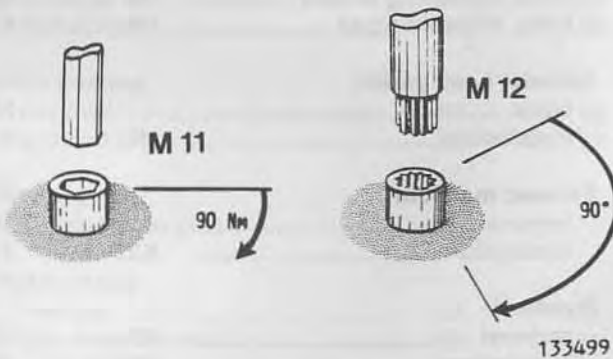

Index

	Operation	Page		Operation	Page
Altitude adjustment (USA)		67	Cylinder head		
Big end bearings			removal	B6	25
see connecting rod bearings			disassembly	E1-11	43
			cleaning, checking	F1	46
Camshaft oil seals			warp	E1	43
installation	G11-14	54	oil jets, installation	G1	51
Camshaft sprocket, front			assembly	G1-14	51
removal	B2	24	installation	H1-8	55
installation	J2	59	bolts, tightening torque	H8	58
			bolts, different types	H6	57
Camshaft sprocket, rear			Cylinder head gasket		
removal	B2	24	types	-	55
installation	K8	67	installation	H5	57
Camshaft			Exhaust manifold		
removal	E1-5	43	removal	A3	19
end float	F2	46	installation	K22	71
installation	G9-13	54	Flywheel		
oil seals	G11-14	54	removal	B7	26
Clutch			installation	D23	40
removal	B7	26	ring gear, replacement	C21-22	34
installation	D24	40	Gudgeon pins		
Connecting rod bearings			removal	C6	31
removal	B14-17	27	fit, in piston	C10	32
installation	D12-16	38	fit, in conrod	C13	32
Connecting rods			installation	D9	37
axial clearance	B13	27	Injection pump		
removal	B16-17	28	removal	A12-14	22
disassembly, piston-conrod	C6	31	installation, setting	K4-14	66
stud replacement	C14-15	32	checking	K12	68
bush replacement	C16-17	33	Injection pump belt		
inspection	C20	34	removal	A12	22
assembly, piston-conrod	D9	37	installation	K8	67
installation	D12-18	38	tension	K9	67
Crankshaft			Injection pump gear		
removal	B18	28	removal	A13	22
inspection	C2	29	installation	K5	66
installation	D3	36	Injectors		
end float	D5	37	removal	B5	25
Crankshaft oil seal			installation	K1	65
rear, removal	B8	26	Intake manifold		
installation	D7	37	removal	A3	19
front, removal	B10	26	installation	K23	71
installation	D20	39	Main bearings		
Crankshaft pulley			removal	B18	28
removal	B3	24	installation	D1-4	36
installation	J1	59			
Cylinder bore	C3	29			

	Operation	Page		Operation	Page
Oil filter			Swirl chambers		
removal	B11	27	removal	E8	45
installation	D30	42	installation	G6	53
Oil jets (in cylinder head)			Tappets		
installation	G1	51	inspection	F4	47
Oil pump			installation	G8	53
removal	B12	27	Timing gear belt		
disassembly/reassembly	C23-28	34	removal	B1	24
inspection	C25	35	installation	J2	59
installation	D19	39	tension	J5	60
Oil strainer			Valves		
removal	B12	27	removal	E9	45
installation	D22	40	grinding	F9-12	48
Pilot bearing			checking/grinding stem	G2	51
removal	B9	26	installation	G4-5	52
installation	D6	37	clearance	G9-17	61
Piston pins			types	G3	52
see gudgeon pins			Valve cover gasket		
Piston rings			types	J19	64
removal	C5	31	Valve discs (shims)		
gap measurement	C11	32	checking	F3	46
axial clearance	C9	31	installation	G8	53
installation	D10-11	38	Valve guides		
Pistons			clearance, guide-valve	F1	46
removal	B16-17	28	replacement	F6-8	47
disassembly, piston-conrod	C6	31	oil seals, removal	E10	45
diameter	C4	30	installation	G4	52
assembly, piston-conrod	D9	37	Valve seats		
installation	D12-17	38	grinding	F9-12	48
lift height	H1	56	replacement	F13-21	49
Pressure plate			Valve springs		
removal	B7	26	removal	E9	45
installation	D25	41	checking	F5	47
Ring gear			installation	G5	53
replacement	C21-22	34	Vibration damper		
Sump			removal	A6	20
removal	B12	27	installation	J3	59
installation	D22	40			

Page	Page	Page	Page
101	102	103	104
105	106	107	108
109	110	111	112
113	114	115	116
117	118	119	120
121	122	123	124
125	126	127	128
129	130	131	132
133	134	135	136
137	138	139	140
141	142	143	144
145	146	147	148
149	150	151	152
153	154	155	156
157	158	159	160
161	162	163	164
165	166	167	168
169	170	171	172
173	174	175	176
177	178	179	180
181	182	183	184
185	186	187	188
189	190	191	192
193	194	195	196
197	198	199	200
201	202	203	204
205	206	207	208
209	210	211	212
213	214	215	216
217	218	219	220
221	222	223	224
225	226	227	228
229	230	231	232
233	234	235	236
237	238	239	240
241	242	243	244
245	246	247	248
249	250	251	252
253	254	255	256
257	258	259	260
261	262	263	264
265	266	267	268
269	270	271	272
273	274	275	276
277	278	279	280
281	282	283	284
285	286	287	288
289	290	291	292
293	294	295	296
297	298	299	300
301	302	303	304
305	306	307	308
309	310	311	312
313	314	315	316
317	318	319	320
321	322	323	324
325	326	327	328
329	330	331	332
333	334	335	336
337	338	339	340
341	342	343	344
345	346	347	348
349	350	351	352
353	354	355	356
357	358	359	360
361	362	363	364
365	366	367	368
369	370	371	372
373	374	375	376
377	378	379	380
381	382	383	384
385	386	387	388
389	390	391	392
393	394	395	396
397	398	399	400
401	402	403	404
405	406	407	408
409	410	411	412
413	414	415	416
417	418	419	420
421	422	423	424
425	426	427	428
429	430	431	432
433	434	435	436
437	438	439	440
441	442	443	444
445	446	447	448
449	450	451	452
453	454	455	456
457	458	459	460
461	462	463	464
465	466	467	468
469	470	471	472
473	474	475	476
477	478	479	480
481	482	483	484
485	486	487	488
489	490	491	492
493	494	495	496
497	498	499	500



VOLVO SUPPORTS VOLUNTARY
MECHANIC CERTIFICATION
BY THE N.I.A.S.E.

(U.S.A. only)

Service literature

*Your
most important
special tool*

VOLVO

TP 30224/2 US
UK/USA
6000. 05.83
PRINTED IN USA