

OWNER'S MANUAL VOLVO 164

Notice to Owner: Your Volvo has been built to comply to all North American safety and anti-pollution regulations and evidence of this can be seen from the certification label attached to the door opening sheet metal and on the firewall in the engine compartment. For further information regarding these regulations, please talk to your selling dealer.

Personal Information	Nearest Volvo Dealer	Car Information
Name	Name	Type Designation
Address	Address	Chassis No.
Tel. No	Tel. No	Engine No
Driving License No	Garage Manager	License Plate No
Insurance Company	Tel. No	Ignition Key No
Insurance Policy No.		Door Key No

VOLVO 164

Operating Instructions Description Servicing



AB VOLVO · GÖTEBORG, SWEDEN

Reproduction permitted if source quoted



This manual covers all the variants of the Volvo 164, 1973 model.

Before you start driving your new Volvo please read through this manual carefully. It contains all the information you need to be able to drive and service your vehicle in the best possible way. By following the instructions given in this manual you will find that your Volvo will come up to all the expectations concerning economical operation and excellent performance that you have every right to expect of a top-quality vehicle.

This is not intended to be a comprehensive technical manual and does not claim to make the reader a perfect car mechanic. It will, however, show you how to look after your vehicle so that trouble in the future can be avoided. The better you know your Volvo, the better service it can give you. Even for an experienced motorist it can contain some valuable information.

For a more detailed mechanical description and repair procedures, we refer you to the special Service Manual for the car which can be purchased from the dealer.

39

40 42

43

46 51

56

56

56

57

59

61

61 72

63

FOREWORD

INTRODUCTION

Volvo Service Organization Warranty and Service Booklet Service Inspections Type Designations

OPERATING INSTRUCTIONS

Instruments and controls Interior and body Starting and driving Running-in Starting the engine Shifting Towing Braking

TECHNICAL DESCRIPTION

Engine compartment	
Engine	
Power transmission	
Front end and steering	
Electrical system	
Brakes	

General Maintenance schedule Lubrication Oil changes Engine Electrical system Power transmission 4 Brakes 4 Front end 4 Wheels and tires 5 Body Long-distance trip Cold weather Lubricating chart FAULT TRACING When the engine stalls 6 SPECIFICATIONS Measurements and weights

SERVICING

2

32

35 36

38

16 22 22 64 23 64 Engine 24 65 Electrical system 27 66 Power transmission 28 Front wheel alignment 67 67 Wheels and tires 67 Capacities Tools 67 CONSUMER INFORMATION 68 29 30

WHEN FILLING THE TANK

3

74

76

INTRODUCTION



Volvo Service Organization

To get the most out of the invested capital represented by a car, it must be looked after and serviced regularly. Volvo has gone to a great deal of trouble in the design and selection of material to ensure that the car in question only requires a minimum of servicing. We rely, however, on your co-operating with regard to the future maintenance of your vehicle. To help you with this, Volvo has built up a world-wide service organization. All Volvo dealers have specially trained personnel and receive a continuous supply of technical information from the Volvo Service Organization concerning repairs and adjustments. They also have special tools, designed at the Volvo factory. Moreover, all Volvo dealers have a comprehensive stock of parts which is a guarantee that the part you get is genuine Volvo. That is why our

dealers are in the best possible position to give your vehicle first-class service concerning both maintenance operations and repairs. You should also refer to your dealer for any information about your Volvo that is not included in this manual.

Volvo not only has a workshop within easy reach in your own country, it also has a widely distributed service network in other countries.

Warranty and Service Booklet

A warranty and service booklet accompanies each vehicle when it is delivered. This booklet contains a coupon entitling you to a service inspection after 1 500 miles (2 500 km). If possible, let the dealer who supplied the vehicle carry out this service inspection. Any of our dealers, however, can do this if required. If our guarantee is to apply, we make one absolute condition and that is that the abovementioned inspection is carried out at roughly the mileage shown and that the vehicle has been looked after in accordance with the instructions given in this manual.

Service Inspections

After the 1500 miles (2500 km) service inspection has been carried out, you should come to some arrangement with your dealer concerning continued, regular service inspections in accordance with the suggestions made in our Service Book. Thorough and regular servicing is of vital importance for the performance and length of life of the vehicle.

Always use genuine Volvo parts.

INTRODUCTION



2		0	3
9	S	N9143298	0
1	or l		

MFD. BY VO AUG. 72	LVO GOTHENBU	RG SWEDE	N.
GVWR	GAWR FRONT	1765	LB
3800 LB.	GANR REAR	2/50	LB
FEDERAL MOTOR	VEHICLE SAFETY	STANDAR	DS IN



Type designations

In all correspondence concerning your vehicle with the dealer and when ordering parts, the V.I.N. and engine number should always be quoted.

- 1. Vehicle type designation, code number for color and upholstery: on bulkhead.
- 2. Body number.
- V.I.N. (Vehicle Identification Number) plate located at the foot of the left door post. The V.I.N. is also stamped on right door pillar.
- 4. Type designation, serial number and part number of engine: stamped on engine left-hand side. The final figures of the part number are stamped on a plate. The serial number then follows with allfigures stamped on the block.
- Type designation, serial number and part number of transmission: underneath transmission.
- Final drive reduction ratio, part number and serial number: on a plate on lefthand side of final drive.

(4





INSTRUMENTS AND CONTROLS

- 1. Air vent
- 2. Headlight switch
- 3. Combined instrument
- 4. Horn
- 5. Ignition switch and steering wheel lock
- 6. Windshield wiper/washer control lever
- 7. Air vent
- 8. Clock
- 9. Air vent
- 10. Glove locker
- 11. Air vent
- 12. Parking brake
- 13. Fusebox (fuse replacement, see page 55)
- 14. Fresh-air control
- 15. Hood release handle
- 16. Turn signal switch lever, dimmer and mainbeam flasher
- 17. Rheostat for instrument panel lighting
- 18. Cigarette lighter
- 19. Heater and ventilation controls
- 20. Gear lever
- 21. Ashtray
- 22. Switch, electrically heated rear window
- 23. Switch, emergency warning flashers
- 24. Fan switch
- 25. Switch, air conditioner
- 26. Seat belt reminder light

The instruments and controls are described in more detail in the following pages with a reference to the numbers in the picture opposite.



1, 7, 9, 11 Air vents

Air is supplied to the compartment by means of the four air vents. Air is blown through these vents by the blower fan which is operated by means of switch (24). The vents can be shut off completely by turning the button in the center of each vent a 1/4 turn clockwise. The vents can also be adjusted to point to any particular place in the compartment. The two outer vents can even be used for demisting the front door windows.

2 Lighting switch



The headlights are operated by means of a push-pull type switch on the dashboard as well as a lever (16) on the steering column.

All the lights are extinguished when the lighting switch is pushed fully in. Pulling it out to the half-way position, switches on the parking lights, and when it is fully out, the full or dipped headlights are switched on, depending on the position of the lever (16).

Since the lighting system is not connected across the ignition switch, the lights will function irrespective of whether the ignition key is in position or not.

Your car is fitted with side marker lights. These are located on the sides of the mudguards and are switched on by pulling out the switch knob for the headlamp lighting.



D, F Warning lights for parking brake and brake circuit failure

PARKING BRAKE BRAKE FAILURE

Both these lights give a steady red light when the parking brake is applied and the ignition is on.

They also function as warning lights should a failure arise in one of the brake circuits. If the lights go on during driving, the car should be driven without delay to a workshop for a check on the brake system. **Observe due care when driving under** such conditions.

3 Instrument panel

- A Odometer
- B Speedometer
- C Turn signal light
- D Warning light, parking brake and brake circuit failure
- E Mainbeam warning light
- F Warning light, parking brake and brake circuit failure
- G Turn signal light
- H Warning light, oil pressure
- I Warning light, battery charging
- J Trip odometer
- K Trip odometer reset knob
- L Revolution counter
- M Coolant temperature gauge
- N Warning light, overdrive
- O Fuel gauge

A Odometer



The odometer shows the total distance covered in miles. After 999999 miles it returns to zero and starts to go round again. H Oil pressure warning light



This lights red when the engine oil pressure is too low. When the ignition is switched on, the light should go on and then go out again when the engine starts. Never start driving until the light goes out. If the light goes on during driving, stop the engine and find out the reason for this. In most cases it means that the oil level is too low. After hard driving it may happen that the warning light comes on when the engine is idling. This is normal providing it goes out again when engine speed is increased.

I Warning light, battery charging

This lights red when the battery is discharging. Should it light during driving, either there is some fault in the electrical system or the fan belt is not sufficiently tensioned and is thus slipping on the alternator pulley, causing poor charging.

J Trip odometer

The trip odometer measures distances of up to maximum 999 miles. The window furthest to the right shows tenths of a mile and is therefore useful for measuring short distances.

K Trip odometer reset knob

 \bigcirc

The trip odometer is reset to zero by pushing in the knob. L Rev counter

M Coolant temperature

within the green sector.

amber-colored field.

should be checked.

gauge

AM



The rev counter indicates the engine speed per minute. The amber-colored area between 5500 and 6000 rpm covers a temporary speed range and can be used, for example, for rapid acceleration. The speed range 6000–7000 rpm is marked in solid red and must not be used.

The temperature gauge shows the tem-

perature of the coolant and thus indicates the working temperature of the engine. The gauge pointer should normally remain

During town driving and idling when the weather is particularly warm, the tempe-

rature gauge pointer may enter the solid

Should the pointer repeatedly point to the red field, the coolant and fan belt tension

O Fuel gauge

The fuel gauge is graduated "full", "half", "reserve", and "empty". The red field between "reserve" and "empty" is a reminder that the tank should be filled. When the gauge pointer is on "reserve", there are approx. 21/2 US galls/2 Imp. galls (8 liters) in the tank. The gauge pointer registers when the ignition is switched on.



N Warning lamp, overdrive



The lamp gives a steady green light when the overdrive is engaged. Concerning engaging and disengaging overdrive, see page 24.

4 Horn

The horn blows when the pad in the center of the steering wheel is pushed in and the ignition has been switched on.







5 Combined ignition switch and steering wheel lock

The switch has four positions: (0) Locking, (1) Intermediate, (2) Driving and (3) Starting. The key can be taken out of the lock only in the Locking position.

The ignition switch is provided with a buzzer to remind the driver should he forget to remove the ignition key when his door is opened.

Removing the key automatically locks the steering wheel.

With the key in the **Intermediate** position, the steering wheel is not locked and some electrical components are switched on.

To start the engine, turn the key to the **Starting** position. This engages the starter motor. As soon as the engine starts, release the key which automatically returns to the **Driving** position.

If the car is parked in such a way as to make it difficult to unlock the steering wheel, unlocking can be made easier by slightly turning the steering wheel one way and then the other.

6 Windshield wiper/washer control lever

The windshield wipers have two speeds. Moving the lever downwards one stage operates the wipers at normal speed. This speed is recommended for normal driving in rain or snow. Pushing the lever down fully operates the wipers at full speed. This is recommended only when driving in heavy rain or when driving at high speed in the rain.

The windshield washer is switched on by moving the control lever towards the steering wheel. The washer can be used even when the wipers are not switched on.

The washer container is located in the engine compartment and holds about 3 1/4 US pints/2 3/4 Imp. pints (1 1/2 litres).



8 Clock

The clock is operated electrically. To reset it, push in the re-setting knob and turn the hands.

12 Parking brake



The parking brake lever is on the outside of the driving seat and operates on the rear wheels only. When the parking brake is applied and the ignition is on, two red warning lights (3 D, F) show on the instrument panel.

Remember that the footbrake warning system is also connected to this light. Should the light show when the parking brake is not on, this may be due to a failure in one of the brake circuits. If this is the case, drive immediately (but with due care) to a workshop for a check.



15 Hood release handle

The hood is released by pulling out the handle situated to the extreme left under the dash. This releases the hood which is still held by the safety latch.

The hood is opened by inserting the fingers under the front edge and pressing up the latch as shown in the picture.

14 Fresh-air control

Pushing the control forwards opens fresh-air intake vents on the driver's side. Note that the fan should not be operating if cool air is desired through this intake.





Switching from mainbeam to dipped beam and vice versa is carried out by moving the lever towards the steering wheel and then releasing it. Here the lighting switch (2) should be pulled fully out.

The lever is also used for flashing with mainbeams when the headlights are not switched on. The headlight flasher is switched on by moving the lever towards the steering wheel and it remains switched on until the lever is released.

Check that it shuts properly when closed. The location of the hood when closed can be adjusted if necessary by screwing in or out the rubber plugs underneath the hood at the front end and on the mudguards below the windshield.

16 Turn signal lever, dimmer and headlight flasher

The lever on the left-hand side of the steering column just below the steering wheel controls the turn signals, dipped headlights and headlight flasher. The lever has a stop point for lane changing. This means that with small swings on the steering wheel (when, e.g., changing lanes, passing, etc.) the lever can be moved up or down to this point and kept there. The right or left signal will then start flashing. When the switch lever is released, it automatically returns to its off position. For normal swings on the steering wheel, the lever is moved past this stop point to the end position. Straightening up the steering wheel will return the lever to its off position.

17 Rheostat for instrument panel lighting



Rotate knob clockwise to turn on panel light and counterclockwise to dim it.

18 Cigarette lighter



To use the cigarette lighter, push it in. The lighter releases automatically when it attains sufficient heat.



19 Heater/ventilation controls

The heating system in this car is a combined warm air and fresh air system. Ventilation can be obtained with or without built-in air conditioning. The heating system is mainly regulated by the controls on the control panel in front of the shift lever and also by the four air vents, 1, 7, 9, 11 on the dash.

The control **TEMP** regulates the temperature of the incoming air.

To increase heat, turn **TEMP** clockwise (WARM), and for cooler air turn counterclockwise (COOL).

The control **FAN** operates the blower at three different speeds. (It should be remembered that the maximum blower speed is primarily intended to be used in combination with air conditioning.) With the help of the three push buttons, FLOOR, DEF. and REC, standard ventilation adjustments can be made as follows:

No buttons pushed in: No air to floor and little defroster effect. However, air can also be obtained through the four air vents.

Only FLOOR pushed in: Full air flow to front and rear floor, little defroster.

Only DEF pushed in: No air to floor. Full defroster.

Push button REC (Recirculation) is intended to be used in combination with air conditioning (extra equipment) and should not be used for heating up.

To get maximum temperature rapidly

adjust

TEMP fully clockwise

FAN to position 2 (only in extreme cases does position 3 need to be used)

Only FLOOR pushed in.

Air can be distributed to the upper part of the compartment by means of the air vents.

However, this gives less defroster.

To avoid or rapidly remove mist inside the windows adjust:

TEMP fully clockwise

FAN to position 2 (only in extreme cases does position 3 need to be used)

Only DEF pushed in.

For best defroster effect, the middle air vents should be closed and the outer ones half open (for demisting the side windows).

When about to start a car covered with snow, any snow over the air intake to the heater should be removed to avoid misting.



25 Air Conditioner

The air conditioning is operated by means of the ordinary controls for the heater and ventilation system as well as the switch marked **Air Cond** on the control panel. Pushing in the lower part of the switch starts the air conditioner compressor (of course the car engine must be running).

To operate the air conditioning:

Switch on the compressor with Air Cond. Adjust TEMP to desired temperature. For rapid cooling of warm air turn TEMP fully counterclockwise.

For rapid cooling, push in **REC.** When a suitable temperature has been obtained, **REC** does not need to be pushed in. Select suitable blower speed with **FAN**.

The best cooling effect is reached by keeping car windows fully closed and with none of the push buttons FLOOR or DEF pushed in. Most of the cooled air will then enter the compartment through the four air vents on the dash. These should then be fully open. A good tip: For rapid removal of mist on the inside of the windows, the air conditioning can suitably be used even at temperatures when cooling is not normally desired. This is done by pushing in Air Cond, by pushing in REC and by setting FAN to position 3. Adjust to the desired temperature with TEMP.

Let the air conditioning run for several minutes each month, even during the wintertime, in order to lubricate the compressor seals.

21 Ashtray

To empty the ashtray, pull it straight out all the way while pressing down the tongue inside.



heated rear window

REAR DEMIST

In order to obtain a clear rearview during cold and damp weather, the car is fitted with an electrically heated rear window. Heating is provided by wires on the inside of the rear window. Avoid placing anything near the wires that might damage them. 23 Switch for emergency warning flashers

All four emergency warning lights start flashing when the lower part of the switch is pushed in. A warning lamp mounted in the switch blinks in unison with them.

The heating is switched on by pushing in

the lower part of the switch. This lights up

Pushing in the upper part of the switch

Switch off the heating when the rear window is clear of mist and ice in order not to

a warning lamp mounted in the switch.

switches off the heating.

overload the battery unduly.

This warning light is not wired across the ignition and therefore functions irrespective of whether the ignition is switched on or not.

Pushing in the switch again puts out the flasher lights.

The emergency warning lights should only be used when the car must be stopped where there is danger to other traffic. Note that regulations concerning the use of these lights may vary from place to place.

26 Seat belt reminder light



This light goes on and a signal starts buzzing if the car is driven without the seat belts being fastened on the driver and front-seat passenger.

The reminder light and warning buzzer are wired via a contact in the transmission and function only when the ignition is switched on and one of the speeds 1-4 (manual transmission) and 1, 2, D (automatic transmission) are engaged. The light goes out and the buzzer stops buzzing when the driver and the front-seat passenger fasten their seat belts in the locks between the seats.







INTERIOR AND BODY

Front seats

Lumbar support

The front seats are provided with an adjustable lumbar support. This is operated by means of the knob on the right side of the backrest. To tension the lumbar support, and thus exert more pressure against the small of the back, turn the knob clockwise, "FIRM" and to relieve the pressure against the small of the back, turn the knob anti-clockwise, "SOFT".

Backrest adjustment

The front seat backrest is adjusted with the lever on the outside of the backrest (see picture). Lift up the lever, adjust to the desired angle, and lock the backrest there by pushing down the lever.

The backrest can be folded backwards to a comfortable rest or repose angle.

Length and height adjustment driver's seat

The driver's seat can be adjusted forwards-backwards by lifting knob A upwards. Exert leverage with your feet on the floor and slide the seat to the desired position.

Adjustment is made vertically by lifting catch B upwards and then setting the seat to one of the four height positions. If necessary, the seat can then be adjusted longitudinally.

The car is delivered with the seat adjusted for a person of normal height. For any further adjustment of the height mechanism, the bolt (C) must first be removed.



and the





Length and height adjustment front passenger's seat

The front passanger's seat can be adjusted forwards-backwards by pressing down latch D on the outside of the seat. Vertically the seat is adjustable to three different positions. Remove the seat cushion to get to the bolts in the seating bracket. Remove the two bolts holding the seating frame to the seating brackets. Place the frame in the desired position and refit the bolts in the suitable holes. In connection with this adjustment, it may be desirable or necessary to adjust the inclination angle of the entire seat. This is done with the eyelet bolt at the front under the seat frame. Remove the bolt which goes through the eyelet screw and fold the seat backwards. Then release the locknut in the floor of the car and adjust the eyelet screw to the desired position. Re-lock securely the eyelet screw with the locknut.

Head restraints

The front seats are provided with adjustable head restraints. If the head restraint is to fulfil its function properly, it is important that it is correctly adjusted, that is, it supports against the head and against the neck. To adjust slacken the plastic nuts on the head restraints retainers. After adjusting lock the head restraints by turning the plastic nuts clockwise.



Seat belts

Always use the seat belt for all types of driving. Remember that it is possible even in slow city traffic to incur serious injury from sudden, unexpected stopping.

Now and again check that the bolts anchoring the belt are properly tightened and that the belt is in good condition. Water mixed with some mild synthetic washing agent can be used for cleaning the belt.

As the seat belts lose much of their strength when exposed to violent stretching, they should be replaced after collision, even though they may appear to be undamaged. Never modify or repair the belt on your own, but have this done by a Volvo workshop. Your car is fitted with automatically retracting inertia seat belts.

To fasten the belt, pull out the strap slowly (with right hand for belt on left-hand side, with left hand for belt on right-hand side) to prevent the mechanism from locking. Normally the belt roller is "unlocked". The roller will lock automatically if pulled out quickly, or if the car brakes or inclines to an angle greater than $10-15^\circ$ or when taking a bend rather sharply.

The practical design of the belt makes it very easy to use. Place the belt with one strap over the lap and the other across the shoulder – chest and fasten it by pushing the buckle tongue into the slot of the locking device located between the front seats. A clearly audible clicking sound indicates that the belt is locked. Make sure that those parts of the belt against the body are not twisted.

The belt is released from the lock by pushing in the square red button on the lock. Always make a habit of letting the belt roller pull in the belt strap when the belt is unfastened.

If the belts cannot retract fully, this may be due to the fact that they are twisted inside the cover casing. This is remedied by pulling out the belt **fully** and then allowing it to be drawn into the casing.



Seat belts in rear seat

The seat belts at both sides of the rear seat are also of the automatically retracting type. When fastening these belts pull them out rather slowly to prevent them from locking before being fastened. These belts are fastened by pushing the tongue at the end of one strap into the lock on the other. To unfasten just press in the square red button as shown on the picture. The belt in the middle of the rear seat is manually adjusted. It is fastened and unfastened in the same way as the side belts in the rear seat.

To lengthen the center belt, turn the buckle and pull it out as shown in the picture.

To shorten the belt pull the upper belt strap.

Note that small children (up to the age of 8–10 years) should not use the seat belts. A special child safety seat, which is fitted on the front passenger seat, facing opposite the driving direction, should be installed for a child. Contact your authorized Volvo dealer.



Doors and locks

The car is fitted with a lock and keyhole on each of the front doors.

All the doors can be locked on the inside by pressing down the lock button on the window ledge. On the front doors this lock button lifts automatically when the door is opened from the inside. On the rear doors, however, the lock button must first be pulled up before the doors can be opened from the inside. This is an advantage if children are alone in the rear of the car.

The front doors can be locked from the outside by pressing the lock button on the window ledge down and shutting the door while holding the outside handle pulled out as shown in the picture. To lock the rear doors, push down the inside lock button. It is not necessary to keep the outside handle pulled out. **Do not leave the keys in the car.**

The door locks have been designed with a view to providing maximum possible protection against freezing during the wintertime. As an extra measure, however, you should lubricate the locks regularly during very cold weather with a suitable antifreeze agent. If the lock is already frozen, be careful not to break the key in the lock. Instead, heat the key and immediately place it in the lock. This should unfreeze the lock. Should you lose the car keys, contact your nearest Volvo dealer for new ones and quote the code number of the key which have been lost.



Child safety lock

On the Volvo 164 there is a small red button located at the very back on the inside of the rear doors. Move this button down to lower position (A). When the door is then closed, it cannot be opened from the inside but, however, from the outside, providing the lock button on window ledge is not depressed. If the red button is at the upper position (B), the rear door lock will function normally.







Interior lighting

- 1. The light comes on when either front door is opened.
- 2. The light is always off.
- 3. The light is always on.

Rearview mirror

The inside rearview mirror can be switched to anti-dazzle by pushing back the knob (N) at the bottom.

Trunk

The trunk lid is locked with the same key as that used for the doors. It is opened by turning the knob clockwise and lifting the lid at the same time. Note that the key must be taken out of the lock in order to turn the knob and open the lid. The lid is balanced and will remain stationary in its opened position.

The spare wheel is securely held in position to the right. The jack and tool kit are located next to the spare wheel. Under the trunk floor to the left there is space sufficient for an extra spare wheel, or stowing tools or a reserve fuel can.

Sun-roof

Certain models are fitted with a sun-roof. The sun-roof is opened and closed by a winding handle. When not in use, the handle is folded in the recess in the roof between both the sun visors.

To close the sun-roof, wind it forwards fully, then wind back the handle a little and fold it into the recess in the roof.



STARTING AND DRIVING

Running-in

The maximum permissible speeds given below must not be exceeded in the beginning when the moving parts of the car are in the process of adaptation in order to achieve overall smooth function:

	below the first 600 miles (1000 km)		between 600 and 1200 miles (1000 and 2000 km)		
1 st	speed	20 mph	(30 kmph)	30 mph	(50 kmph)
2nd	speed	35 mph	(55 kmph)	45 mph	(75 kmph)
3rd	speed	50 mph	(80 kmph)	60 mph	(100 kmph)
4th	speed	70 mph	(110 kmph)	80 mph	(130 kmph)

Avoid driving at high speed in low gear and using the kick-down (automatic transmission) during the first 1 200 miles (2 000 km).

Running-in inspections

After 1500 miles (2500 km) the vehicle should be taken to a Volvo workshop for the warranty inspection. Included with the checks and adjustments then made is a change of oil in the engine, transmission and rear axle. It is very important to ensure that this oil change is carried out since during the running-in period the engine oil usually collects a lot of impurities. Subsequent oil changes should be carried out at approximately those intervals indicated in the maintenance schedule on page 40 and in the lubricating chart at the end of the book.

Before being delivered, all Volvo engines are test-run on test benches and in the vehicles on test tracks. We are therefore assured that all clearances are satisfactory and we thus accept no responsibility for damage caused by careless running-in.

Your first drive

Before starting to drive your new Volvo, we would advise you to become acquainted with your car and the various instruments and controls required for the driving. When you are seated comfortably and can find the various controls without bother you are ready to start driving – but do not forget to fasten your seat belt.

Start the engine

as follows:

- 1. Check that the parking brake is on and the gear lever is in neutral (position **N** or **P**, autom. transmission).
- 2. Always make a habit of depressing the clutch pedal until the engine starts.
- Turn the ignition key to the starting position. Release the key as soon as the engine has started.
- NOTE. When starting a cold engine, do not depress the accelerator until the engine starts. If the engine stops start it again without depressing the accelerator pedal.

If the engine is warm, the accelerator pedal should be pressed down about half-way. Avoid repeated **short** attempts to start. (In the case of **each** new attempt, the starting valve functions and causes fuel to be injected into the inlet duct.) Instead, allow the starter motor to operate for a rather longer time (not more than 15–20 seconds, however) each time.

Do not race the engine up to high speed immediately after starting from cold.

Starting in garage

Before starting your car in a garage, always open the garage doors. The exhaust gases from the engine contain carbon monoxide gas which is poisonous and particularly dangerous since it is invisible and odorless.

Warming up the engine

Experience has shown that engines in vehicles used for frequent stopping and starting are subject to abnormally rapid wear. The reason for this is that the engine is not given a chance to reach its normal working temperature. When the engine is cold, it should just be taken up to its normal working temperature as quickly as possible. Therefore, do not idle the engine too long but start driving on light throttle as soon as the oil pressure light has gone out.

Driving with the trunk lid open

While driving with the trunk lid partly or fully open, exhaust gases can be sucked into the car trough the trunk. Normally, this involves no risk to the passengers. However, the following advice should be followed on such occasions:

- 1. Keep all windows closed.
- Set the fresh air and defroster controls to the fully-opened position and the fan switch to full speed.







SHIFTING

The Volvo 164 may have a manual transmission with an overdrive, or it may be fitted with an automatic transmission.

The transmission is synchronized on all forward gears. If synchronization is to function satisfactorily, the clutch pedal must be fully depressed. Never let the engine drag in high gear. Shift down in good time.

Floor-mounted shift lever

Shifting with a floor-mounted shift lever is quite conventional and the different shift positions are shown in the picture above.

Overdrive

The overdrive, which can be used in fourth gear, is operated by means of a lever to the right under the steering wheel. Moving the lever downwards engages and upwards disengages the overdrive. No extra operation of the clutch pedal or accelerator is normally necessary but engagement of overdrive is facilitated if the accelerator pedal position is maintained steady. When disengaging the overdrive, light pressure on the clutch pedal helps to make this operation smoother. The overdrive should not be used at speeds below 40 mph (60 kmph).

Automatic transmission

The shift positions for the selector lever are marked on the console next to the lever.

P = Parking R = Reverse N = Neutral D = Driving $2 \\ 1 = Low speed$

The selector lever can be moved freely between positions **D** and **2** where the other positions are blocked with a gate which is opened by means of the push button in the knob of the selector lever.



P-position

Engage selector in position P for parking, whether the engine is stopped or running. When parking on a steep gradient, the parking brake should also be applied. In the P position the transmission is mechanically locked.

P position may only be selected when the car is standing still.

R-position

This position is used when reversing. R position may only be selected when the car is standing still.

2-position

In position 2 the transmission can shift up ur down automatically between 1st and 2nd gear.

In this position there is no shifting up to 3rd gear.

2 position can be used to obtain immediate downshifting (to 2nd gear) and also when shifting up from 2nd to 3rd gear is not desired, for example, at the following times:

- during certain types of highway driving

- during crawling town driving
- when driving in hilly country
- when overtaking
- in order to increase engine braking

Do not select 2 position for speeds exceeding 80 mph (130 kmph).

To shift from D and 2 to positions N or 1 all that is required is a light push on the button with the palm of the hand. With the push button in this position, the selector lever can be moved between the four positions. 1, 2, D and N.

To shift to positions **R** and **P** more force is required to press down the button. This can be done with the thumb. Similar force is also required to move the selector lever out of the **P** position. In other words, with the push button fully depressed, the selector lever can be moved freely between the various shift positions in the transmission.

N-position

N position is for neutral, that is, no gear is engaged.

D-position

This position is the normal one for driving. Start is in 1st gear and the transmission automatically shifts up in accordance with road speed and accelerator position. Downshifting takes place automatically with decreasing speed.

1-position

With 1 position there is automatic downshifting but no upshifting.

If 1 position is selected at high speed, 2nd gear is engaged. It is only when the speed has dropped to about 6 mph (10 kmph) that 1st gear engages. The 1st gear can also be engaged by kick-down below about 35 mph (55 kmph). If you want to drive in 1st gear without intending to shift up, use 1 position, e.g., when driving in hilly country where maximum engine braking can be obtained in 1 position.

Do not choose 1 position for speeds exceeding 80 mph (130 kmph).

Kick-down

When the accelerator pedal is depressed past full throttle position, kick-down is obtained, that is, there is an immediate shifting down to the next lower gear. As soon as a maximum speed for this gear has been reached or if the accelerator pedal is eased from the kick-down position, automatic shifting takes places to the next higher gear.

Driving

Starting the engine

Move the selector to \mathbf{P} or \mathbf{N} . The starting switch will be put out of function if the selector is moved to any of the other positions.

Carry out the following procedure when starting:

- Check to make sure that the parking brake is on or depress the brake pedal (otherwise the car will start creeping when the selector is moved to any of the driving positions).
- Move the selector to the intended driving position.
- 3. Release the brake and drive off.

The car is **stopped** in the usual way by releasing the accelerator pedal and depressing the brake pedal. It is not necessary to move the selector.

If the car gets stuck in snow, loose sand, etc., it can be "rocked" loose by moving the selector alternately between the "D" and R positions during continuous light accelerator pressure.

Important

Do not select P or R when the car is moving.

Do not select D, 2, 1 or R at an engine speed higher than idling when the car is stationary.

Do not select 2 or 1 at speeds above 80 mph (130 kmph).

STANDARD TRANSMISSION

Recommended max. and min. speeds mph (kmph) for the different gears

Engine	1st gear	2nd gear
B 30 F	0-35 (0-55)	15-55 (20-90)
Engine	3rd gear	4th gear
B 30 F	22-85 (35-140)	28- (45-)*

*) 38 mph (60 kmph) with overdrive engaged.

AUTOMATIC TRANSMISSION

Gear speeds at full throttle, kick-down, mph (kmph)

Gear	B 30 F
1-2	47 (75)
2-3	80 (130)

Max. speed when kick-down downshifting, mph (kmph)

Gear	B 30 F
3-2	70 (115)
3-1	35 (55)



TOWING

The tow line should be attached to one of the towing eyelets fitted underneath the car. At the front, the towing eyelet is situated at the right-hand side (left picture) on the front axle member, and the rear eyelet on the right spare wheel housing (right picture). During towing, the tow line should be kept stretched to avoid unnecessary jerking.

Towing, automatic transmission

If necessary, your car can be towed with the selector lever in position. N, providing that the transmission is properly adjusted and that the oil level is correct. The maximum permissible speed when towing is 20 mph (30 kmph) and the longest distance your car ought to be towed is 20 miles (30 km).

If the car has to be towed longer than this or if you suspect that there is some fault in the transmission, the rear wheels should be raised or the propeller shaft disconnected in order to avoid possible damage to the transmission.

Due attention should be paid to laws concerning maximum speed when towing.

Check your state laws on towing!



Starting by towing

The towing car should start smoothly and be driven at even speed in 2nd gear.

Switch on the ignition, and pull out the choke if the engine is cold.

Standard transmission: Engage 3rd or 4th gear and gradually release the clutch pedal. Once the engine starts running, depress the clutch pedal.

Attention!

Remember that a car fitted with automatic transmission cannot be started by towing.

If your car cannot be started because of a flat battery, an assist battery with cables must be used instead.

NOTE. Always connect a plus cable from the assist starter battery to the plus pole on the car battery and the minus cable to the minus pole.

Trailer towing

Driving with a trailer involves no particular difficulties provided you follow the recommendations of the trailer manufacturer concerning equipment and loading. The hitch hook must be approved for trailers of at least 2000 lbs gross loaded weight. Your Volvo dealer will certainly give you tips about suitable hitch hooks for your Volvo. The lighting for the trailer and car as well as the car's rearview mirrors must conform to the requirements of the federal and local authorities.

The load in the trailer should be so distributed that there is a certain pressure on the car's hitch hook, but max. 160 lbs (73 kg). Where the hitch loads are near that of the maximum permitted, the tire pressure in the rear tires should be increased by 4 psi (0.3 kp/cm²). However, do not exceed the maximum permitted load (see page 67.).

The maximum speed when driving with a trailer is 75 mph (120 kmph).

IMPORTANT ABOUT BRAKING

When you drive your car in the rain or through pools of water, also when washing the car, water can splash on the brake discs and linings and thereby alter the friction properties of the brake linings so that a certain delay in braking effect can sometimes be noticed.

If you drive some distances in rain or slush, you should **depress the brake pedal lightly now and again** in order to heat up the brake linings and remove the moisture on them. This should also be done after washing the car and after starting in very damp weather.

When the brake servo is not functioning, e.g., on rolling the car with the engine switched off, pressure on the brake pedal must be 3 to 4 times greater if the same braking effect is to be achieved as when the servo is functioning.

Note that the brake pedal travel will be short and stiff.

If one of the brake circuits should stop functioning (the red warning lamps D, F see page 8. lights) double pressure on the brake pedal is required in order to achieve approx. 80 % of the normal braking effect. About 50 % braking effect is achieved with normal pedal pressure. Note that here the pedal stroke will be long but the pedal will then feel stiff and hard in the braking position. The car should be taken as soon as possible to a workshop for a check on the brake system.



ENGINE COMPARTMENT

- 1. Radiator
- 2. Battery
- 3. Alternator

4. Charging regulator

- 5. Pressure sensor
- 6. Relay for fuel pump
- 7. Main relay for fuel injection
- 8. Air cleaner
- 9. Pressure regulator
- 10. Injectors
- 11. Windshield wiper motor
- 12. Vacuum container for heating system
- 13. Cannister, evaporative control system
- 14. Oil filler cap
- 15. Oil dipstick
- 16. Ignition coil
- 17. Distributor
- 18. Brake servo
- 19. Brake fluid container
- 20. Starter motor
- 21. Windshield washer motor and container
- 22. Steering box, power steering
- 23. Main relay for ignition
- 24. Step relay for high and low beams
- 25. Fusebox, fuel pump
- 26. Drier
- 27. Compressor Air conditioner
- 28. Oil container for power steering
- 29. Expansion tank



ENGINE

The engine is a six-cylinder, water-cooled carburetor unit with overhead valves. The engine has a very rigid cylinder block made of special cast iron and is cast in one piece. The cylinder liners are machined directly in the block. The cylinder head has separate inlet and exhaust ports, one for each valve.

The statically and dynamically balanced crankshaft is carried in seven main bearings.

Lubricating system

Engine lubrication is taken care of by a gear pump located in the oil pan. The pump is driven by a gear from the camshaft. From the pump the oil is forced through the full-flow type oil filter and then along oilways to the various lubricating points. A relief valve is built into the oil pump and prevents the oil pressure from reaching excessively high values. The oil filter is of the full-flow type, that is, all the oil passes through the filter before continuing on to the engine lubricating points.

Fuel system

The engine is fitted with an electronic fuel injection system.

This system includes an electronic control unit (7) which converts the impulses from the various sensors in the engine to control signals which regulate the six solenoid-actuated fuel injectors (15). The control signals influence the opening times of the injectors and thereby the amount of fuel injected.

The mixture of fuel and air is modified the whole time according to the conditions under which the engine is running. Engine speed is governed by the triggering contacts (13) in the distributor, the operating temperature by the sensor (17) for the coolant, the temperature of the induced air by the sensor (1) and the engine load by the pressure sensor (5) which is connected to the inlet duct. In addition, the control unit is provided with information concerning the position of the throttle valve by means of the throttle valve switch (2). This information is "computerized" in the control unit and re-transmitted in the form of control impulses to the injectors. Fuel is injected into the inlet ports in the cylinder head just before the intake valves. The fuel is delivered to the injectors via an electric fuel pump (12) which main-

tains a constant pressure of 30 psi $(2 \text{ kp}/\text{cm}^2)$ in the fuel line with the help of a pressure regulator (14).

The car is fitted with a system to check fuel evaporation from the fuel tank.



Principle of operation, fuel injection system

- 1. Temperature sensor for induction air
- 2. Throttle valve switch
- 3. Throttle housing
- 4. Cold start valve
- 5. Pressure sensor
- 6. Inlet duct
- 7. Control unit (electronic)
- 8. Battery
 - 9. Fuel tank
- 10. Fuel filter, suction side
- 11. Fuel filter, discharge side

- 12. Fuel pump
- 13. Triggering contacts in distributor
- 14. Pressure regulator
- 15. Injectors
- 16. Thermal timer contact
- 17. Temperature sensor for coolant
- 18. Auxiliary air regulator
- 19. Idling adjusting screw
- Partial vacuum in inlet duct
 Fuel at atmospheric pressure
 Fuel under 30 psi (2 kp/cm²)
 overpressure



Exhaust emission control

Your Volvo is fitted with exhaust emission control, that is, a system which as a result of better mixing and distributing of fuel and air provides a more complete combustion and thereby cleaner exhaust gases.

The exhaust emission control is provided by the electronic fuel injection system.

Cooling system

The cooling system is of the sealed pressure type and incorporates a circulation pump.

When the engine is cold, the coolant circulates only inside the engine. As the engine warms up, a thermostat valve starts opening the outlet to the radiator.

An expansion tank prevents air from circulating with the coolant as this would cause corrosion in the cooling system. The fan is driven via a slip coupling which permits a max. fan speed of approx. 2500 rpm, resulting in a lower noise level.

POWER TRANSMISSION

Clutch

The function of the clutch is to transmit power from the engine to the transmission. The clutch is of the single dry plate type. Pressure on the pressure plate is obtained from a diaphragm spring which in its turn is controlled by the clutch pedal via a throw-out yoke.



Manual transmission

The transmission has synchromesh on all forward gears. Since it is fitted with helical gears and the gear lever is rubber-insulated, excellent sound insulation is obtained.

Automatic transmission

As an alternative, your Volvo can be fitted with a BW 35 automatic transmission. In principle it consists of two main components – a hydraulic torque converter and a hydraulically operated epicyclic gearbox with a control system. The converter serves as a clutch and as an extra gear between engine and transmission.

Overdrive

With the overdrive it is possible to reduce engine speed while maintaining road speed. This is less wearing on the engine and reduces fuel consumption at the same time.



Propeller shaft

The propeller shaft, which is the link up between transmission and rear axle, is divided into two sections. The forward section is journalled at its rear end in a rubberized ring.

Final drive

Engine torque is transmitted via the propeller shaft to the rear wheels through the final drive. The final drive is of the hypoid type, that is, the drive pinion lies below the center line of the drive shafts.

Limited slip differential

A limited slip differential can be obtained as extra equipment. A rear axle with a limited slip automatically transmits the tractive power to the wheel having the best road grip when a wheel begins to spin. Except for the differential, the rear axle is similar in design to a conventional rear axle.

Do not rotate a jacked-up rear wheel if the other rear wheel is still on the ground. Due to the differential, there is still drive on the wheel in contact with the ground. Rotating the jacked-up rear wheel would thus move the other rear wheel and may cause the car to topple off the jack.

Rear axle

The rear axle is carried on two support arms the front ends of which are bolted to the body. The rear axle casing is secured to the support arms by means of levers. Two torque rods are journalled on the casing and the body. A torque rod prevents lateral movement of the body and rear axle in relation to each other.


FRONT END AND STEERING

Front end

The front suspension units are mounted on a strong box member. The member is bolted firmly to the front section of the body. The front wheels are journalled in tapered roller bearings. The front springs consist of coil springs in which telescopic shock absorbers are fitted. The car is provided with stabilizers secured to the lower control arms and to the body.

Power steering

The power cylinder and guide valves are built into the cam-and-roller type steering gear. When the steering wheel is turned, the steering valves direct the pressure oil from the power pump to one of the sides of the piston in the power cylinder. The resultant pressure on the piston side affected assists in turning the steering wheel.

ELECTRICAL SYSTEM

The electrical system is of the 12-volt type and is fitted with a voltage-regulated alternator. The starter motor is operated by means of the ignition switch. This switch is also the main switch for the rest of the electrical system. The headlights, parking lights and interior lighting, however, are not wired via the ignition switch so they can be switched on and off without the ignition key being in position.

Lighting

The front lighting on the vehicle consists of two headlights (full and dipped beam) together with two turn signals and parking lights.

At the rear, the lighting consists of two tail lights, turn signals, brake warning lights and reversing lights. There are also two lights for the rear license plate.

The car is also fitted with marker lights mounted on the side of the fenders.

The interior lighting consists of a roof light and one in the glove compartment.

The engine compartment has a light which goes on automatically when the hood is opened.

Conserning replacement of bulbs, see pages 52-55.

Wiring diagram

- 1. Battery 12 V 60 Ah
- 2. Connection box
- 3. Ignition
- 4. Ignition coil
- 5. Distributor, firing order 1-5-3-6-2-4

6. Starter motor 7. Alternator 12 V 55 A 8. Charging regulator 9. Fusebox 10. Lighting switch 11. Step relay for mainbeam and dipped headlights, also mainbeam flasher 12. Mainbeam headlights 45 W 13. Dipped headlights 40 W 14. Parking lights 5 W 15. Rear lights 5 W 16. Side marker lights 5 W 17. License plate lighting 2 x 5 W 18. Brake light contact 19. Brake stop lights 32 cp 20. Relay for horn 21. Contact on transmission M 40, M 41 22. Reversing lights 32 cp 23. Flasher unit 24. Switch for turn signals 25. Switch for emergency warning lights 26. Turn signals 32 cp 27. Part of 6-pole terminal board 28. Rev counter 29. Temperature gauge 30. Fuel gauge 31. Voltage stabilizer 32. Warning lamp, turn signals 1.2 W 33. Diode 34. Warning lamp, mainbeams, 1.2 W 35. Warning lamp, battery charging, 1.2 W 36. Warning lamp, brake 1.2 W 37. Warning lamp, choke, 1.2 W 38. Warning lamp, oil pressure, 1.2 W 39. Warning lamp, brakes, 1.2 W 40. Warning lamp, vacant 41. Parking brake contact 42. Choke control contact 43. Temperature sensor 44. Oil pressure sensor 45. Brake warning contact 46. Fuel level sender 47. Horn 48. Horn pad 49. Switch, windshield wipers/washer 50. Windshield wipers 51. Windshield washer 52. Fan switch 53. Fan 54. Switch, elec. heated rear window 55. Electrically heated rear window 56. Clock

57. Cigarette lighter 58. Instrument panel lighting switch 59. Instrument panel lighting 3 x 2 W 60. Lighting, control panel 3 x 1.2 W 61. Lighting, shift positions, 1.2 W 62. Glove locker contact 63. Lighting, glove locker 2 W 64. Courtesy light, 10 W 65. Door contact, left-hand side 66. Door contact, right-hand side 67. Reminder buzzer for ignition key 68. Connector 69. Lighting, engine compartment, 18 W 70. Passenger seat contact 71. Reminder buzzer for seat belts 72. Reminder lamp for seat belts, 1.2 W 73. Contact for seat belts 74. Switch for overdrive, M 41 75. Contact for overdrive, on transmission M41 76. Solenoid for overdrive, on transmission M41 77. Warning lamp for overdrive, 1.2 W 78. Contact on transmission BW 35 79. Reminder buzzer for headlights 80. Foglights 55 W 81. Fusebox for foglights Relay for foolights 82. Switch for foalights 83. 84. Control unit 85. Throttle valve switch 86. Pressure sensor 87. Relay for fuel pump 88. Main relay for fuel injection Thermal timer contact 89. 90. Starter valve 91. Temperature sensor I SB=Black 92. Temperature sensor II BR=Brown GR=Grav 93. Injection valves 94. Injectors BL=Blue 95. Spark plugs W=White 96. Lighting, trunk compartment, 18 W Y=Yellow 97. Fuel pump R=Red 98. Connection at instrument GN=Green W-R=White-Red 99. Connection at instrument BL-Y=Blue-Yellow 100. Connection at instrument GN-R=Green-Red 101. Connection at instrument 102. Switch for compressor 103. Thermostat 104. Control magnet on compressor Air conditioning 105. Solenoid 106. Resistor





37



BRAKES

The brake system is of the two-circuit type with disc brakes all round. The system is provided with a tandem-type master cylinder and a directly-operating booster cylinder. When the brake pedal is depressed, the master cylinder operates mechanically via the booster cylinder, this increasing the pedal force about three times. The brake pressure is transmitted hydraulically from the master cylinder through the brake to the wheel cylinders. The pistons in these are then pressed outwards and apply the brake pads. The pressure lines to the rear wheel brakes are provided with a reducer valve which prevents the rear wheels from locking before the front wheels. The principle of the two-circuit system is that both the front wheels are connected to one rear wheel, that is, should there be a failure in one of the circuits, there is always braking power on both front wheels and the other rear wheel. So at normal pedal pressure the braking effect of one of the circuits is 50 %, but when pedal pressure is increased, about 80 % of the full braking power can be obtained in the one circuit. This provides maximum safety and prevents lateral dragging and rear-end lurching. With the engine stopped, the booster assists the braking a further two or three times after which the pedal pressure must be increased about three times as much in order to obtain a braking power corresponding to the braking power available with the engine running. The parking brake operates the rear wheels mechanically as the brake discs have also been designed as brake drums in order to incorporate the shoes for the parking brake.



GENERAL

Before the vehicle was delivered from the factory it was subjected to a very thorough inspection. Your dealer, in his turn, carried out a further delivery inspection in accordance with the specifications of the Volvo Factory. In addition to this there is a service inspection after 1500 miles (2500 km) when the oil in the engine, transmission and rear axle is changed. Subsequent servicing of the vehicle should follow the routine in the service book which is based on service inspections every 6000 miles (10000 km). The simplest way to provide

the vehicle with the servicing it requires is to have all the servicing done by a Volvo workshop. The workshop stamp in the service book will show when the vehicle was serviced.

When the car was being designed particular attention was given to the "safety details" (e.g. front end, brakes and steering). They are calculated to withstand the severest stresses with a wide safety margin. However, if you use your car for hard driving, you should take the precaution of checking these parts for fatigue cracks during the useful lifetime of the car, for instance, when the parts concerned are being reconditioned. If you prefer to carry out the simpler servicing procedures yourself or if you are sometimes obliged to have them done by a workshop outside the Volvo organization, this chapter contains same advice as to when and how they should be carried out. For the sake of convenience, the servicing procedures have been summarized in a maintenance schedule in the next two pages.

MAINTENANCE SCHEDULE - (You will be charged for these services)

More frequent service intervals will be required if the vehicle is operated in extremely dusty conditions or low temperatures or for extended periods of idling, short runs or trailer towing. It is beneficial to you to discuss your particular type of operation with your Volvo Dealer's Service Manager so that he can tailor this maintenance schedule to best suit your particular operation.

MAINTENANCE OPERATION		SERVICE	INTERVA	L	Descrip-	MAINTENANCE OPERATION	-	SERVICE	INTERVA	AL.	Descrip-	
Thousands of miles or number of months, whichever comes first	6	12	18	24	tion on page	e Thousands of miles or number of months, whichever comes first		12	18	24	24 page	
Lubricate body – trunk, door, hood hinges Change engine oil and oil filter Transmission – check oil level Transmission – change oil Rear axle – check oil level Rear axle – change oil Power steering – check oil level Service crankcase ventilation system Check and adjust engine drive belts Change fuel filter – injection system Clean fuel filter in tank	0 0 0 0		0 0 0 0		42 43, 46 44 44 44 45 46 46 47 47	Clean EGR manifold port Check function of EGR valve Replace EGR valve Clean and adjust spark plugs Change spark plugs Check and adjust ignition points*) Check and adjust ignition timing – retard and advance units*) Change coolant and pressure test system Check and adjust idle speed Check battery charge Check and adjust clutch free play	•	• • • • • • •	•		49 49 49 49 49 49 49 50 50 50 51 56	
Change filter – evaporative control system cannister Adjust valve clearance*) Compression test		:		•	48 48 48	Check brake operation and inspect brake linings Check ball joints and seals, steering rods and seals Change booster cylinder air filter.	0	0	0	0	56	
Check throttle valve switch Visual inspection of electrical connections and fuel lines		•		•	48 48	overhaul the brakes Check tire wear pattern - if unusual align front end	0	Every t	hird year	0	56 57	

*) Also at 1500 miles (2500 km) free inspection.

The federal clean air act (USA)

The clean air act requires vehicle manufacturers to furnish written instructions to the ultimate purchaser to assure the proper functioning of those components that controls emissions. The maintenance instructions listed below, marked with solid colors represent the minimum maintenance required by the law. These services are not covered by the warranty. You will be required to pay for labor and material used. Refer to your warranty book for further details.

The following items should be checked weekly by driver	Descrip- tion on page	The following should also be carried out regularly	Descrip- tion on page
Engine oil level Brake fluid level Radiator coolant level Battery water level Tire pressure, all five tires Operation of all lights Horns Windshield wipers Level of windshield washer fluid	43 45 49 51 57	Washing Polishing Anti-rust treatment Cleaning	59 60 60 61

LUBRICATION



Chassis maintenance

To simplify maintenance of your Volvo, the vehicle has been equipped with ball joints, steering rods and propeller shafts of such a construction that they do not require regular lubrication. This has been possible due to the fact that points that normally require lubricating have been packed with very durable grease at the factory and then carefully sealed, this obviating the need for subsequent lubrication.

Oil should be changed or the oil level checked after every 6000 miles (10000 km) in accordance with the lubricating chart at the end of the book. The measures taken in this inspection are also to be found in the lubricating chart.

Always use only first-class lubricants of a well-known make. The right lubricants in the right quantity at the right time will increase both the lifetime and the reliability of your car.

Lubricate body

To avoid rattle and unnecessary wear, the body should be lubricated once a year. The hinges on the hood, doors and trunk lid as well as door stops should be lubricated every 6000 miles (10 000 km). During the wintertime, the locks in the door handles and trunk lid should also be given reliable anti-freeze to prevent them from freezing up.

No. Lubricating point	Lubricant
1. Trunk lid lock	Oil
Key hole	Lock oil
2. Trunk lid hinges	Oil
3. Door lock outer slide surfaces	Paraffin wax
4. Striker plate	Paraffin wax
5. Key hole	Lock oil
6. Ventilation window lock	
and hinge	Oil
7. Hood hinges	Oil
8. Hood latch	Paraffin wax
9. Door hinges	Grease
10. Door stop	Paraffin wax
11. Window regulator	Oil and grease
Lock mechanism	Silicon greas
(Accessible after door up-	
holstery panels removed)	Section .
12. Front seat slide rails and	Paraffin wax
latch devices	andoil



be abnormally high. If necessary, top up by filling through the oil filler hole in the rocker arm casing with new oil of the same type already in the engine.

The distance between the dipstick markings corresponds to about 2.1 US qts/1.8 Imp. qts. (2.0 liters).

Change engine oil

With a new or reconditioned engine, the oil should be changed after the first 1500 miles (2500 km). Subsequent oil changing is according to the intervals given below. For engine lubrication, oil grade "For API Service SE" (API Service MS) is to be used. **The oil should be changed every 6000 miles (10000 km) or at least twice a gear.**

At very low temperatures below -18° C = -0° F) multigrade oil SAE 5 W-20 is recommended. However, this oil should not be used when the temperature is continuously above 0° C (32°F).

The old oil is drained off by removing the drain plug on the pan. Draining should take place after driving when the oil is still warm.

Check oil level in engine

The oil level in the engine should be checked each time the fuel tank is filled. The check should be carried out with the engine switched off but warm and, in order to obtain comparable values, about one minute after the engine has been stopped. Wipe dipstick before measuring. The oil level should be between the two marks on the dipstick. It must never be permitted to go down below the lower mark, but on the other hand, it should not be above the upper mark since oil consumption will then

Viscosity	Temperature range	Oil change interval miles (km)*	Oil capacity
SAE 20 W-40 SAE 20 W-50 SAE 10 W-30	SUMMER (above -12°C = +10°F) WINTER (below -12°C = +10°F)	every 6000 miles (10000 km) or twice a year	Without oil filter: 5,5 US qts./4.5 Imp. pts. (5,2 liters) With oil filter/ 6,3 US qts./5,3 Imp. qts. (6.0 liters)
At very low temper SAE 5 W-20. This of continuous temper *) During running- changed after the	atures: bit should not be used at ratures above $\pm 0^{\circ}C = 32^{\circ}F$ in the oil should also be first 1500 miles (2500 km).		

Transmission with overdrive M 410

For cars fitted with an overdrive, the oil level should be checked and the oil changed parallel with similar procedure for the transmission. The overdrive and the transmission have a common oil level and oil filler hole. Make sure when topping-up that the oil runs over into the overdrive. The oil is drained out by removing the transmission drain plug and the cap for the overdrive oil strainer.

At each oil change the oil filler of the overdrive should be cleaned. This should be done by a Volvo workshop.

Automatic transmission BW 35

The oil level should be checked every 6000 miles (10000 km). The filler pipe with graduated dipstick is to be found under the hood just in front of the firewall.

Note. The dipstick has different graduation marks for a warm and cold transmission. When the oil level is being checked, the car should be standing level. With the engine idling in position **P**, the level should be between the upper and lower graduation marks on the dipstick. When toppingup is necessary, use only Automatic Transmission Fluid, Type F.

The oil in the automatic transmission should be changed every 24000 miles (40000 km).

The dipstick should be wiped with a cloth, paper, etc., but not with anything that leaves fluff on the dipstick.

Rear axle

The oil level in the rear axle should be checked after every 6000 miles (10000 km). The oil level should be up to the filler hole. If necessary top up with the recommended oil. The oil in the rear axle should be changed after the first 1500 miles (2500 km). The old oil is drained off by removing the bottom plug. After this the oil should be changed every 24000 miles (40000 km).

The oil should then be warm and the magnetic plug must be well cleaned. It is of great importance to the lifetime of the final drive that particles and impurities from running-in are removed.

Oil grade	Viscosity	Oil capacity	Oil grade	Oil capacity	Oil grade	Viscosity	Oil capacity
Engine oil	SAE 30 or Multigrade SAE 20 W-40	3.0 US pints 2.5 lmp. pints 1.4 liters	Automatic Transmission Fluid, Type F	17.7 US pints 14.8 Imp. pints 8.4 litres	Rear axle oil acc. to MIL-L-2105B	SAE 90	3.4 US pints 2.8 Imp. pints 1.6 litres

Limited slip differential

Cars fitted with a limited slip differential are delivered from the factory with a rear axle oil MIL-L-2105B provided with an additive for rear axles with differential. A similar type of oil should be used for subsequent topping-up and changing. Oil level checking and oil changing are to be carried out at the same intervals and in the same way as for a rear axle without a limited slip differential.

Power steering

The oil level in the power steering should be checked every 6000 miles (10000 km). Before checking wipe the oil container clean. Then remove the cap and check the level with the engine not running. The oil level should be about 1/4'' (5–10 mm) above the level mark in the container. If the level is lower than this, top up with oil, with the engine stopped, to prevent air from being sucked into the container. Start the engine and recheck the oil level, which should now fall to the level mark. Re-start the engine and re-check the oil level, which should be about 1/4'' (5–10 mm) above the mark.

The oil and filter in the power steering do not need replacing other than during repairs or reconditioning.



Brake fluid

The brake system is fitted with a tandemtype brake fluid container with a section for each circuit but with the same filler hole. The brake fluid level should be between the "Max" and "Min" marks.

Rear axle oil MIL-L-2105B which should have additive for limited slip differential.

on oupdoily
2.5 US pints 2.1 Imp. pints 1.2 liters

Brake fluid with designations DOT 3 or DOT 4 should be used (previous designation SAE J 1703).



ENGINE

Crankcase ventilation system

The engine is provided with positive crankcase ventilation which prevents the gases in the crankcase from being released into the atmosphere. Instead, they are sucked into the intake manifold and take part in the combustion process whereupon they are blown out through the exhaust pipe together with the other combustion gases.

Every 12000 miles (20000 km) remove and clean the nipple (1), the hoses (2 and 3) and the flame protector (4). Rubber hoses should also be replaced if they are in a poor condition.

Fan belts

The belt tension can be checked by pressing in the fan belt at a point midway between the alternator and the fan. It should be possible to press down the belt there about $3_{le''}$ (10 mm) with normal pressure (55-80 lb = 7.5-11 kp).

The check can suitably be carried out in a workshop.

Also check the tension on the drive belt for the power pump. It should be possible to depress the belt about 3/16'' (5 mm).

Oil filter

The engine is fitted with a full-flow type oil filter, which means that all the oil passes through the filter on its way from the oil pump to the various lubricating points. Impurities in the oil are collected in the filter and gradually block it. For this reason, the filter must be changed every 6000 miles (10000 km). Scrap the old filter then. If the oil filter is replaced without the engine oil being changed, the engine should be topped up with 1.7 US pints/1.4 Imp. pints (0.8 liter).







Fuel filter

The fuel filter is located under the car close to the fuel tank. This filter is to be changed after every 12000 miles (20000 km). The filter is replaced as one complete unit.

Filter replacement should be carried out by an authorized workshop.

Filter in fuel tank

A filter is fitted in the suction line in the fuel tank. Its function is to prevent any dirt in the tank from being sucked up to the fuel pump.

The filter should be cleaned every 12000 miles (20000 km).

Air cleaner

The air cleaner consists of a container with replaceable paper insert. Replace the insert every 24000 miles (40000 km). Replace more often when driving regularly on dusty roads. No other servicing is required outside the interval just stated.

When replacing undo all the clips securing the cover to the air cleaner container. Lift off the cover and replace.

When refitting the cover the arrow points on the cover and the cleaner container should coincide.



Evaporative control system

The foam plastic filter for the evaporative control system should be changed every 24000 miles (40000 km). The foam plastic filter is fitted on the bottom side of the cannister and can be replaced when the cannister has been removed. This work should be carried out by an authorized workshop.

Valves

The valve clearance should be checked after every 12000 miles (20000 km). The check should be carried out in a workshop.

Compression test

To get some idea of the condition of the engine, a compression test should be carried out after every 6000 miles (10000 km). This test should preferably be carried out in a workshop.

Check throttle valve switch

The throttle valve switch should be checked every 12000 miles (20000 km) by an authorized workshop.

Inspection of electrical connections

The electrical connections and fuel lines in the injection system should be inspected for chafing and corrosion every 12000 miles (20000 km) by an authorized workshop.

Clean Exhaust Gas Recirculation manifold port

The exhaust gas recirculation manifold port should be cleaned every 12 000 miles (20 000 km) by an authorized workshop.

Check function of Exhaust Gas Recirculation valve

The exhaust gas recirculation valve should be checked every 12000 miles (20000 km) by an authorized workshop.

Change spark plugs

The spark plugs should be changed every 12000 miles (20000 km).

Tightening should preferably be done with a torque wrench. When fitting new plugs, be sure to fit the right type (see page 65).

When changing the plugs, check that the suppressor connectors are in good condition. Cracked or damaged suppressors should be replaced.

When changing spark plugs, clean the cables and cable terminals, also the rubber seals. If the car is driven on roads where salt has been placed to counteract skidding, spray the cables with suitable water-resistant spray.



Replace Exhaust Gas Recirculation valve

The exhaust gas recirculation valve should be replaced every 24000 miles (40000 km) by an authorized workshop.

Clean and adjust spark plugs

Remove the spark plugs after every 6000 miles (10000 km) and adjust the electrode gap. The gap should be 0.028 - 0.032'' (0.7 - 0.8 mm).

Ignition system

The distributor contact breaker gap and the engine ignition timing should be checked every 12000 miles (20000 km). All adjusting work should be done by a workshop with the proper equipment. The distributor is one of the most sensitive units in the engine and careless handling can lead to decreased engine output and high fuel consumption or even serious damage to the engine.

Check coolant level

The cooling system must be well filled with coolant and not leak if it is to operate at maximum efficiency. Check the coolant level when filling up with fuel. The level should be between the "Max" and "Min" marks on the expansion tank. The check should be carried out with particular thoroughness when the engine is new or the cooling system has been empty.

Do not remove the filler cap other than for topping-up with coolant. Frequent removal may prevent coolant circulation between the engine and the expansion tank during engine warming up and cooling.





Top up with coolant

Top up with coolant by filling the expansion tank when its level has gone down to the "Min" mark. Use all the year round a mixture of 50 % reliable anti-freeze and 50 % water. Top up to the "Max" mark.

NOTE. Do not top up with water only, particularly during the wintertime. Water by itself reduces both the rust-protective and anti-freeze qualities of the coolant. It can also cause damage to the cooling system if ice should form in the expansion tank. NOTE. In very warm parts of the country where there is little risk of frost, water can be used without anti-freeze.

We recommend, however, that rustproofing agent is added.

Change coolant

The coolant retains its properties for approx. 24000 miles (40000 km) when it should be changed. A suitable time to do this would be in the autumn to preclude any damage by frost during the coming winter. To drain the cooling system, open the drain tap located on the right-hand side of the engine and disconnect the hose connected to the bottom of the radiator. The expansion tank is emptied by removing it from its brackets and lifting it to a sufficient height so that the coolant can flow into the radiator.

Before filling with new coolant, flush the entire system with clean water.

The cooling system is filled with coolant through the filler opening on top of the radiator. When this is being done, the heater control should be set to max. heat to ensure that the entire system is filled.

Fill the radiator to the top and fit on the cap. Then fill the expansion tank to the "Max" level or slightly above this.

Run the engine for a short period, switch off the ignition and allow the engine to cool. Check that the radiator is full and that the coolant in the expansion tank is at "Max". If necessary, top up the system.

Checking and adjusting idling speed

These checks should be made every 12000 miles (20000 km) by an authorized work-shop.

Fuel

Leaded or low-leaded fuel with an octane rating of at least 91(RON*) should be used. *Research method

Special instructions when working on the electronic fuel injection system

- 1. Never let the engine run without the battery being connected.
- 2. Never use a high speed battery charger as a starting aid.
- When using a high speed charger to charge the battery in the vehicle, the battery should be disconnected from the rest of the electrical system.
- 4. The control unit must not overheat above 185°F (+85°C). The control unit must not be connected up (the engine started) when the ambient temperature exceeds 158°F (+70° C). (With paintwork, etc., when the vehicle is being stove-heated, it may not be driven out of the oven, it must be conveyed out. If there is risk of temperatures exceeding 185° F (+85°C), the control unit must first be removed.)

- 5. The ignition should be switched off before connecting up or disconnecting the control unit.
- For all work with fuel lines, great care must be taken to ensure that no dirt enters the system. Even small dust particles can jam injectors.

Any work to be done on the electronic fuel injection system should be carried out by an authorized Volvo workshop which has the proper equipment for doing this.

ELECTRICAL SYSTEM

Check battery electrolyte level

Check the battery electrolyte level when filling the tank with fuel. The level should be between ${}^{3/1}6^{--3/8''}$ (5-10 mm) above the top of the cell plates. If the level is too low, top up with distilled water.

Never check the electrolyte level by lighting a match. The gases formed in the cell are highly explosive.

Check state of charge of the battery

The state of charge of the battery should be checked after every 6000 miles (10000 km). Check with an hydrometer which shows the specific gravity of the battery acid. See page 65 for battery data. At the same time, check the lead terminals and terminal studs to make sure that they are tight, coated with grease and that the battery is firmly in position.

Check headlight alignment

The alignment of the headlights should be checked in a workshop periodically. Remember that the section of the road lit up by the headlights can vary depending on the load in the vehicle.

This car is fitted with an alternator.

When changing the battery or when carrying out work involving the electrical system, the following should be observed.

- A battery connection to the wrong terminal will damage the rectifiers. Before connections are made, check the polarity of the battery with a voltmeter.
- If assist batteries are used for starting, they must be properly connected to prevent the rectifiers from being damaged.

The negative lead from the assist battery for starting must be connected to the negative terminal stud of the car battery and the positive lead from the assist battery for starting to the positive terminal stud.

- If a rapid charger is used for charging the battery, the car battery leads should be disconnected.
 A rapid charger may not be used as an aid in starting.
- 4. Never disconnect the battery circuit (for example, to change the battery) while the engine is running, as this will immediately ruin the alternator. Always make sure that all the battery connections are properly tightened.
- If any electrical welding work is to be carried out on the vehicle, the ground lead and all the connecting cables of the alternator must be placed as near the welding point as possible.



Replace bulb for roof light

To replace the bulb for the roof light, remove the light glass by pressing in the catch with a narrow screwdriver which is inserted in the opening on the right-hand side. Then pull off the glass. The bulb is then accessible for replacement.

Replace bulbs

To obtain maximum lighting effect and to forestall the chances of lights going out, the bulbs should be changed every year, suitably during the autumn.

The replacement of bulbs in the various lighting units is shown on the following pages. Make sure when fitting lamps that

the guide pin on the socket fits into its corresponding recess.

When fitting bulbs, do not touch the glass with your fingers. The reason for this is that grease, oil or any other impurities can be carbonized onto the bulb and damage the reflector.

Replace bulbs for instrument lighting and heater control lighting

Owing to the location of the bulbs, their replacement should be carried out by a workshop.







Changing headlights (Sealed Beam)

Sealed Beam headlights are changed as a complete unit.

- Remove the outer rim by pulling it upwards – forwards.
- 2. Slacken the screws for the inner rim a couple of turns. Turn the inner rim and lift it off.
- 3. Remove the headlight contact by pulling it backwards. Lift out the headlight.
- 4. Fit the new headlight and make sure that it is fitted properly. Check headlight alignment.



Replace bulbs for front turn signals and parking lights

Remove the two Philips screws which hold the glass. The bulbs can now be removed by pressing them inwards and then turning them a little counterclockwise. The inner bulb is for the parking light, the outer for the turn signal.





Replace bulbs for rear turn signals, parking lights, stop lights and reversing lights

Remove the four Philips screws which hold the glass. The bulbs can now be removed by pressing them inwards and turning them slightly counter-clockwise at the same time.

- 1. Turn signal
- 2. Reversing light
- 3. Rear light
- 4. Stop light

Replacing the bulbs for the license plate light

The license plate lighting is provided with two bulbs. Should any of them require replacing, proceed as follows:

- Press in the tab catch in the bulb housing by inserting a screwdriver in the opening on the left-hand side of the housing. Pull the bulb housing out of its attachment.
- 2. Pull out the casing end not provided with a guide pin.
- 3. The bulb is now accessible for replacing. When fitting the unit, first insert the guide pins in the sockets and then press on the casing. Check that the rubber strip fits properly in position and press the lamp housing securely into position.



Replace bulbs for side marker lights

Remove the two Philips screws which hold the glass. The bulb can now be removed by pressing it inwards and turning it slightly counterclockwise.

Replace bulbs for trunk and engine compartment lights

Release the screw holding the lamp globe. The bulb is then accessible for replacement.

Replace bulb for glove locker

The bulb is located under the dash above the glove locker door. To replace the bulb, press it in slightly and turn it counterclockwise. The fuses are collected under a cover at the bottom of the dashboard in front of the driver's door. Reading downwards the fuses protect the following:

1.	Windshield wipers/washer	8 A
2.	Heater fan	16 A
	Cigarette lighter	
3.	Rear demist	16 A
	Overdrive	
4.	Back-up lamps	8 A
	Buzzer seat belts	
5.	Turn signals	5 A
	Instrument	
6.	Reminder light seat belts	8 A
	Buzzer ignition switch	
7.	Clock	5 A
	Glove locker lighting	
	Extra interior lighting	
8.	Brake lights	5 A
	Interior lighting	
9.	Fullbeam headlights	5 A
10.	Instrument panel lighting	5 A
11.	Left parking light	5 A
	License plate lighting	
12	Right parking light	5 A
		0





On the Volvo 164 E there is also an extra fusebox located in the engine compartment on the left-hand wheel arch.

The fuse protects:

- 1. Reserve
- 2. Reserve
- 3. Relay for fuel pump 8A

POWER TRANSMISSION

Check clutch yoke travel

To avoid risk of the clutch slipping, the clutch yoke travel should be checked and adjusted if necessary every 6000 miles (10 000 km).

Check propeller shaft

After every 6000 miles (10000 km) or once a year the rubber seal on the spline shaft and the universal joints should be checked. If the rubber seal is damaged, it should be replaced and the new seal filled with molybdenum disulphide grease.

Replace booster cylinder air filter and overhaul brakes

Every third year or 36000 miles (60000 km) the car should be taken to a workshop for replacement of the booster cylinder air filter.

The brake system seals should also be replaced at the same tine.

FRONT END

Check ball joints, steering rods, etc.

After every 12000 miles (20000 km) the vehicle should be taken to a workshop for a check on the front end concerning excessive play in the ball joints, steering gear, etc.

After every 12000 miles (20000 km) or at least once a year, the ball joint seal should also be checked for damage and leakage. When new seals are fitted they should be filled with the recommended grease.

BRAKES

Check brakes

After every 6000 miles (10000 km) the vehicle should be taken to a workshop for a check on the function of the brakes.

WHEELS AND TIRES

General

The car is fitted with pressed steel wheels with wheel cap which is bolted to the hub cap.



The wheels should always be used on the same side throughout their use. This is particularly important for studded snow tires, otherwise it can happen that the studs loosen.

Studded snow tires should also have a running-in period of between 300-600 miles (500-1000 km). During this period try to avoid driving hard round bends and at high speeds, also hefty braking and acceleration.

Snow chains can be used on all the car's four wheels providing that the chains are fine-linked and do not project so much from the tire that they can chafe against the brake caliper or other components. Rapid links must not be fitted since the space between the brake calipers and wheel rims does not permit this.

Check tire wear pattern

Check the tires at regular intervals for damage and abnormal wear, also for particles which can fasten in the tread. Have the wheels balanced if necessary. Poorly balanced wheels will rapidly increase the wear on tires as well as make for poor travelling comfort and driving characteristics. The tires have a so-called "wear indicator" in the form of a number of narrow strips running across or parallel to the tread. When about 1/16" (1.5 mm) is left on the tread, these strips show up and warn the car owner in good time that the tire is showing signs of wear.

Check tire pressure

Make a habit of checking the pressure in the tires regularly. The simplest way to do this is to check the pressure at a service station while filling up with fuel. See page 67 for the correct tire pressure. Do not forget the spare wheel when checking the tire pressure.

During driving, the temperature of the tires rises and also the tire pressure in relation to the speed of the vehicle and its load. **Normally the tire pressure should only be checked when the tires are cold.** When the tires are warm, a change in pressure should take place only when air must be pumped into the tires.

Excessively low tire pressure is one of the most common reasons for tire wear. Tires which are insufficiently inflated also result in difficult steering and high fuel consumption. Too high tire pressure tends to make for poor travelling comfort.

Be careful when parking the car next to the pavement not to damage the tires against the pavement kerb.





2



Changing a wheel

The spare wheel, jack and tool kit are stowed in the cargo compartment. When the car is to be jacked up, the jack should be on level, firm ground. Avoid creeping under the car when it is jacked up since there is risk that the car might topple off the jack, especially if the ground is soft.

Before the vehicle is jacked up, the parking brake should be applied and one of the gears engaged.



Removing

- 1. Unscrew and take off the wheel cap.
- 2. Loosen the wheel nuts 1/2-1 turn with the help of the box spanner. All the nuts have right-hand threads which are loosened by turning them counterclockwise.
- Insert the lifting arm of the jack in the appropriate jack attachment of the wheel to be changed. Make sure the jack fits well in the attachment. Jack up the side of the car far enough to lift the wheel off the ground.
- Unscrew the wheel nuts completely and lift off the wheel. Be careful when lifting off the wheel that the threads of the studs are not damaged.



Fitting

- Clean the contact surfaces between wheel and hub. Fit the hub cap on the wheel rim from the inside of the rim.
- Lift on the wheel. Tighten the nuts until the wheel makes good contact with the flange.
- Lower the vehicle and tighten the nuts alternately.
- 4. Fit the wheel cap.

Do not rotate the raised wheel if the car is fitted with a limited slip differential as this will also move the other rear wheel on the ground, so that the car may topple off the jack.

BODY

Washing

The car should be washed often since such things as dirt, dust, dead insects. tar spots. etc. usually adhere firmly to the body and may damage the paintwork. Washing also helps to counteract rusting. During the winter, special care should be taken to ensure that all road salt residue is washed off as soon as possible, otherwise corrosion can occur.

When washing the car, make sure that it is not exposed to direct sunlight since this can cause drying patches. Begin by softening up the dirt on the underside of the body with a jet of water and use if necessary a soft brush. Then rinse down the whole body with a light jet until the dirt has loosened up. After this, wash off the dirt with a sponge using plenty of water. Start on the roof of the vehicle and work down the body. Use preferably lukewarm but not hot waer.

A detergent can be used to facilitate washing. Special detergents are now available on the market – even dish-washing fluids can be used. A suitable mixture is about $1^{1/2}$ — $3^{1/2}$ fl. ozs. (5–10 cl) of fluid dish washer to 2.6 US galls=2.2 Imp. galls (10 liters) of water. Asphalt spots and tar pittings can easily be removed with white spirit or equivalent, but this should be done after the washing.

When a detergent is used, the car should be well rinsed down with clean water afterwards. Begin with the roof of the car and work down the body. Then dry carefully with a soft clean chamois leather. Use different leathers for the windows and the remainder of the car, otherwise using the same leather can cause greasy smears on the windows.

When washing the car, remember to clean the drain holes in the doors and bottom rails.

Note. When washing the car in a washing bay, the fresh-air control should be closed. In certain cases, the air intakes for the car heater should be covered.

Polishing (waxing)

The vehicle does not need polishing until the surface finish begins to lose its lustre and normal washing is no longer sufficient to make it shine again and remove the layer of dirt in the surface. Under normal conditions it is sufficient to polish the vehicle a couple of times a year on condition that it is carefully looked after and thoroughly washed as soon as it has become dirty. Before the vehicle is polished, it should be carefully washed and dried to avoid scratches on the paintwork.

Before applying wax, make sure that the surface is absolutely clean.

It may often be necessary to use white spirit for cleaning.

Waxing should neither be considered as a substitute for polishing nor as a necessary protection for the paintwork against unfavorable weather. For the most part waxing is not necessary until one year after delivery of the car.

Touching-up surface finish damage

The touching-up of any extensive damage to the synthetic finish requires the use of special equipment and skill, so that the repairing of any such damage should be entrusted to a workshop. Minor damage caused by flying stones, etc. and small scratches can, however, be attended to by the owner himself. Damage caused by flying stones requires immediate attention if rusting is to be avoided. Always make a habit, therefore, of checking the finish regularly and touch-up if required. Volvo dealers can supply you with suitable touching-up paint in tins or spray bottles. Always make sure that you get the right color. Touching-up is as follows:

- If flying stones should penetrate to the metal of the bodywork, the damaged surface is to be scraped completely clean with a penknife or similar. If, however, the paintwork is not damaged by stones, then all that is needed is light scraping to remove the dirt.
- In the event of severe damage due to flying stones, it is necessary to treat the spot concerned with anti-rust primer. The primer should cover completely the scratches and the edges rubbed off.
- 3. When the anti-rust primer has dried, genuine Volvo paint is applied. Stir the paint well or shake the spray bottle thoroughly before use. Apply several thin coats of the paint, allowing it to dry thoroughly between each application.

Chromed parts

Chromium-plated and anodized parts should be washed with clean water as soon as they become dirty. This is particularly important if you drive on gravel roads which are treated with chemicals to keep the dust down or in the winter when salt is used to melt the snow. After the car has been washed, apply wax or anti-rust preparation.

Anti-rust treatment

Your Volvo is anti-rust treated at the factory. Inspection and any touching-up of the anti-rust protection should be done at regular intervals and at least once a year. The enclosed body sections should also be anti-rust treated by means of spray application at least once a year.

If any touching-up of the anti-rust protection is necessary, this should be done immediately to prevent moisture from seeping in and consequently damaging it.

Cleaning the upholstery

The leather upholstery is cleaned with a damp cloth, possibly with a mild soap solution. For removal of difficult spots, consult an expert concerning choice of cleaning agent.

The fabric-plastic in the upholstery is cleaned with a mild detergent. For more difficult spots, use a good domestic detergent.

On no account must gasoline, naphtha, carbon tetrachloride or similar cleaning agent be used on the upholstery, since these can damage both leather and fabric-plastic.

Cleaning floor mats

The floor mats should be hoovered or brushed clean regularly, especially during the winter when they should be taken out for drying. Take the opportunity of cleaning thoroughly at the same time where the mats have lain.

Spots on textile mats can be removed with a mild detergent.

BEFORE A LONG-DISTANCE TRIP

If you are thinking of taking a long journey with your car, you should have it checked at a Volvo workshop. You will enjoy your journey better if you know that your car is in perfect trim. Irritating incidents can be avoided as well as expensive and timeabsorbing stoppages. Wherever you go there should be a Volvo workshop within easy call to attend to your car if regiured. However, it is always a good idea before making a trip to ensure that, at least on a minor scale, you have with you a comprehensive touring kit. This is particularly the case if you anticipate widely varying conditions as regards climate, roads and the prevalence of much dust. Many workshops stock special kits for this purpose. Remember when filling up with fuel to observe the existing fuel recommendations. If you prefer to look over your vehicle yourself. the following tips are worthwhile noting:

- Check brakes, front wheel alignment and steering gear.
- 2. Check engine and drive units with regard to fuel, oil, coolant leakage.
- Examine tires carefully. Replace worn tires.
- Check engine is running satisfactorily and that fuel consumption is normal.

- 5. Examine state of charge of the battery and clean terminals.
- 6. Check tool equipment.
- 7. Check lighting.

COLD WEATHER

When cold weather is on the way, it is time to think of the winter servicing of your car. The first night of frost can come as an unpleasant surprise unless preventive precautions have been taken.

Engine cooling system

A good quality anti-freeze should be used all the year round. Thus, the cooling system should always contain water plus antifreeze and rust inhibitor, even during the summer. Experience has also shown that extremely weak ant-freeze solutions (10 – 20%) are very unfavorable from the point of view of rust protection. For this reason, the quantity of anti-freeze should amount to about 50 % of the coolant, that is, 6.5 U.S. qts. = 5.5 Imp. qts. (6.2 liters), this lowering the freezing point to -30° F (-35° C). Radiator spirit is not recommended as an anti-freeze agent since it evaporates at normal engine temperature.

Engine lubricating system

During the winter, multigrade oil SAE 10 W-30 should be used for the engine lubricating system. At very low temperatures (below $-0^{\circ}F = -18^{\circ}C$) multigrade oil SAE 5 W-20 is recommended. These oils reach the lubricating points in the engine more easily at low temperature and also facilitate cold starting. See page 43.

Engine fuel system

During the wintertime with its wide variation in temperature, condensation water forms in the fuel tank and this can impair the running of the engine. This can be eliminated by adding a suitable carburetor spirit (but not methylated spirit) to the fuel. Also, there is less risk of condensation water forming if the tank is kept well-filled.

Electrical system

The electrical system in the vehicle is subjected to greater stresses during the winter than during the warm summer months. The lighting and starter motor are used more and since the capacity of the battery is also considerably lower at low air temperature, the state of charge must bechecked more often and, if necessary, the battery charged. If the battery voltage is excessively low, there is risk of the battery being damaged by frost.

Brake system

During very cold weather, the brakes are subjected to splash and condensation water which can result in the parking brake freezing up if left on.

When you park the car, do not apply the parking brake but engage first gear or reverse and if possible place blocks behind the wheels. See also page 28.

Windshield washer

Just as anti-freeze is added to the cooling system during the winter to prevent frost damage, anti-freeze should also be added to the water container for the windshield washer. This is particularly important because the windshield during the winter frequently becomes dirty and is often splashed with water which rapidly freezes and thus necessitates the frequent use of the windshield washer and wipers. Your Volvo dealer can supply you with suitable antifreeze for this purpose.

Anti-freeze for door locks

A frozen door lock is one of the most irritating things that can happen to a car owner. Many valuable minutes early in the morning can be wasted warming up keys and melting ice in locks. Remember this in good time and lubricate the locks in advance with some suitable anti-freeze agent. Such agents are now available in small handy tubes which can easily find room in a handbag or coat pocket.

WHEN THE ENGINE STALLS OR WILL NOT START

The information given below is only intended to serve as a guide in localizing and temporarily correcting minor faults. After having carried out any such measures, have them checked and adjusted by an experienced mechanic.

The engine does not start although starter motor turns it over at normal speed

- Check to make sure there is fuel in the tank.
- 2. Check to make sure the fuel pump is functioning properly. This is done by turning the ignition key to driving position. This will run the pump for 1 to $1^{1/2}$ seconds. If the pump does not function, check to make sure that the pump fuse is not blown.
- Attn. Do not touch the accelerator pedal if the engine is cold.

If the engine is hot, start it with the accelerator pedal depressed halfway. Avoid repeated short attempts at starting. Instead, let the starter motor run a little longer (max. 15-20 seconds) at each try. With damp weather, when flashover is possible, wipe the spark plug isolators clean. Release the distributor cap and wipe it dry.

Check to make sure that the ignition leads are properly fitted in the distributor head and ignition coil.

- Check to make sure that all contacts for sensors and injectors are properly fitted.
- 6. If the engine turns over without starting, there may be too much fuel in the cylinders, with damp plugs as a result. Screw out the plugs and wipe them dry. Check the electrode gap.

If the engine misfires, the reason can be:

- That one of the ignition leads has loosened in the distributor cover or from the spark plug.
- That one or more of the spark plugs is coated with soot or oiled up, in which case the plug concerned should be cleaned or changed and the spark plug gap adjusted.
- That the distributor cap and rotor arm are cracked or damaged.
- 4. That one of the ignition leads is in poor condition.
- 5. That the ignition point gap in the distributor is insufficient or non-existent.
- 6. That the ignition points are badly burned.
- That the electronic system is at fault, in which case have it checked by a workshop.

How to start your car on a downgrade

Switch on the ignition, pull out the choke if required, engage 3rd gear or even 4th and let the car roll downwards with the clutch pedal depressed. When the speed is up to 9-12 mph (15-20 kmph), and not before, release the clutch pedal slowly.

When towed: Secure the towline to the towing loop. The car is towed at an even speed in 2nd gear. Try starting as suggested in the previous paragraph.

Attention! If your car has automatic transmission do not attempt to start it by towing. See recommendations on page 27.

SPECIFICATIONS

MEASUREMENTS AND WEIGHTS

ength
Vidth
leight unladen (ready to drive)
Vheelbase
around clearance, fully laden
rack, front
rack, rear
urning circle
urb weight (incl. driver)

Permissible total weight Vehicle capacity weight Permissible axle pressure, front Permissible axle pressure, rear Permissible roof rack load Max. permissible trailer weight Max. hitch load

ENGINE

Type designation Output (SAE 1245) Max. torque (SAE 1245) Number of cylinders Bore Stroke Displacement Compression ratio Valves Valves

exhaust

Idling speed (warm engine)

67.1"	1707 mm
56.8"	1442 mm
107"	2720 mm
4.9"	125 mm
53.2"	1350 mm
53.2"	1350 mm
33.8 ft	10.3 m
3190 lb	1450 kg
depending on	vehicle type
4080 lb	(1857 kg)
920 lb	(420 kg)
1980 lb	(420 kg)
2200 lb	(900 kg)
2200 lb	(1000 kg)
2200 lb	(100 kg)
2200 lb	(910 kg)
160 lb	(75 kg)
B 30 F 138 hp/5500 rp 155 lbft (21.5 k 6 3.50" (88.90 mm) 2.978 liters 8.7:1 Overhead 0.020-0.022" (0.50-0.55 mr 0.020-0.055 mr 900 rpm (800 rpm with	om .pm) 3500 rpm m) n) n) BW 35)

4880 mm

192"



SPECIFICATIONS

Coo	ling	S	/si	ter	n
-----	------	---	-----	-----	---

Type

Thermostat, begins to open at Thermostat, fully open at Fan belt, designation

Fuel system

The engine is fitted with an electronic fuel injection system.

Ignition system

Firing order Ignition setting stroboscope setting (vacuum governor disconnected) Spark plugs spark plug gap tightening torque Distributor, direction of rotation ignition point gap 1-5-3-6-2-4

Positive pressure 10 psi (0.7 kp/cm²) closed system

180°F (82°C)

195°F (90°C)

HC-38×888

10° BTDC, 600-800 rpm

Bosch W 200 T35* 0.028-0.032" (0.7-0.8 mm) 25-29 lbft (3.5-4.0 kpm) Counter-clockwise 0.010" (0.25 mm)

ELECTRICAL SYSTEM

Voltage	12 V
Battery, type	Tudor 6 EX4 F o.p.*
Battery, capacity	60 Ah
Battery, electrolyte, specific gravity	1.28
Battery, recharged at	1.21
Alternator max. output	770 W
Alternator max. current	55 A
Starter motor, output	1 hp

* or corresponding

Bulbs 12 volts	Power	Socket	Number
Headlights	45/50W	Sealed	2
are the second sec		Beam	
Parking lights, front	5 W	Ba 15 s	2
Signals, front and rear	32 cp	Ba 15 s	4
Tail lights	5 W	Ba 15 s	2
Brake stop lights	32 cp	Ba 15 s	2
Reversing lights	32 cp	Ba 15 s	2
Side marker lights	5 W .	S 8.5	4
License plate light	5 W	S 8.5	2
Interior lighting	10 W	S 8.5	1
Glove locker light	2 W	Ba9s	1
Instrument panel light	2 W	W 2.2 d	3
Lighting, control panel	1.2 W	W 1.8 d	3
Lighting, shift positions, aut. trans.	1.2 W	W 1.8 d	1
Warning lamps: charging	1.2 W	W 1.8 d	1
Warning lamps: choke	1.2 W	W 1.8 d	1
Warning lamps: turn signals	1.2 W	W 1.8 d	2

Warning	lamps:	brakes	1.2 W
Warning	lamps:	headlights	1.2 W
Warning	lamps:	oil pressure	1.2 W
Warning	lamps:	overdrive	1.2 W
Warning	lamps:	emergency warning flashers	1.2 W
Warning	lamps:	elec. heated rear window	1.2 W
Warning	lamps:	tailgate wiper/washer	1.2 W
Warning	lamps:	seat belts	1.2 W

Fuses (in ordinary fusebox) 7 5 A 3 8 A 2 16 A

Fuse (in fusebox, engine compartment)

POWER TRANSMISSION

Clutch

Release lever free travel approx. 3/16" (4-5 mm)

Transmission

W 1.8 d

W 1.8 d

W 1.8 d

W 1.8 d 1 W 1.8 d 1

2

1

1

Type designation	M 410	BW 35	
Reduction ratios:		2.1. 00	
1st speed	3.54:1	2.39:1	1
2nd speed	2.12:1	1.45:1	
3rd speed	1.34:1	1:1	× the con-
4th speed	1:1	-	verter ratio
(with overdrive)	0.797:1	-	
Reverse	3.54:1	2.09:1	

Rear axle

Type Reduction ratio Hypoid 3.73:1 3.31:1 (for BW 35)

Speed in mph (kmph) at 1000 engine rpm

Rear axle3.73:1TransmissionM 410

1st speed	5.5 (8.9)
2nd speed	9.3 (14.8)
3rd speed	14.6 (23.5)
4th speed	19.6 (31.5)
4th speed + overdrive	24.7 (39.5)
Reverse	5.5 (8.9)

SPECIFICATIONS

FRONT W	HEEL AL	IGNMENT	10. I			CAPACITIES	
The alignm unladen ca coolant and Toe-in Camber Caster King pin in	ent values r but includ spare wh clination AND TII	apply to ar de fuel, eel.	1/6″ 0 tr +1 7.5	(2−5 mm) o +1/2° l to +2° °		Fuel tank Cooling system Oil capacity, engine, at oil change engine, incl. oil filter transmission (M 410) transmission (BW 35) rear axle power steering	 15.3 US galls./12.8 Imp. galls. 58 liters 13 US qts./11 Imp. qts. 12.4 liters (of which expansion tank 1.5 US qts./ 1.3 Imp. qts./1.5 liters) 5.5 US qts./4.5 Imp. qts. (5.2 liters) 6.3 US qts./5.3 Imp. qts. (6.0 liters) 3.0 US pints/2.5 Imp. pints (1.4 liters) 17.7 US pints/14.8 Imp. pints (8.4 liters) 3.4 US pints/2.8 Imp. pints (1.6 liters) 2.5 US pints/2.1 Imp. pints (1.2 liters)
Rim size Tire size	1016-04		5 ½ 175	⁄2 J 15 F.H. 5 R 15 or 16	65 R 15		
Tire size	Reco	mmended t cold tires,	ire infl. pro psi (kp/cm	essure ²)	Max permitt.	TOOL KIT	
	1-3 p	ersons	Full	load	pressure	The tool kit contains: Wheel nut and spark plu	g box spanner, tommy bar, Philips
	Front	Rear	Front	Rear	(kp/cm ²)	screwdriver, open end sp	banners (2).
175 R 15	25 (1.7)	26 (1.8)	26 (1.8)	30 (2.1)	40 (2.8)		
165 R 15	27 (1.9)	27 (1.9)	29 (2.0)	34 (2.4)	36 (2.5)		
For sustain pressure m exceed the	ed high sp lust be in maximum p	beed drivin creased 4 permitted pr	g over 75 psi (0.3 ressure.	mph, cold kp/cm²), b	tire inflation ut is not to		

CONSUMERINFORMATION

CONSUMER INFORMATION

Acceleration and passing ability Vehicle stopping distance Tire reserve load

The information about the 1973 Volvo 164E shown in the following pages is presented in accordance with Federal requirements for comparison with other makes and models. The exacting test procedures established by the National Highway Traffic Safety Administration were followed to obtain the figures.

Notice: The information presented represents results obtainable by skilled drivers under controlled road and vehicle conditions and the information may not be correct under other conditions.

Acceleration and Passing Ability

This chart indicates passing times and distances that can be met or exceeded by 1973 Volvo 164 E in the situations diagrammed below. The low-speed pass assumes an initial speed of 20 mph and a limiting speed of 35 mph. The high-speed pass assumes an initial speed of 50 mph and a limiting speed of 80 mph.

LOW SPEED

HIGH SPEED



Model Description of Vehicle	Low Speed (20-35 mph)		
	Feet	Seconds	
164 E Overdrive 164 E Automatic	387 400	8.0 8.6	

Model Description of Vehicle	High Speed (50-80 mph)		
	Feet	Seconds	
164 E Overdrive	1184	12,5	
164 E Automatic	1260	13,5	

CONSUMER INFORMATION

Vehicle Stopping Distance

This chart indicates braking performance that can be met or exceeded by 1973 Volvo 164 E without locking the wheels, under different conditions of loading and with partial failures of the braking system.



Stopping distance in feet from 60 mph

70
Tire Reserve Load

This chart lists the tire size designations recommended by Volvo for use 1973 164 E with the recommended inflation pressure for maximum loading and the tire reserve load percentage for each of the tires listed. The tire reserve load percentage indicated is met or exceeded by each vehicle to which the chart applies.

Model	Manufacturer's Recommended Tire Size	Recommended Cold inflation Pressure psi		Tire Reserve Load (%)
		Front	Rear	(70)
164 E	175 R 15	26	30	7.5
	- 165 R 15	29	34	5.8

The difference, expressed as a percentage of tire load rating, between (a) the load rating of a tire at the vehicle manufacturer's recommended inflation pressure at the maximum loaded vehicle weight and (b) the load imposed upon the tire by the vehicle at that condition.

WARNING. Failure to maintain the recommended tire inflation pressure or to increase tire pressure as recommended when operating at maximum loaded vehicle, weight, or loading the vehicle beyond the capacities specified on the tire placard affixed to the vehicle, may result in unsafe operating conditions due to premature tire failure, unfavorable handling characteristics, and excessive tire wear. The tire reserve load percentage is a measure of tire capacity not of vehicle capacity. Loading beyond the specified vehicle capacity may result in failure of other vehicle components.

LUBRICATING CHART

Symbols



Brake fluid Grade: DOT 3 or DOT 4 should be used



Rear axle oil Grade: MIL-L-2105 B Viscosity: See page 44



Special lubricants See resp. note



Light engine oil

Engine oil Grade: "For API Service SE" (API Service MS) See also page 43

Notes to lubricating chart

Note 1. The wheel bearings are packed at the factory with a special type of grease intended to last the entire lifetime of the bearings. In connection with such workshop operations involving uncovering the wheel bearings, the bearings should be cleaned and then lubricated with highclass, durable grease according to the instructions in the service manual. Except on the above occasion, subsequent adding of changing of lubricant is not required. The rear wheel bearings are lubricated, so

change of lubricant is unnecessary. After the bearings have been removed, however, they should be lightly greased with wheel bearing grease.

Note 2. Power steering: Check that the level in the power steering oil container is 5/16'' (5-10 mm) above the level mark. Use Automatic Transmission Fluid, Type A, or Dexron.

Note 3. Check that the fluid reaches up to the MAX mark.

Note 4. Lubricate the felt wick under the rotor and fill a few drops of light engine oil into the lubricating cup.

Note 5. Check every 6000 miles (10000 km) that the oil reaches up to the filler plug. Concerning oil change, see page 44. OBSERVE. The type of transmission will decide the type of lubricant to be used.

Note 6. Change the oil filter every 6000 miles (10000 km). See page 46.

Note 7. Check the oil level when filling the tank. Concerning oil changing, see page 43.

Note 8. Check every 6000 miles (10000 km) that the oil reaches up to the filler plug. Concerning lubricant for rear axle with limited slip differential, see page 45. Change the oil every 24000 miles (40000 km).



Oil capacities

Engine excl. oil filter Engine incl. oil filter Transmission M 410 Transmission BW 35 Rear axle Power steering

approx. 5.5 US qts./4.5 lmp. qts. (5.2 liters) approx. 6.3 US qts./5.3 lmp. qts. (6.0 liters) approx. 3.0 US pints/2.5 lmp. pints (1.4 liters) approx. 17.7 US pints/14.8 lmp. pints (8.4 liters) approx. 3.4 US pints/2.8 lmp. pints (1.6 liters) approx. 2.5 US pints/2.1 lmp. pints (1.2 liters)

Air cleaner	
Air conditioner	
Air pressure	57,
All-round lubrication	42,
Alternator	
Anti-freeze agent	
Anti-rust	
Automatic transmission, oil capacity	
Automatic transmission, oil changing	
Automatic transmission, operation	
Automatically retracting inertia seat belts	
Auxiliary air regulator	

в

Battery, level check	
Battery, state of charge	
Body, lubrication	
Body, washing	
Brake fluid, level check	
Brakes, description	
Brakes, servicing	
Bulbs	

C Capacities Charging warning light Chassis, maintenance Checking oil levels Cigarette lighter Cleaning Clutch Cold weather Cold weather Compression test Coolant, changing Coolant level, checking

		Coolant, topping-up	-
	47	Cooling system, capacity	6
	14	Cooling system, coolant	
	57,67	Cooling system, changing	5
	42,72	Cooling system, description	
	52	Cooling system, level check	-
	62	Cooling system, topping-up	-
	60	Crankcase ventilation, servicing	
v	44		
na	44	13-1	
.9	24	D	
t.		Differential, description	
	18	Differential, level check	
	31	Differential, oil capacity	1
	01	Differential, oil changing	
		Doors and locks	
		Drain cock, coolant	
	51		
	51	-	
	42	E	
	59	Electrical system, description	
	45	Elec. neated window	
	38	Electrolyte level, check	
	56	Emergency warning lights	
	52 65	Engine, description	
	52, 00	Engine, number	
		Engine, oil changing	
		Engine, servicing	50
	1.0	Ethylene glycol	50,
	67	Exhaust emission control	
	9		
	42		
43	3, 44, 45	E	
	13	Fan belt	
	61	Fan switch	
	32,66	Fault tracing	
	61	Flying stones, paintwork touching-up	
	48	Front end, description	
	50	Front end, wheel alignment	
	50	Front seats	

50	Frozen locks	62 51
50	Fuel filter	47
50	Fuel gauge	9
32	Fuel system	31
50	Fuel tank, capacity	67
50	Fuses	55
46	10000	
	G	
	Glove locker lighting	55
34	Glycol	50, 62
45	Guarantee inspection	4
45		
45	н	
20	Headlight adjustment, check	51
50	Headlights, changing	53
	Heater and ventilation controls	13
	Hood	11
	Hood release	31
36		
15	1	
15	Ignition switch and steering wheel	lock 10
20	Ignition system	49,65
5	Injectors	31
43	Instrument panel	8
46	Instrument lighting	8
0. 62	Instruments	6
32	Interior lighting	21
	к	
	Kevs	20
46		
13		
60	License plate light	54
35	Lighting	36
67	Light controls	7
16	Locks	20

INDEX

Lubrication
Lubricating chart
Lubricating system
Lumbar support

M

Maintenance schedule	
Measurements and weights	

0

Odometer	
Oil capacities	43, 44, 4
Oil change, automatic transn	nission
Oil change, differential	
Oil change, engine	
Oil change, transmission, over	erdrive
Oil change, rear axle	
Oil change, power steering	
Oil filter	
Oil pressure	
Output and torque diagram	
Overdrive, description	2
Overdrive, level check	
Overdrive, oil capacity	
Overdrive, oil change	

P

Paintwork
Paintwork, damage
Parking brake
Parking lights
Polishing and waxing
Power transmission
Pressure sensor
Pressure regulator
Propeller shaft

40.42 R

72	Rear axle, description	
30	Rear axle, level check	
16	Rear axle, oil capacity	
	Rear axle, oil change	
	Rear seat belts	
	Rear window	
40	Rearview mirror	
64	Running-in	
	Rust-protection	

s 9 Seat 15, 67 Service inspections 44 Servicing before a long-distance trip 45 Servicing, general 43 Servicing, wintertime 44 Shifting 44 Shift positions 45 Spare wheel space 46 Spark plugs 8 Specifications 64 Speedometer 4, 33 Starting in the garage 44 Starting the engine 44 Steering 44 Steering gear, oil check Steering unit т Temperature gauge, coolant Throttle valve switch Tires 57, 58, Tire pressure Tools

27,28

60 60 11, 38 54 60 32 31 Torque diagram Touching-up

31 34, 56 Towing

24	Transmission, description	3
34	Transmission, oil level check	4
44	Transmission, oil consoitu	4
44	Triggering contacts	4
10	Trip motor	3
15	Trunk	
21	Turn signals	2
22	Type designations	1
60	Type designations	
	U	
10	Underbody treatment	60
16	Upholstery	60
4	and the second sec	
20		
59	V	
24 25	Valve clearances	48
24,20	Ventilation controls	13
21 58	Viscosities	43, 44, 45
49		
64		
8	W	
23	Warming up engine	23
23	Warning buzzer, ignition key	10
35	Washing	15
45	Waxing	55
31	Weights	00
	Weights and measurements	64
	Wheels and tires air pressure	57
0	Wheels and tires, changing	59
9	Wheels and tires, description	57
59 67	Wheels and tires	67
67	Windshield wiper and washer lever	10
67	Wiring diagrams	36
64	· · · · · · · · · · · · · · · · · · ·	00
60		

WHEN FILLING THE TANK

Check weekly

The only servicing required between the 6000 miles (10000 km) inspections are the adjacent checks, which should be carried out when filling the tank. Given here is a summary of these checks. A more detailed description is to be found in the pages following under the heading "SERVICING".

Check to make sure you have the correct octane, that is 91 octane.

Headlights and other lighting

Horn

Windshield wipers

Oil level in engine The oil level should be between the marks on the dipstick. If necessary top up with multigrade oil, see also page 43.

Coolant level

The level should be between the MAX and MIN marks on the expansion tank. If necessary top up with a mixture of 50 % anti-freeze and 50 % water.

Windshield fluid level

The windshield fluid container should always be well-filled (in winter with water and anti-freeze).

Brake fluid level

Check without removing cap that the fluid level is above the MIN mark on fluid container. If necessary top up with brake fluid, grade DOT 3 or DOT 4.

Battery electrolyte level

The level should be between 3/16 - 3/8'' (5-10 mm) above the cell plates.

Air pressure in tires

Concerning recommended air pressure in tires, see table on page 67.



The specifications and constructional details given in this book are not binding. We reserve the right to carry out modifications without previous notice.

AB VOLVO · GÖTEBORG, SWEDEN



AB VOLVO · GÖTEBORG, SWEDEN

TP 973/2 (USA, Kanada) 3500. 5. 73

Printed in Sweden UNDGREN & SOMER