

Service Manual

Repairs and maintenance

Section 8 (87)

Air conditioning
240, 260
1975-

VOLVO

Volvos are sold in versions adapted for different markets. These adaptations depend on many factors including legal, taxation and market requirements.

This manual may therefore show illustrations and text which do not apply to cars in your country.

Order No TP 30461/1

This manual supersedes:

TP 11633/1 240 Air conditioning
TP 11248/1 260 Air conditioning
TP 11584/1 240 Air conditioning (USA/Canada)
TP 11412/2 260 Air conditioning (USA/Canada)

We reserve the right to make alterations

Contents

	Operation	Page
Specifications		2
Special tools		4
General repair instructions		
Damaged caused by dirt, moisture etc		6
Receiver/Dryer		6
Lubricating oil		6
Installing new system		6
Leakage		7
Safety precautions		7
Fault tracing		8
Modifications throughout the years		12
Draining refrigerant	A 1-4	15
Filling refrigerant	B 1-21	16
Lead test	B 22-27	21
York compressor (240 petrol/gasoline)		
B 20 engines	C 1-3	23
B 21 engines	C 4-12	24
Oil level check	C 13-15	26
Clutch replacement (in car)	C 16-20	27
Disassembly-assembly	C 21-44	28
Sankyo compressor (240 Diesel)		
Removing - fitting - belt adjustment	D 1-5	33
Replacement (compressor removed):		
Clutch, pulley, carbon seal	D 6-24	34
Bearing, magnet	D 6-24	34
Valve plate	D 26-29	39
Delco compressor (6-cyl. petrol/gasoline)		
Removing - fitting - belt adjustment	E 1-3	40
Replacing: clutch, pulley, bearing, magnet	E 4-5	41
Disassembly - assembly	E 6-45	42
Evaporator, replacement	F 1-8	50
Evaporator thermostat, replacement, modification	F 9-15	52
Inspection	F 16-20	54
Expansion valve (near evaporator), replacement	G 1-5	55
Expansion valve - suction discharge valve on dryer, replacement	H 1-5	56
Condenser, replacement	J 1-4	57
Receiver/dryer, drying agent (desiccant) replacement	K 1-6	58
Refrigerant hoses	L 1	60
Heater control valve, checking	M 1	60
AC compensation (idle speed compensation)		
Carburetted engines	N 1-5	61
Injected engines	N 6-16	63
Wiring diagrams:		
240, 1975-1977		68
260, 1975-1977		69
240, 260, 1978		70
240, 260, 1979		71
240, 260, 1980		72
240, 260, 1981-		73


Specifications

Performance test, see page 21


Air conditioning 240

Refrigerant, type	R 12 (diclorodifluoromethane)
quantity 1975-1978	1.1 kg 2.4 lbs
1979-	1.3 kg 2.9 lbs
1980-	1.3 kg 2.9 lbs

Compressor York (Petrol/Gasoline engines)

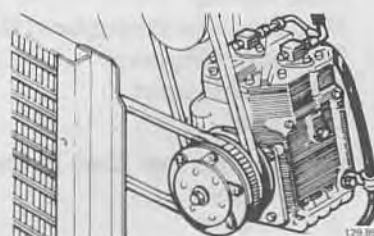

Type (1975-1978)	York A 209
No. cylinders	2
Swept volume	147 cm ³ (9.0 in ³)
Max. rev.	100 r/s (6 000 r/min)
Lubricating oil capacity	300 cm ³ (0.64 US pint)
Type (1979-)	York A 210
No. cylinders	2
Swept volume	164 cm ³ (10 in ³)
Max. rev.	100 r/s (6 000 r/min)
Lubricating oil capacity	300 cm ³ (0.64 US pint)
Lubricating oil, type	Compressor oil P/N 1 160048-3 or Suniso 5, BP Energol LPT 100, Shell Clavus 33, Texaco Capella E 500

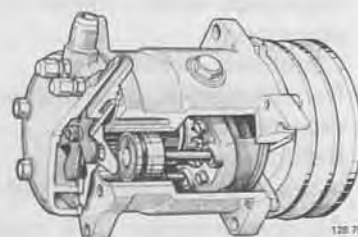

Sankyo compressor (Diesel)


Type	1980-1981	1982-
No. cylinder	Sankyo SD-508	Sankyo SD-510
Swept volume	5	5
Max. rev.	138 cm ³ (8.4 in ³)	164 cm ³ (10 in ³)
Lubricating oil capacity	100 r/s (6 000 r/min)	100 r/s (6 000 r/min)
Lubricating oil, type	135 cm ³ (0.3 US pint)	135 cm ³ (0.3 US pint)
	Compressor oil P/N 1 160048-3 or Suniso 5, BP Energol LPT 100, Shell Clavus 33, Texaco Capella E 500	

Tightening torques

	Nm	ft. lbs.
Pulleys, engine crankshaft (outer-inner) B17-B 23	6-10	4.4-7.4
Unions, expansion valve pressure equalizing pipe	17	12.5
expansion valve	30	22
expansion valve hose	30	22
evaporator hose	30	22
condenser	17	12.5
receiver/dryer	25	18
compressor York 209/210	30	22
Sankyo SD508, SD510	30	22
Compressor, (York 209/210)		
cylinder block	20-30	15-22
bottom cover	20-30	15-22
rear bearing cover	20	15
conrod bolts	20	15
oil plug	5	3.7
Compressor clutch, center bolt	25-30	18-22
Compressor, Sankyo		
cylinder block	32	24
sealer retainer	16	12
oil plug	10	7.4
valve plate	15	11
Compressor clutch, centre bolt	38	28

Air conditioning 260

Refrigerant, type	R 12 (diclorodifluoromethane)
quantity 1975-1978	1.1 kg 3.4 lbs.
1979-	1.5 kg 3.3 lbs.

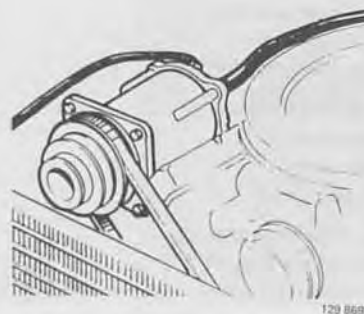

129 869

Compressor Delco

Type	Delco
No. cylinders	6
Swept volume (1975-1977)	150.7 cm ³ (9.2 in ³)
(1978-)	208 cm ³ (12.7 in ³)
Max. rev	91.6 r/s (5 500 r/min)
Lubricating oil, volume	310 cm ³ (0.65 US pint)
Lubricating oil, type	Compressor oil P/N 1 160048-3 or Suniso 5, BP Energol LPT 100, Shell Clavus, 33, Texaco Capella E 500

Tightening torques

	Nm	ft. lbs.
Unions, condenser	17	12.5
evaporator hose	30	22
*DWH: hose from condenser	17	12.5
hose (thick) *DWH to evaporator	30	22
hose (thin) evaporator to DWH	24	18
hose *DWH to compressor	30	22
hose receiver/dryer (1979-)	24	18
expansion valve equalizing pipe	17	12.5
expansion valve	30	22
expansion valve hose	30	22
compressor	35	26
*DWH - Receiver/dryer incorporating equalizing valve housing		
Compressor, connection plate	14-34	10-25
rear cylinder head	26-34	19-25
compressor clutch, shaft nut	19-35	14-26
safety valve	14-19	10-14

Special tools

999	Description - Use
-1801-3	Standard handle
2261-9	Puller: Sankyo compressor
5085-9	Press tool: installing pulley
5132-9	Fixture
5133-7	Counterhold: compressor clutch
5134-5	Puller: Delco compressor pulley
5135-2	Spacer: Pulley
5137-8	Drift: Pulley
5138-6	Drift: Installing pulley bearing
5139-4	Puller: Ceramic sleeve
5140-2	Puller: Front seal
5141-0	Adaptor: Compressor
5142-8	Support: compressor
5143-6	Filling station
5144-4	Leak detector
5152-7	Press tool: clutch
5153-5	Nipple: free on container
9175-4	Puller: compressor seal



1801



2261



5085



5132 5133



5134




5135




5137



5138

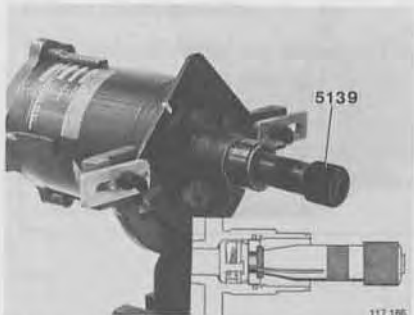

5139

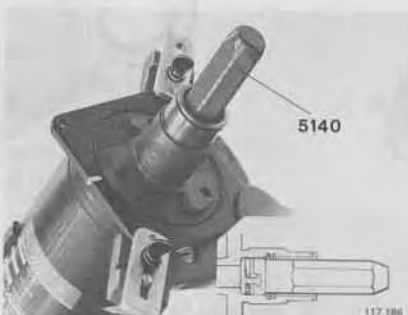


5140



5141



5142

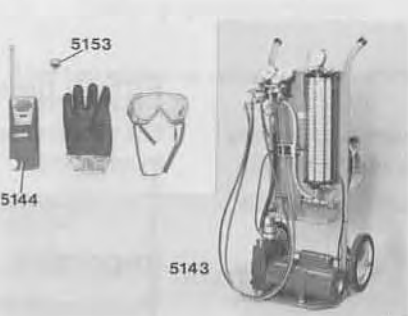

5143



5144



5152




5153




9175

General repair instructions

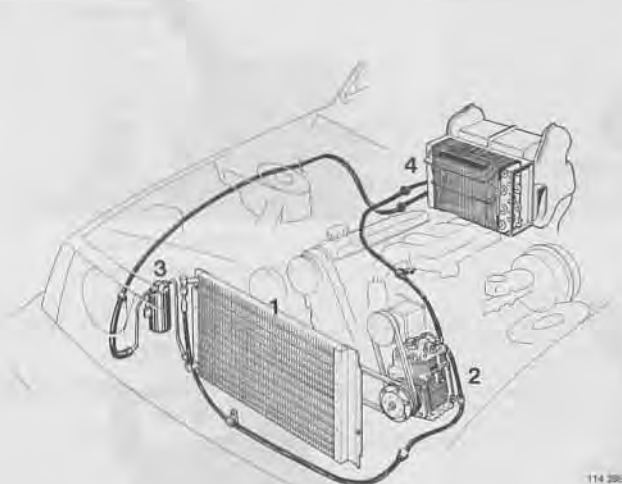

240 1978-

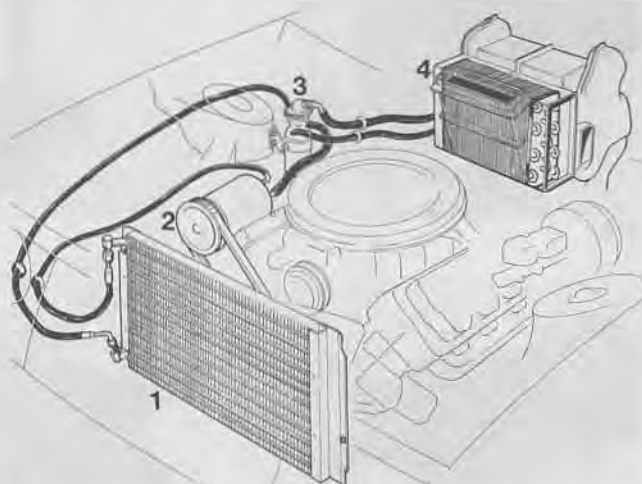

260 1975-1978

- 114 285
- 1 Condenser
 - 2 Compressor
 - 3 Receiver/dryer
 - 4 Evaporator

881 131

Caution

All leaks must be rectified as soon as possible to prevent moisture or foreign particles from entering into the system.

To reduce the risk of moisture ingress during repairwork, keep surfaces dry and clean.

The compressor lubricating oil should be stored in an airtight container otherwise it will absorb moisture from the air.

Do not remove the protective plugs on new parts until just before the part is to be fitted. Leave one of the hose connections unconnected when fitting the component and flush the complete system with refrigerant for 15-20 seconds before connecting it. This removes any impurities and moisture. Do not however flush too strongly otherwise the lubricating oil will be flushed out as well.

In the event of a collision, check very carefully every component, which may have been damaged. Check the soldered joints extra carefully. Deformed or split pipes must not be repaired.

*Receiver/dryer

The receiver/dryer, or the drying agent, should be replaced after major repairs involving leakage or when fitting new components, or if moisture is suspected in the air conditioning system.

*USA: to conform with Warranty policy, the receiver/dryer must be replaced each time the system is opened.

Fitting new air conditioning system

The compressor should contain oil. Other components must be dry.

Important

The air conditioning system must be filled with refrigerant immediately after installation to minimize the risk of corrosion. For instructions on how to fill the system see page 16.

If the air conditioning system has been left empty (in a closed state) for more than 24 hours it must be flushed twice with about 200 grams (0.5 lb) refrigerant before the final filling. The system must also be evacuated for about 10 minutes between the first and second flush. Following the instructions on page 16.

Topping up with lubricating oil

Note! Too much oil causes poor cooling. Too little will damage the compressor.

Top up the compressor after repairing a leak or replacing one or more of the components in the system.

Slow leakages (more than 24 hours)

Normally this does not involve any loss of lubricating oil. When replacing components observe:

Compressor

Drain and measure the oil from the old compressor. Also drain the oil from the new compressor. Then add the same amount of oil (new), as was drained from the old compressor to the new compressor. (At least 1 dl=0.2 US pint)

Other components

Drain and measure the amount of oil. Add the required amount of oil to the new component before fitting it.

This does not apply to air conditioning systems with York compressors. In such cases all oil is added directly to the compressor.

Quick leakages (e.g. burst hose)

This usually involves a loss of lubricating oil.

The following volumes apply when fitting a new component.

	dl	US pint
Compressor	1.5	0.3
Evaporator	0.7	0.15
Drier	0.5	0.1
Condenser	0.5	0.1
Hose	0.5	0.1

Safety precautions

Always wear tight fitting safety glasses when there is danger of refrigerant loss.

Use tap water to remove refrigerant from eyes etc.

WARNING!

Gases formed by heating refrigerant are a serious health risk and can cause serious lung damage.



Safety glasses should always be worn when working with or near refrigerants. **Rubber gloves should be worn and all form of skin contact should be avoided since refrigerants cause frostbite.** If refrigerant should contact the eyes or skin, splash the eyes or affected area with cold water (preferably for 15 min) and treat the injury in the same way as for a frostbite.

Get in touch with a doctor if the injury does not heal, or sight is affected. Avoid working near naked flames, cigarettes etc. High temperatures cause the refrigerant to form poisonous fumes which are toxic in high concentrations.

Note! The gases can cause serious lung damage even in low concentrations. The symptoms may not become evident for several hours or perhaps even a day later.

WARNING – EXPLOSION RISK!

Do not subject refrigerant containers to high temperatures.

Fault tracing

How to use the Fault Tracing tables

Find out the most possible cause of the fault by checking the crosses on the left. Check each item (start with items which are easy to check). Note that the faults are not listed in order of probability.

If it is not possible to locate the fault, pressure test the system to check for internal faults, see pages 10 & 11.

Symptom					Possible cause	Remedy
No cooling	Poor cooling	Intermittent cooling	Noise			
X				Electrical faults: Blown fuse	Check fuses (see wiring diagram)	
X				Poor connection or short (compressor does not operate)	Check all cables	
X				Compressor coupling burnt	Replace coupling (see section on compressor)	
X				Fan motor (blower), does not operate	Check cables and motor	
	X	X		Fan motor (blower), poor operation (loose or cracked motor)	Check/replace	
		X	X	Broken or poor connection in compressor clutch winding (clutch moves in and out)	Replace clutch (see section on compressor)	
			X	Fan motor screeches or contacts fan shroud	Check	
				Mechanical faults		
X	X		X	Drive belt too loose or cracked	Tension or replace belt. See section on compressor.	
X	X			Heater control valve leaks in "COOL"	Check valve. See page 60	
	X			Air ducts blocked	Check and clean	
	X			Air inlet in front of windscreen/shield blocked	Check and clean	
			X	Clutch bearing worn or off-centre	Replace bearing. See section on compressor.	
	X		X	Compressor worn or loose	Recondition compressor. See section on compressor	
			X	Low oil level in compressor (260) (warm underneath)	Drain system. Measure amount of oil in compressor. Must be at least 1.5 dl (0.3 US pint) refit compressor, replace drying agent in receiver/dryer and refit system. See page 40.	

Symptom				Possible cause	Remedy
No cooling	Poor cooling	Intermittent cooling	Noise		
X				System faults	
X				Evaporator thermostat does not disengage compressor.	Check/replace thermostat. See page 54.
X				Expansion valve stuck in open position	Replace. See page 55.
X				Leakage	Top-up system. Find leakage and repair. See page 16.
X				Blocked hose or component	Check flow through each component.
X				No refrigerant in system	Add refrigerant. See page 16.
	X			Air flow through condenser blocked	Clean condenser
	X			Evaporator blocked on air cooling side	Clean off dirt etc.
	X			Evaporator thermostat incorrectly adjusted	Check thermostat. See page 54.
	X		X	Insufficient refrigerant (whistling noise from evaporator near expansion valve, bubbles in sight glass)	Drain and refill system. See pages 15–16.
	X			Expansion valve capillary tube damaged	Replace. See page 55.
	X			Receiver/dryer blocked	Replace. See page 58.
	X	X		Moisture in system. Cooling capacity good at start (few minutes) then poor. Or poor operation at high ambient temperatures	Drain system, replace receiver/dryer or drying agent, fill with refrigerant. See page 15.
	X			Air in system (bubbles in sight glass)	Drain system, replace receiver/dryer or drying agent, fill with refrigerant. See page 15.
		X		Only 260 1975–77: Suction discharge valve seized. Low pressure in front of compressor, low suction. (Moisture in system)	Replace valves on receiver/dryer. See page 56.
		X		Ice on evaporator air cooling side (thermostat adjusted too low or fan not operating)	Check evaporator thermostat. See page 54. Test with fan on.
		X		Loose evaporator thermostat	Check/replace. See page 54.
		X		Poor contact between expansion valve capillary tube and evaporator outlet or poor insulation	Check
		X		Too large a difference between off and on for evaporator thermostat	Replace. See page 54.
			X	System overfull causes crashing noise or vibrations from high pressure lines, clicking noise from compressor, excessive compressor pressure and suction pressure, hissing noise from expansion valve, bubbles or vapour in sight glass. If compressor valves damaged by overfilling, compressor pressure will be too low	Drain System. Refill according to pages 15–16.
			X	Moisture in system, can cause noise from expansion valve.	Drain system, replace/receiver/dryer or drying agent, fill with refrigerant. See page 15, 16, 58.

Fault tracing Pressure testing

A separate pressure gauge kit or the pressure gauges on the filling station (5143) should be used for the following tests.

See next page for pressures.

Low pressure side	High pressure side	Cause	Remedy	See page	Operation
Low	Normal	1. Expansion valve blocked or seized in closed position	*1. Remove blockage. Replace valve if necessary.	55	G 1-4
		2. Expansion valve capillary tube damage – liquid loss.	*2. Replace expansion valve.	55	G 1-4
		3. Moisture in system, causes ice in expansion valve.	3. Drain system. Replace receiver/dryer. Evacuate system and fill.	15, 16	A 1-4 B 1-26
Low	Low	1. Not enough refrigerant	*1. Drain system, Evacuate and fill	15, 16	B1-26
		2. Only 260 1975-1977 No bubbles in sight glass, pressure gauge readings very low. Possibly no refrigerant in sight glass. This can cause large leakage. Expansion valve can be blocked or seized in open position.	2. Replace expansion valve. Fill system	56	H 1-5
Low	High	1. Blockage in receiver/dryer or connecting pipes.	1. Replace. Remove blockage.	58	K 1-6
High	Normal	1. Expansion valve seized in open position.	*1. Replace	55	G 1-4
		2. Expansion valve coil against evaporator outlet, loose or poorly insulated.	2. Secure coil and insulate.		
		3. Not enough refrigerant. Possibly bubbles in sight glass.	3. Drain system. Evacuate and fill.	15, 16	A 1-4 B 1-26
High	Low	1. Defective compressor	1. Repair/replace. Replace receiver/dryer.	See section on compressor	
Normal-High	High	1. Too much refrigerant	1. Drain system. Evacuate and fill	15, 16	A 1-4 B 1-26
		2. No cold air reaches condenser	2. Remove obstruction. Check cooling fan and belts.		
		3. Blockage in high pressure side	3. Remove blockage.		
		4. Engine radiator overheated	4. Improve cooling		
		5. Air in system. Poor evacuation and filling of refrigerant.	5. Drain system. Replace receiver/dryer. Evacuate and fill according to instructions.	15, 16	A 1-4 B 1-26
Normal	Normal	1. Moisture in system, occasional formation of ice. Low pressure side pressure varies. Cooling ability OK in cool conditions but poor or non existent in hot weather.	1. Drain system. Replace receiver/dryer. Evacuate and fill according to instructions	15, 16	A 1-4 B 1-26

* USA vehicles:

To conform with Warranty policy, the receiver/dryer must be replaced each time the system is opened.

Test conditions (240, 260)

	1975-1978	1979-
Bonnet/hood	Open	Closed
Front doors	Open	Closed
Engine speed	33 r/s (2 000 r/min)	33 r/s (2 000 r/min)

CONTROL SETTINGS

Fan speed	3 (max)	3
Temperature	Cool	Cool
FLOOR	Closed	Closed
	(push bottom out)	(push bottom out)
DEF	Closed	Closed
	(push bottom out)	(push bottom out)
	(push bottom in)	(push bottom in)
REC	Open	Open
Panel vents	Open	Open
Air conditioning switch	On	On, red section

240 Petrol/Gasoline 1975-1978

Ambient temp in front of car °C (°F)	Pressure at compressor inlet bar (psi)	Pressure at compressor outlet bar (psi)
20 (68)	1.7-2.0 (24-28)	10-13 (139-181)
30 (86)	2.2-2.7 (31-38)	13-16 (181-223)
40 (104)	3.0-3.4 (42-47)	18-22 (250-307)

Note! Pressures refer to sea level, and can vary depending on altitude, equipment, test conditions etc.

240 Petrol/Gasoline 1979-

Ambient temp in front of car °C (°F)	Pressure at compressor inlet bar (psi)	Pressure at compressor outlet bar (psi)
20 (68)	1.2-2.6 (17-36)	6.5-9.0 (91-125)
30 (86)	1.4-2.6 (19-36)	8.0-12.0 (111-167)
40 (104)	1.3 (18)	14.8 (206)

260 Petrol/Gasoline 1975-1977

Ambient temp in front of car °C (°F)	Evaporator pressure at relief valve (low pressure) bar (psi)	Pressure at compressor outlet bar (psi)
20 (68)	1.9-2.0 (26-28)	9-13 (125-181)
30 (86)	2.2-2.7 (31-38)	15-18 (209-251)
40 (104)	2.8-3.5 (39-49)	19-23 (265-321)


240 Diesel 1980-

Ambient temp in front of car °C (°F)	Pressure at compressor inlet bar (psi)	Pressure at compressor outlet bar (psi)
20 (68)	1.0-2.7 (14-37)	6.7-10.9 (93-152)
30 (86)	1.0-2.7 (14-37)	9.4-14.1 (131-196)
40 (104)	1.4 (19)	18.0 (251)

260 1978-Petrol/Gasoline

Ambient temp in front of car °C (°F)	Pressure at compressor inlet bar (psi)	Pressure at compressor outlet bar (psi)
20 (68)	1.0-2.4 (14-33)	6.5-9.3 (90-130)
30 (86)	1.0-2.3 (14-32)	8.7-13.5 (121-188)
40 (104)	1.2-2.2 (17-31)	10.5-16.7 (146-233)

Modifications

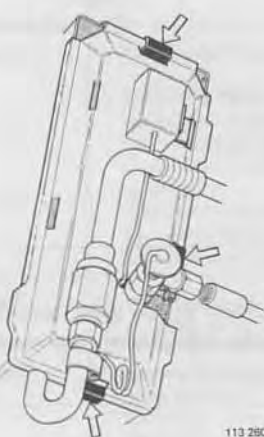


1976 model year

New evaporator housing cover

Butyl tape used to seal evaporator outlet, cover and evaporator housing.


NOTE! Expansion valve must not be insulated.

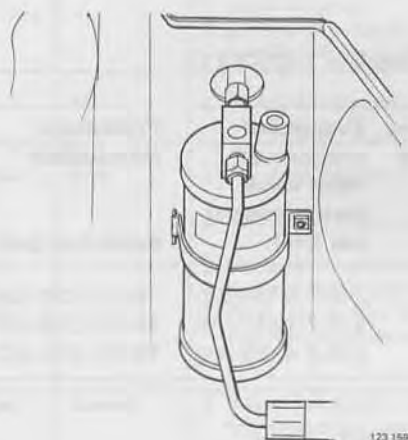

1978 model year

Receiver/dryer relocated


Receiver/dryer moved to front panel next to engine radiator. Same receiver/dryer used on 240 and 260 series.

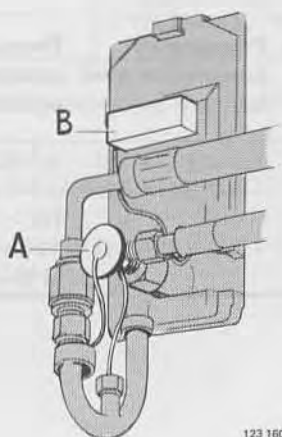

240 expansion valve and thermostat fitted on 260.

Expansion and discharge pressure valves on 260 were discontinued in 1978. The valves, which were incorporated in the receiver/dryer, have been replaced by the 240 expansion valve (A).

Same thermostat (B) is used for 240 and 260 series. Compressor does not operate constantly but only when temperature of evaporator exceeds a predetermined level.

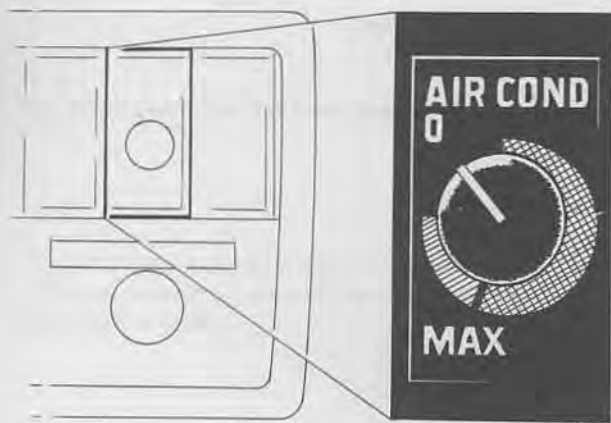

127 063


1979 model year

Adjustable thermostat

Previously the thermostat could be switched on by means of a rocker switch, and the temperature adjusted by a lever. 1979- models now have an adjustable knob.

The capillary tube now leads from the thermostat to the evaporator outlet. The function of the thermostat is the same as before.

Note! The orange section beyond MAX should only be used when quick cooling is required, and in extreme conditions such as driving in desert regions, otherwise water which has condensed on the evaporator will freeze and obstruct the passage of air.

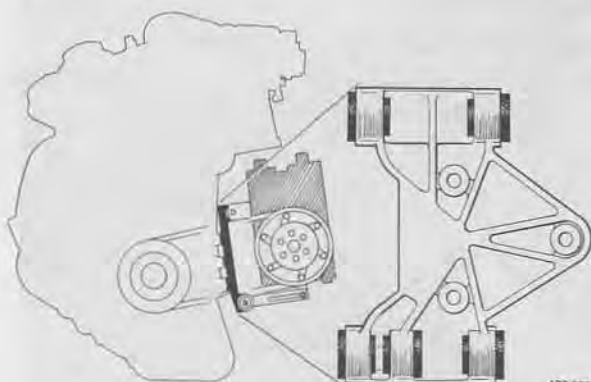


127 062

240

Rubber mounted compressor (applies to vehicles without power steering).

Larger capacity compressor (240 petrol/gasoline only).

York A 210. Capacity $164 \text{ cm}^3 (10 \text{ in}^3)$ (previously $147 \text{ cm}^3 (9.0 \text{ in}^3)$).

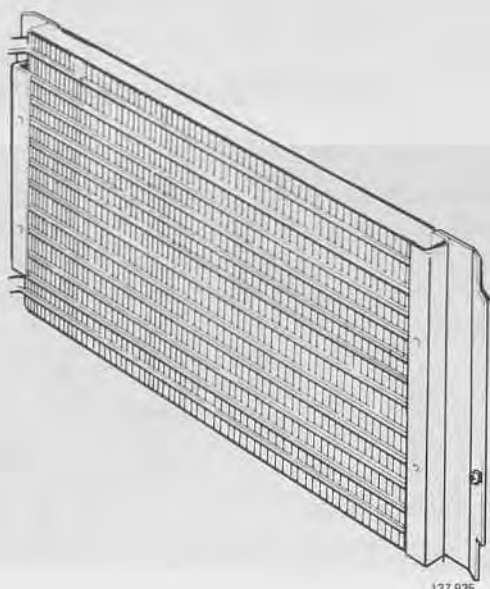

127 935

Larger condenser

Refrigerant volume increased accordingly:

240: 1.3 kg (2.9 lbs)

260: 1.5 kg (3.3 lbs)

New type of AC compensation for engine

Operates in principle by supplying extra fuel-air (carburetted engines or air (injected engines) to engine when compressor is engaged.

The system comprises a solenoid valve, a vacuum valve and vacuum hoses.


See AC compensation, pages 61-67

Modifications

1980 model year

260 compressor

Millimetre (mm) threads used for mounting bolts, previously inches.

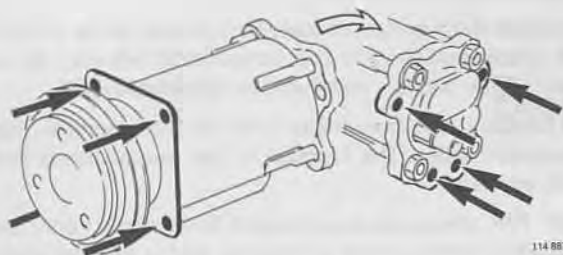


114 887

Diesel

Sankyo compressor used, m m threads.


Note! Diesel engines do not have an AC compensation system (idle speed compensation).

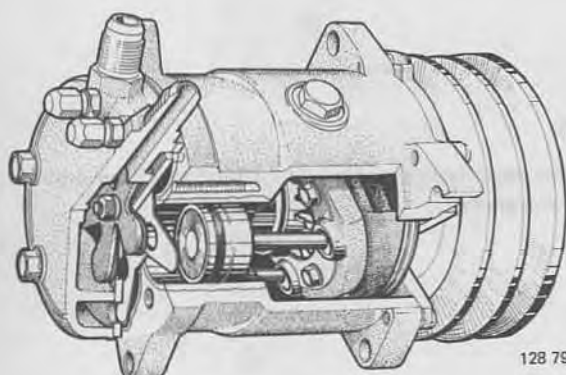

128 795

Delayed engagement of compressor

Delay relay fitted to 1980- vehicles, engages compressor approx. 10 seconds after engine start and relay receives alternator voltage.

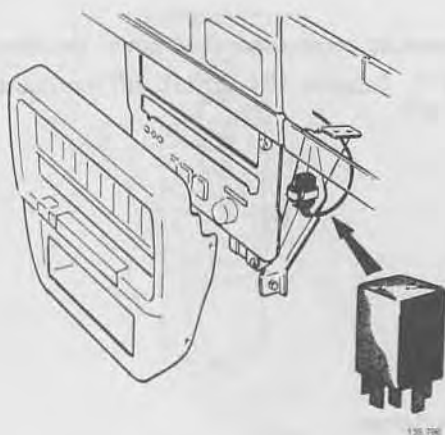

136 796

1981 model year

**Cut-out switch on receiver/dryer
(USA only)**

Senses the receiver/dryer pressure. If this is too low, the switch cuts off the current to the compressor, thus preventing damage.




136 796

A. Draining refrigerant

Special tool: 5143

Read the safety precautions on page 7.

The AC system must be drained if the refrigerant circuit is disconnected or if one or more of the components is replaced. The pressure gauge set on filling station (5143) should be used; make sure that the pressure gauges are closed before connecting the hoses.

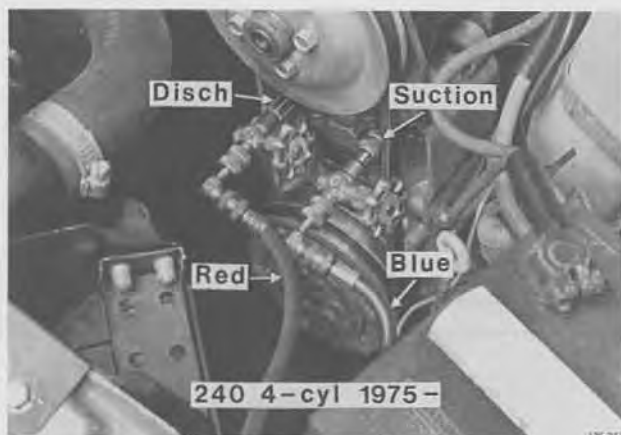

Connections


Nipples should be finger tight only.

Disconnect the battery negative lead.

A1

240 Petrol/gasoline and diesel

Remove the cover nuts and connect the blue hose to the compressor "suction" side and the red hose to the outlet side marked "disch".

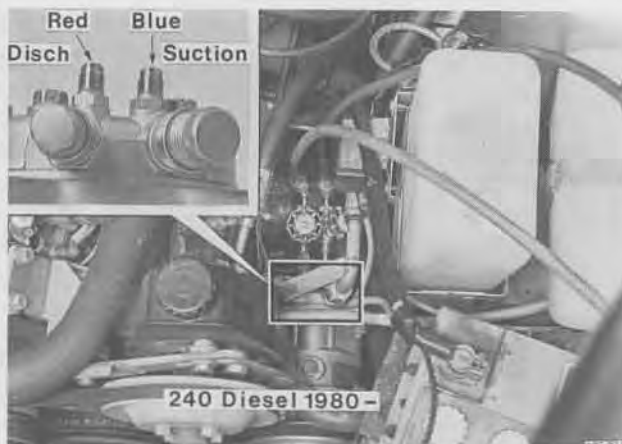

A2


260 1975-1977

Remove the cover nuts and connect the red hose (high pressure) to the compressor (small pipe) and the blue hose (low pressure) to the equalising valve on the suspension turret.


A3

260 1978-

Remove the cover nuts and connect the red hose (high pressure) to the compressor (small pipe) and the blue hose (low pressure) to the compressor (large pipe).

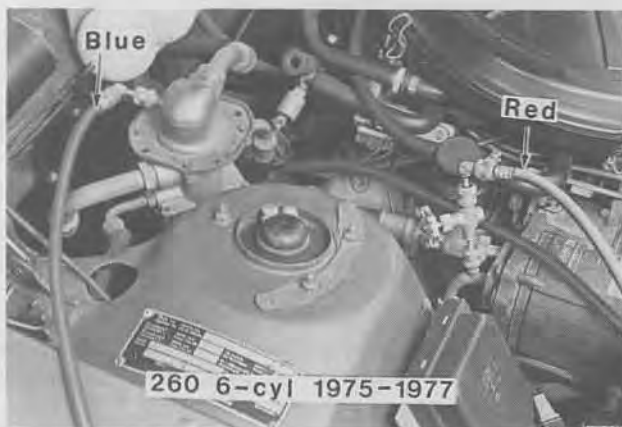

A4

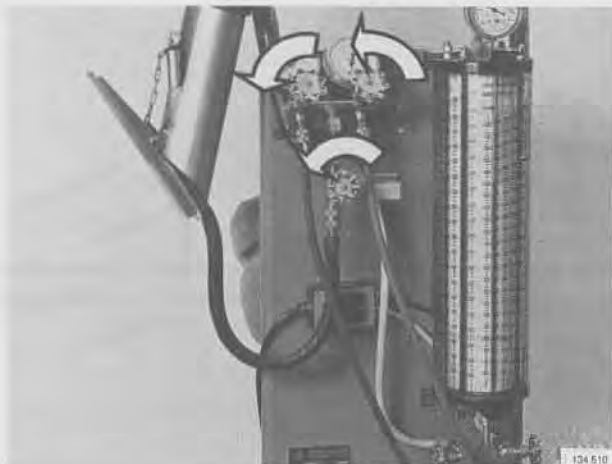

The short centre hose should be placed in an exhaust gas extractor hose as a safety precaution.

Open the gauge valves and the valves on the components. Open the valve on the centre hose very carefully so that the refrigerant slowly flows out.


Caution! If the refrigerant flows out too quickly lubricating oil will be drawn out of the system.

Close the valves when the gauges indicate zero.

B. Filling refrigerant


Special tools: 5143, 5144, 5153, 9942

Read the safety precautions on page 7.

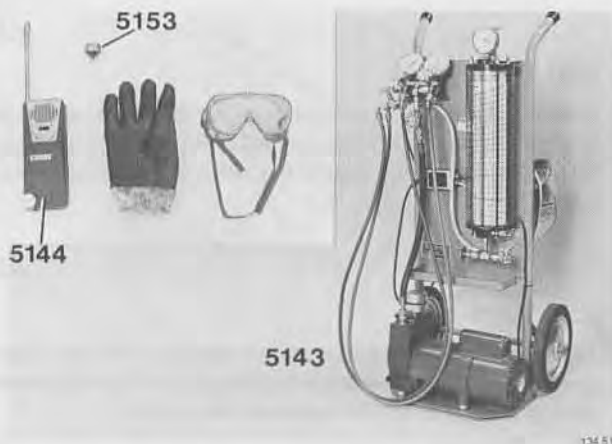

Equipment required

Filling station	5143
Leak detector	5144
Nipple	5153
Thermometer	9942
Rubber gloves, safety glasses.	

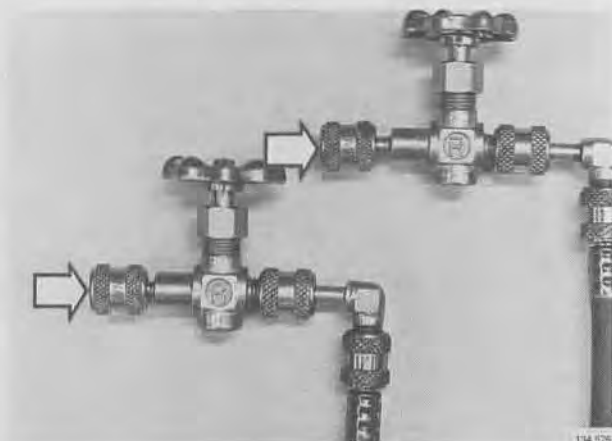

Evacuating system, filling measuring cylinder

B1

Disconnect the battery negative lead.

Check that:

- hoses and pressure gauges are correctly connected
- all valves are closed
- vent screw on vacuum pump is closed.

Make sure that spacers are fitted to the ends of the hoses. The spacers, which open the valves, should be placed in the nipples at the end of each hose.

B2

Connect hoses to component

See page 15.

B3

Connect centre short hose to vacuum pump

B4

Make sure that measuring cylinder is empty

This can be checked at the liquid indicator in the centre of the cylinder. If empty, it must be evacuated at the same time as the system.

Method:

Open the outlet valve on the measuring cylinder, see fig.

Caution! Do not open the valve until the cylinder is drained.

B5

Fully open gauge valves and valves at components

B6


Start vacuum pump

B7


Open the vacuum pump valve slowly (the centre valve below the pressure gauges).



134 512

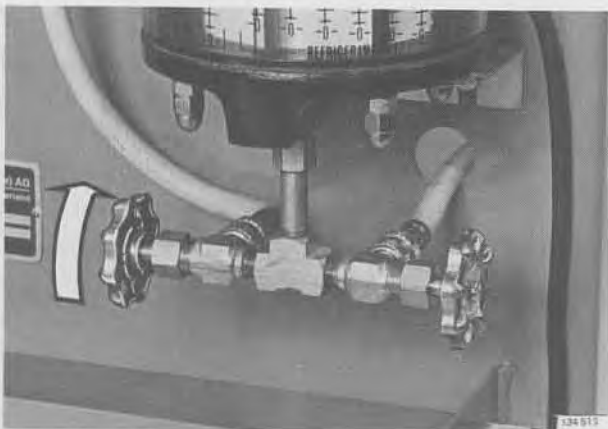

134 513

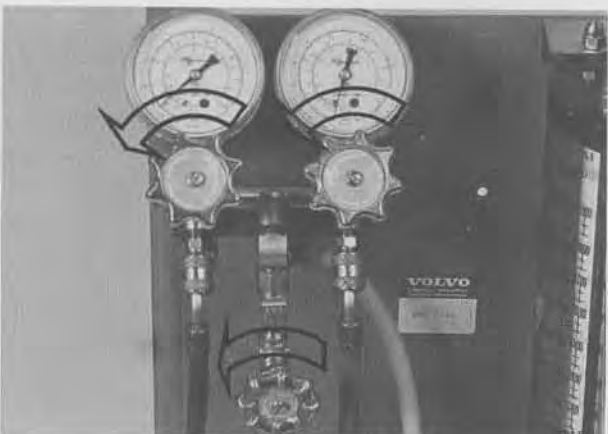



134 517

B8

Turn vent screw on vacuum pump one turn clockwise

Leave the pump on 1/2–1 minute and then close the vent screw.

This is performed to remove moisture from the system and from the oil in the pump. A higher depression can be obtained in this way.



134 516

B9

Evacuate system until low pressure gauge (on left) indicates nearly – 1 bar (–14 psi), then run vacuum pump for a further 30 minutes.

Note! If the temperature is below 30°C (86°F) the vacuum pump should be left running for a further 20 minutes, all together 50 minutes.

The above values are valid at (or close to) sea level. Pressures should be reduced by 0.034 bar (0.47 psi) for every 300 metres 984 ft above sea level.

E.g. 1 500 metres (4 920 ft) above sea level
 $= 5 \times 0.034 \Rightarrow 0.17$ bar (2.37 psi) reduced pressure \Rightarrow approx. – 0.82 bar.

B10

Close the vacuum pump valve and also the outlet valve on the measuring cylinder (if evacuated).

Switch off the vacuum pump.

If the specified depression cannot be obtained or if it drops on closing the valves, there is a leak in the system.

Find and correct the leak and evacuate the system once more.



B11

The following procedures only apply if the measuring cylinder has been evacuated or if there is less than 1 600, 1 800 or 2 000 grammes refrigerant in it (depends on year and vehicle type).

In other cases proceed to leak testing, B16

1 600 g = 3.6 lbs, 1 800 g = 4 lbs, 2 000 g = 4.5 lbs

B12

Open

- valve on refrigerant container
- valve for input refrigerant on measuring cylinder.

B13

Open the upper valve **above** the measuring cylinder and transfer a few hundred grammes of refrigerant. Close the valve.

B14

Record pressure and set scale on measuring cylinder.

Turn the scale (marked R 12) to the same pressure as indicated on the pressure gauge.

E.g. pressure gauge shows 4.9. Set the measuring cylinder with the 4.9 scale above the refrigerant indicator.

Open upper valve on measuring cylinder and transfer 1 600 (3.6 lbs), 1 800 (4 lbs) or 2 000 (4.5 lbs) grammes refrigerant (depending on model year and vehicle type).

1 100 (2.5 lbs), 1 300 (2.9 lbs) or 1 500 (3.4 lbs) grammes in system plus 200 grammes for leak test and moisture removal. The rest is necessary to prevent the measuring cylinders from draining completely which would necessitate evacuating the cylinder before the next filling.

Close valve.

B 15




Close

- valve for input refrigerant
- valve on refrigerant container

B16

Leak test

Open the outlet valve on the measuring cylinder and transfer 200 grammes (0.4 lb) of refrigerant to the system. Close the valve.

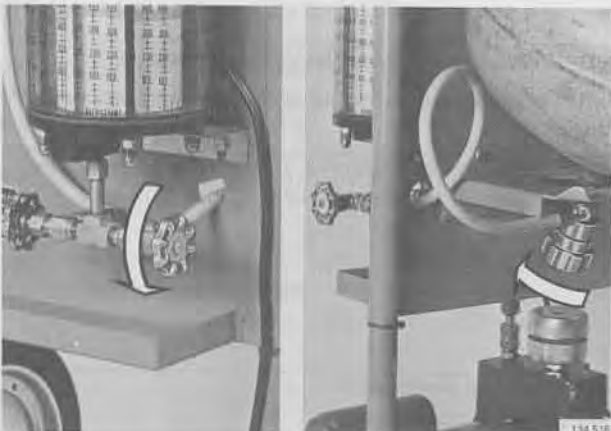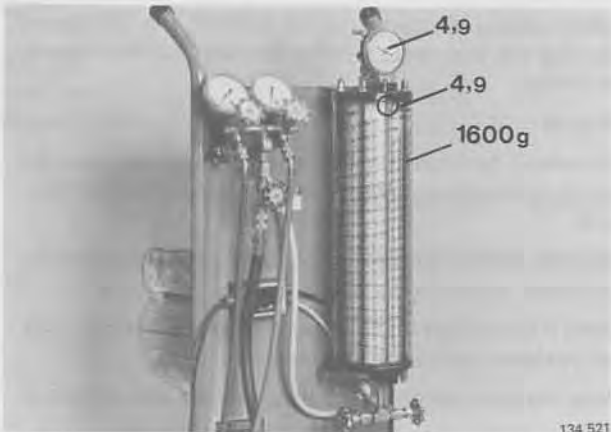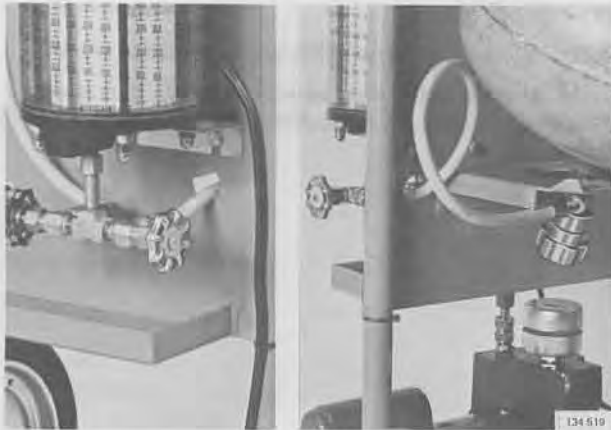



B17

Check all connections with leak detector 5144

Set the detector to the most sensitive field (buzzes nearly all the time). Rectify any leaks and perform a new leak test if necessary.

B18

Filling

Before adding refrigerant to the system, the refrigerant used for the leak test must be drained and the system evacuated.

Method:

Disconnect the hose from the vacuum pump and place the end of the hose in an exhaust gas extractor (safety precaution).

Open the valve on the centre hose very carefully so that the refrigerant **slowly** flows out.

Note! If the refrigerant flows out too quickly lubricating oil will be drawn out of the compressor.

Close the valve when the gauges indicate approximately zero.

B19

Reconnect centre hose to vacuum pump.

Switch on the vacuum pump and open the pump valve slowly.

Leave the pump running for 10 minutes after the low pressure gauge indicates nearly -1 bar (-14 psi).

B20

Close vacuum pump valve

Switch off vacuum pump

B21



Fill refrigerant

Open the outlet valve on the measuring cylinder and transfer 1 100, 1 300 or 1 500 grammes of refrigerant to the system. (Amount depends on model year and vehicle type, see pages 2-4).

Switch on the heater unit for the cylinder if it is difficult to see the last 300-400 grammes.

Note! If the measuring cylinder is drained completely it must be evacuated before the next filling.

Close both the gauge valves and make sure that the other valves are closed. Reconnect the battery earth lead. Test the system, see next page.

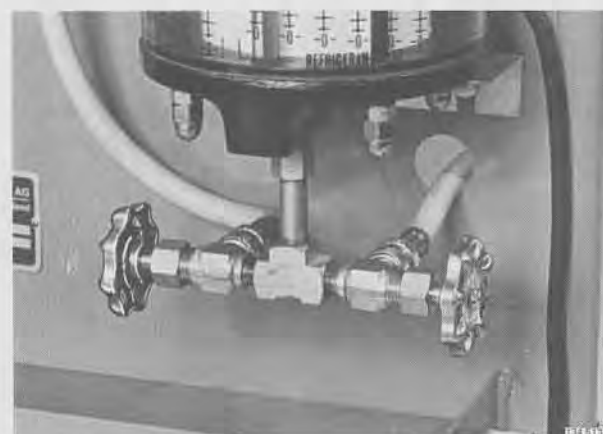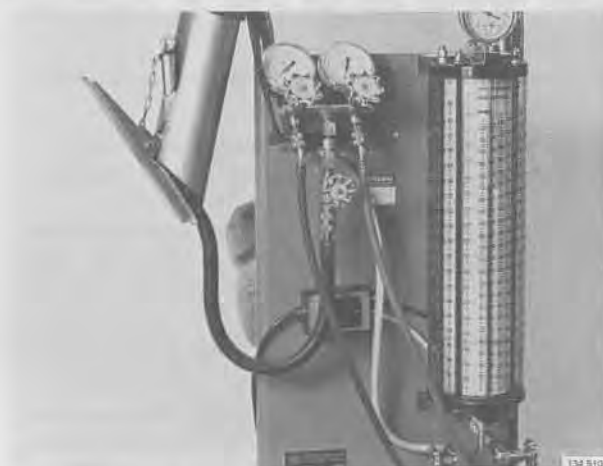

Performance test

B22

Test conditions (240, 260)

	1975-1978	1979-
Bonnet/hood	Open	Closed
Front doors	Open	Closed
Engine speed	33 r/s (2 000 r/min)	33 r/s (2 000 r/min)

CONTROL SETTINGS

Fan speed	3 (max)	3
Temperature	Cool	Cool
FLOOR	Closed	Closed
	(push button out)	(push button out)
DEF	Closed	Closed
	(push button out)	(push button out)
REC	(push button in)	(push button in)
Panel vents	Open	Open
Air conditioning switch	On	On, red section

Recorded operating conditions 240

Applies to vehicles equipped with a viscous coupling fan.

Note! Pressures refer to sea level, and can vary depending on altitude, equipment, test conditions etc.

B23

240 Petrol/Gasoline 1975-1978

Ambient temp in front of car °C (°F)	20 (68)	30 (86)	40 (104)
Air temp at panel vents °C (°F)	8-10 (46-50)	13-17 (55-63)	20-26 (68-79)
Pressure at compressor inlet (large connection) MPa	0.17-0.20	0.22-0.27	0.30-0.34
psi	24-28	31-38	43-48
Pressure at compressor outlet (small connection) MPa	1.0-1.3	1.3-1.6	1.8-2.2
psi	142-185	185-227	256-313

B24

240 Petrol/Gasoline 1979-

Ambient temp in front of car °C (°F)	20 (68)	30 (86)	40 (104)
Air temp at panel vents °C (°F)	9-12 (48-54)	9-12 (48-54)	9-12 (48-54)
Pressure at compressor inlet (large connection) MPa	0.12-0.26	0.14-0.26	0.13
psi	17-37	20-37	18
Pressure at compressor outlet (small connection) MPa	0.65-0.90	0.80-1.20	1.48
psi	92-128	114-171	210

B25

240 Diesel 1980-

Ambient temp in front of car °C (°F)	20 (68)	30 (86)	40 (104)
Air temp at panel vents °C (°F)	8-12 (46-54)	8-12 (46-54)	8-12 (46-54)
Pressure at compressor inlet (large connection) MPa	0.1-0.27	0.1-0.27	0.14
psi	14-38	14-38	20
Pressure at compressor outlet (small connection) MPa	0.67-1.09	0.94-1.41	1.8
psi	95-155	134-200	256

Recorded operating conditions 260

Applies to vehicles equipped with a viscous coupling fan

Note! Pressures refer to sea level, and can vary depending on altitude, equipment, test conditions etc.

B26

260 Petrol/Gasoline 1975-1978

Ambient temp in front of car °C (°F)	20 (68)	30 (86)	40 (104)
Air temp at panel vents °C (°F)	8-12 (46-54)	14-20 (57-68)	20-28 (68-82)
Evaporator pressure at relief valve MPa	0.19-0.20	0.22-0.27	0.28-0.35
psi	27-28	31-38	40-50
High pressure at compressor MPa	0.9-1.3	1.5-1.8	1.9-2.3
psi	130-185	210-256	270-320

B27


260 1979- Petrol/Gasoline

Ambient temp in front of car °C (°F)	20 (68)	30 (86)	40 (104)
Air temp at panel vents °C (8°F)	9-12 (48-54)	9-12 (48-54)	9-12 (48-54)
Pressure at compressor inlet (large connection) MPa	0.10-0.24	0.10-0.23	0.12-0.22
psi	14-34	14-33	17-32
Pressure at compressor outlet (small connection) MPa	0.65-0.93	0.87-1.35	1.05-1.67
psi	92-132	124-192	149-237

C. York compressor – B 20 engine

Removing – fitting – belt adjustment

Note! Check oil level before fitting a new or reconditioned compressor, see page 26.

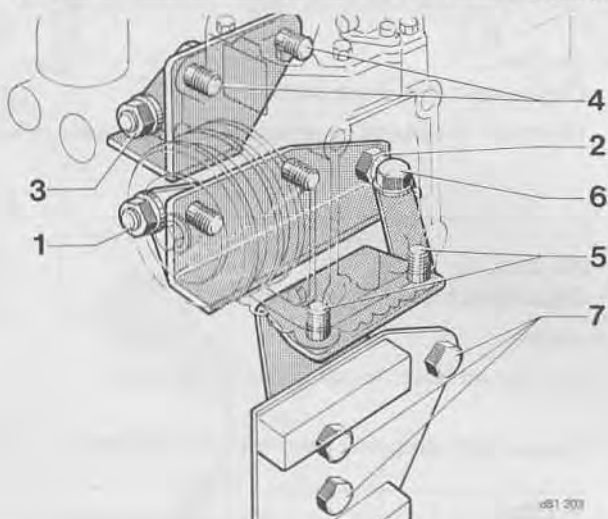

C1

Removing

Drain refrigerant from system, see page 15.

Disconnect from compressor:

- electric leads
- refrigerant hoses (plug ends immediately).

Detach the compressor from the mounting bracket.

C2

Fitting

Position the compressor, do not tighten the retaining bolts yet.

Fit the stay between the centre and lower brackets.

Tighten the bolts in the order indicated adjacent.

Tightening torques:

Compressor bolts max. **30 Nm** (22 ft. lbs)

Remaining bolts **33–41 Nm** (24–30 ft. lbs.)

C3

Fit belt

Adjust the belt tension by means of the air pump/roller.

It should not be possible to depress the belt by more than 6–8 mm (measured between air pump – compressor). Connect the refrigerant hoses. Use new O-rings, smeared with compressor oil.

Tightening torque 30 Nm (22 ft. lbs).


Replace receiver/dryer or drying agent. See page 58.

Add refrigerant to the system, see page 16.

York compressor – B 17–B 23 engines

Removing – fitting – cleaning

Note! Check oil level before fitting a new or reconditioned compressor, see page 26.

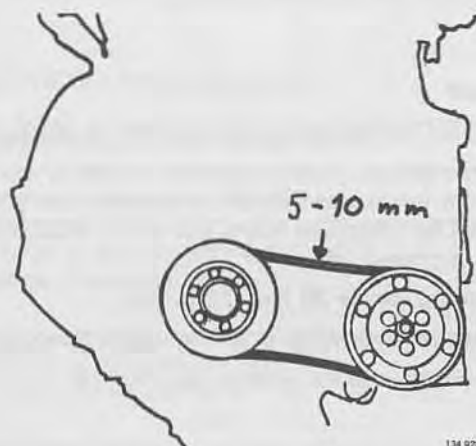

C4

Removing

Drain refrigerant from system, see page 15.

Cars with power steering

Detach the power pump and hang it from the wheel housing.

C5

Cars with twin drive belts

Lift off the drive belts by removing the crankshaft pulley.

C6

All cars:

Disconnect from compressor:

- wires
- refrigerant hoses (plugs ends immediately).

Remove the compressor and mounting bracket.

Fitting

C7

Cars without power steering

Fit the compressor and drive belt(s).

Reconnect the refrigerant hoses. Use new O-rings, smeared with compressor oil.

Tightening torque 30 Nm (22 ft. lbs)

Set belt tension by moving the compressor. It should not be possible to depress the belt by more than 5–10 mm (0.2–0.4 in).

Replace the receiver/dryer or drying agent, see page 59.


Add refrigerant to the system, see page 16.

C8

Cars with power steering and twin drive belts

Fit the compressor.

C9

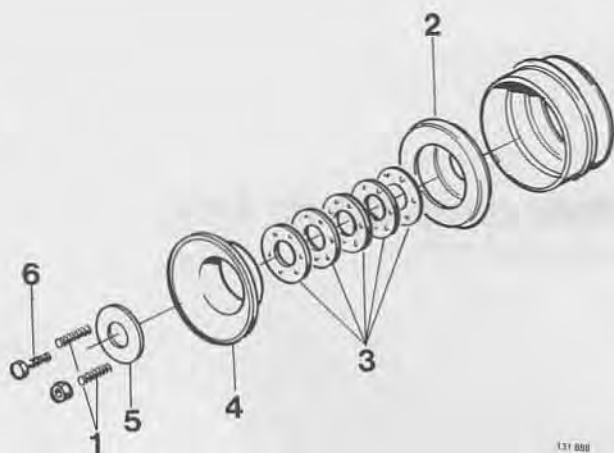**Fit:**

- 1 – studs opposite each other
- 2 – inner pulley
- 3 – five washers
- 4 – compressor drive belt and outer pulley
- 5 – outer washer
- 6 – screws and nuts.

Note! The crankshaft should be rotated whilst tightening the pulley bolts, and also when fitting the belt. (2–3 turns).

C10

Check belt tension: It should not be possible to depress the belt by more than 3–10 mm (0.12–0.4 in), (80–100 N=18–22 lbs).

Incorrect belt tension

Place washer (s) between the pulley halves to slacken the belts. Remove washer(s) to tighten the belts.

One washer alters the belt tension by about 5 mm (0.2 in).

Reconnect the refrigerant hoses. Use new O-rings, smeared with compressor oil.

Tightening torque 30 Nm (22 ft. lbs.)

Replace the receiver/dryer or drying agent. See page 58.

Add refrigerant to the system, see page 16.

C11

Cars with power steering and one drive belt

Fit the compressor.

C12

Fit drive belt

Fit the belt over the crankshaft, compressor and power pump.

Tighten the belt by moving the power pump.

Check the belt tension as follows:

Attach tool **5197** to the belt between the crankshaft pulley and power pump.




The belt tension should be 17–18 units.

Reconnect the refrigerant hoses. Use new O-rings, smeared with compressor oil.

Tightening torque 30 Nm (22 ft. lbs.).


Replace the receiver/dryer or drying agent. See page 58.

Add refrigerant to the system, see page 16.

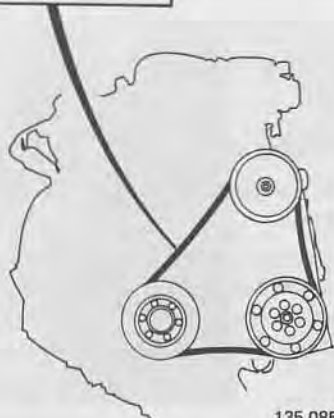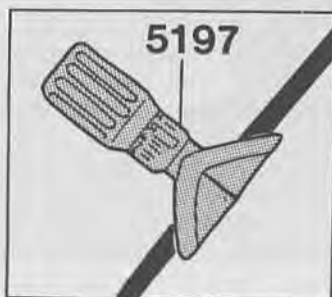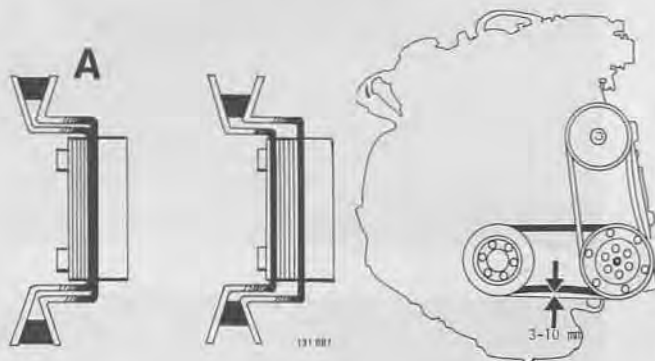

135 085

Oil level check – York compressor

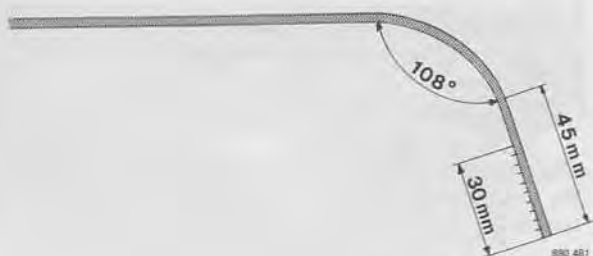

A dipstick can be made to measure the level of oil in the compressor. The dipstick can be shaped from a 3 mm diameter brass wire, and graduated with 10×3 mm marks as shown above. Each division corresponds to approximately 0.03 dm³ (0.06 US pint).

C13

Normally it is not necessary to check the oil level on installed compressors, but new or reconditioned units must be checked before installation and refrigerant is added. New compressors are charged with oil during manufacture.

WARNING

If the oil level in an installed compressor is checked it is important that the refrigerant is drained from the system before the oil plug is unscrewed. If this precaution is not followed the refrigerant will spray out of hole, taking the oil in the compressor along with it.

C14

Checking

The graduated part of the dipstick should be held at right angles to the bottom of the compressor. The correct oil level for new compressors is 28–29 mm (0.3 dm³ = 0.06 US pint).


On installed compressors which have been run, so some of the oil will have been circulated in the system and consequently the level of oil in the compressor will be considerably lower (20–25 mm = 0.8–1.0 in) than specified above. If the level is less than 20 mm (0.8 in) top up to 20 mm.

C15

Adding oil

Only compressor oils may be used to top-up the system, see fig.

Before unscrewing the oil plug check that the O-ring is intact and that the sealing surfaces on the plug and crank-case are undamaged. The oil plug should be tightened to approximately 5 Nm (4 ft. lbs.).

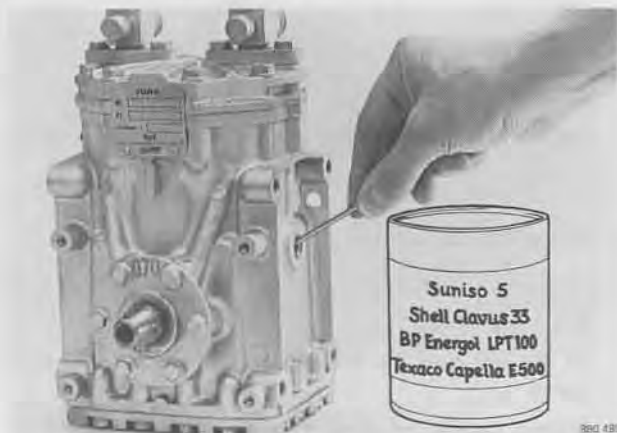

York compressor, clutch replacement (on car)

(Not necessary to drain refrigerant)



C16

Removing

Lock clutch and remove pulley centre bolt

Turn on the ignition to engage the electromagnetic clutch and counterhold the pulley with the drive belt. Remove the bolt and free the pulley from the shaft by screwing in a 5/8" UNC (A) bolt in the centre.



C17

Remove magnet

Disconnect lead (2).

Remove:

- four bolts (1).
- magnet (3).

C18

Fitting

Fit the magnet with the lead turned upward, and connect the cable. Make sure that the key is located correctly in the groove. Attach the pulley.



C19

Fit centre bolt

Turn on the ignition and counterhold the pulley with the drive belt when tightening the bolt.

Tightening torque 25-30 Nm (18-30 ft. lbs.)

Turn the pulley and make sure that it does not contact the magnet.


C20

Fit belt

See page 24 for B20 engines, and page 25 for B21.

Disassembling York compressor (Off car)

Note! The valve plate is only available as a complete unit including valves, and can be replaced without removing the compressor from the vehicle. See operations C24–25, C38. It is however necessary to drain the refrigerant from the system, see page 15.

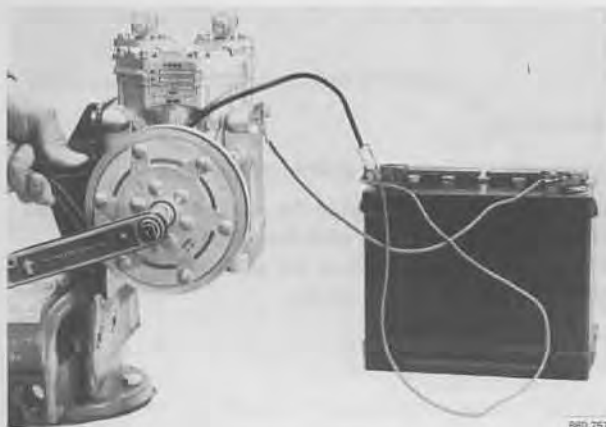

989 757


C21

Remove clutch and magnet

Lock the clutch by connecting a battery. Counterhold the pulley as illustrated and remove the centre bolt.

Screw in a 5/8" UNC bolt and remove the pulley.

Lift out the magnet.

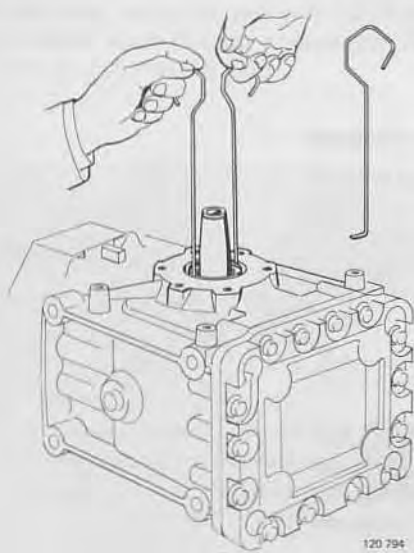

120 794

C22

Remove key and end washer

C23


Remove seal

Carefully lift out the seal with the aid of a steel wire. Make sure that there are no burrs or scores on the shaft, and that the inner sealing surfaces are clean.


C24

Remove service valves and bolts retaining compressor top

Remove compressor top

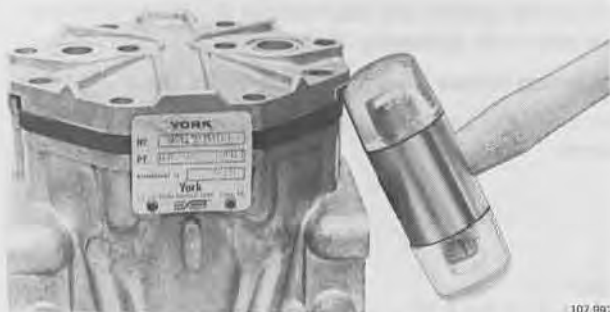

107 89;

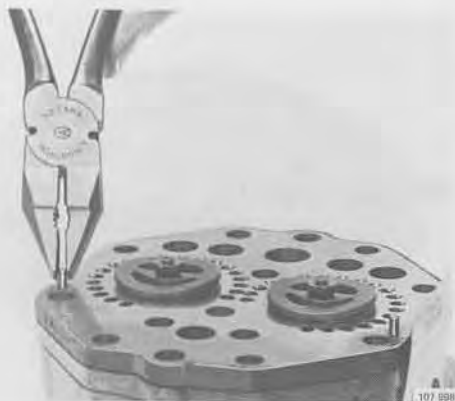

C25

Remove:

- guide pin
- valve plate (if necessary tap the sides lightly with a plastic mallet).

Carefully scrape off pieces of gasket (if any) from the crankcase and cover.

Valve plate replacement only, see page 31 operation C38.



C26


Unscrew and remove bottom cover and clean crankcase and cover mating surfaces.

C27

Identify con rods and caps

C28

Remove con rod bolts, lift off cap and press out con rod and piston through cylinder.

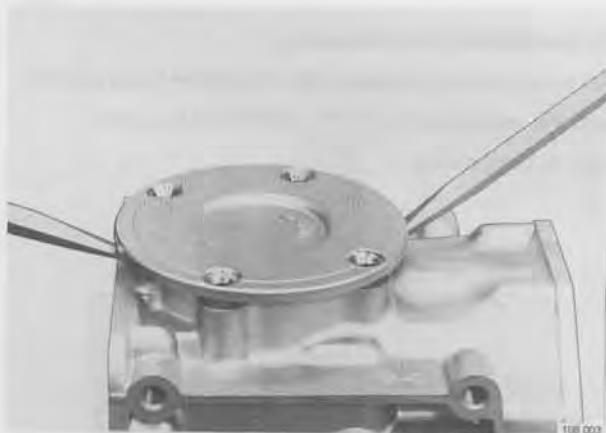

C29

Remove bearing cover plate


Clean and dry the crankcase and shaft to remove all traces of oil.

C30

Remove crankshaft bearing

Heat the crankcase to 150°C (300°F) in an oven. (This makes it easier to remove the crankshaft and bearing.)

If the crankshaft is undamaged, and only the bearing is to be replaced, clamp the centre section of the shaft in a vice and lever off the bearing with two screwdrivers.

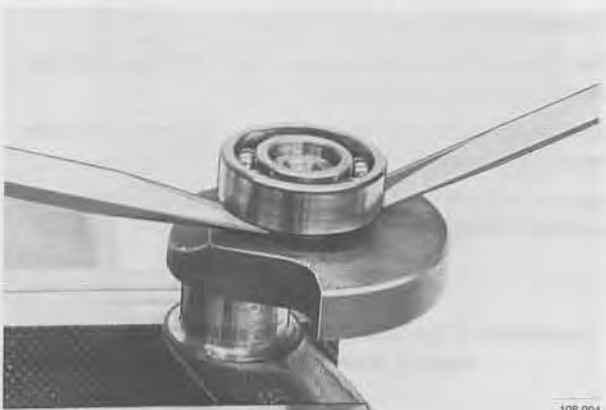

Assembling York compressor



108 008

C31

Fit crankshaft rear bearing

Fit the bearing by exerting pressure on the inner race.




108 008

C32

Fit crankshaft front bearing

Make sure that the bearing seat is free from burrs and dirt.
Heat the crankcase to 150°C (300°F) in an oven.
Press in the bearing.

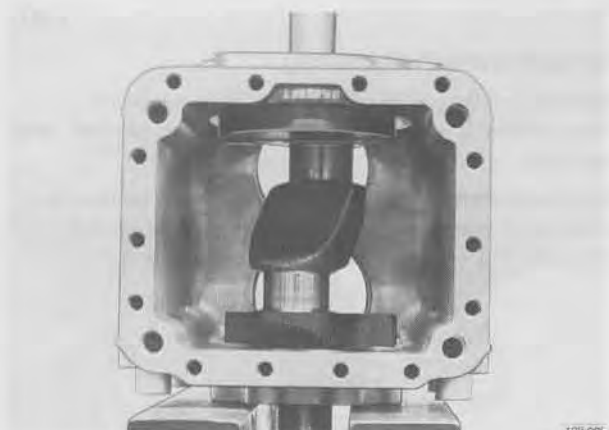

108 008

C33

Fit crankshaft

After the crankcase has cooled place it in a press as illustrated resting the front end on a support.

Insert the crankshaft and carefully align it in relation to the bearing inner race.

Press in the shaft until the bearing inner race contacts the crankshaft flange.

Important If the crankshaft does not contact the bearing inner race, damage will result.

C34

Fit new rubber seal to rear cover plate



108 000


C35

Lightly press on cover plate and tighten all screws

Tighten to a torque of 20 Nm (15 ft. lbs.).

C36

Fit pistons and con rods

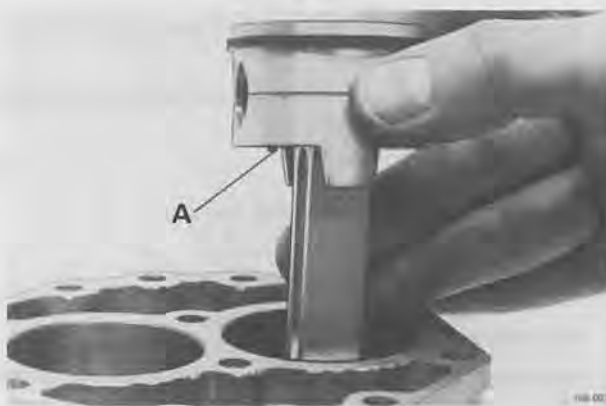

108 000

Note! The lock pin (A) in the gudgeon pin must point towards the centre of the compressor.

Assemble con rods and caps and tighten to a torque of 20 Nm (15 ft. lbs.).

Check for smooth operation by turning the shaft a few turns.

C37

Fit bottom cover with new gasket and tighten crosswise to 20–30 Nm (15–30 ft. lbs.)

C38

Fit valve cover and top cover

Smear compressor oil on to the crankcase, valve cover and top cover sealing surfaces.


Fit the crankcase guide pins.

Place a new gasket on the crankcase and make sure when fitting the valve plate that the nuts point upwards.


Place a new gasket between the valve cover and top cover.

Smear the sealing surfaces of the service valves with compressor oil and place new seals in the top cover.

Secure the valves with the four long bolts and tighten the remaining bolts in the order indicated adjacent to a torque of 20–30 Nm (15–30 ft. lbs.).

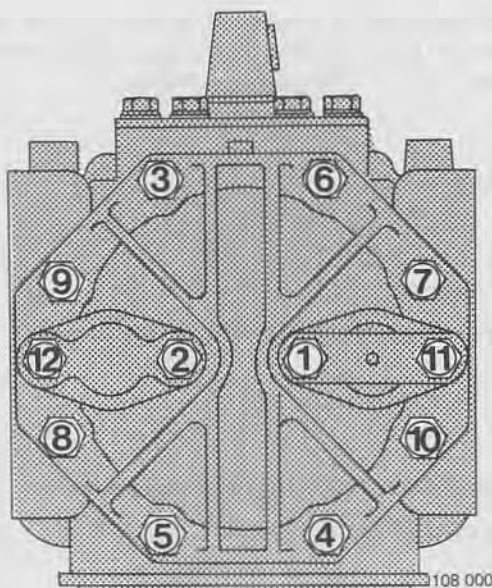

108 000

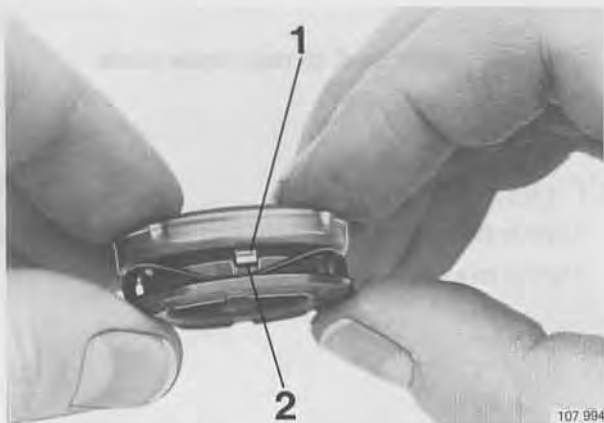

C39

Check new seal

Compress seal a few times.

The lugs (1) must be able to move in and out of the recesses (2).

C40

Fit seal

Immerse the seal in compressor oil and press it on to the shaft.

Place the piston ring in its holder with the finely ground surface (A) facing upward.

C41

Press down seal with end washer

C42

Fit end washer

Fit a new seal under the washer. Oil the sealing surfaces with compressor oil and centre it before tightening.

C43

Fit cover washer

The washer can be pressed on by hand. It slides on to the shaft and takes up the correct position when the clutch is fitted.

C44



Fit clutch

Tighten the centre bolt to **25–30 Nm** (18–22 ft. lbs.).

C45


Add 300 cm³ (0.6 US pint) compressor oil

See page 26 for oil level check.

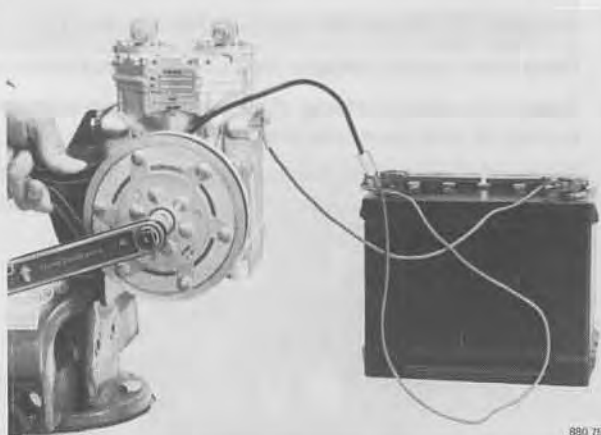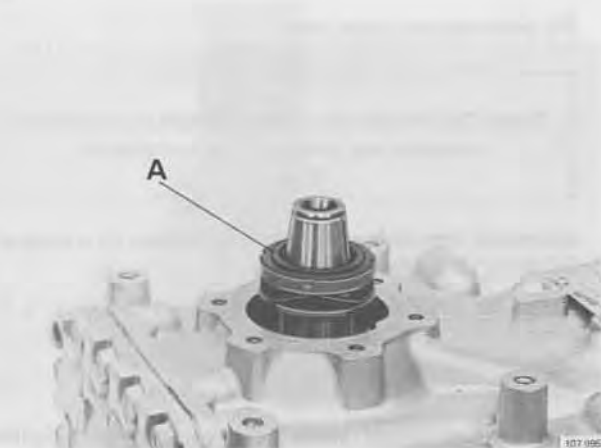

D. Sankyo compressor SD 508, 510

Removing – fitting – belt adjustment

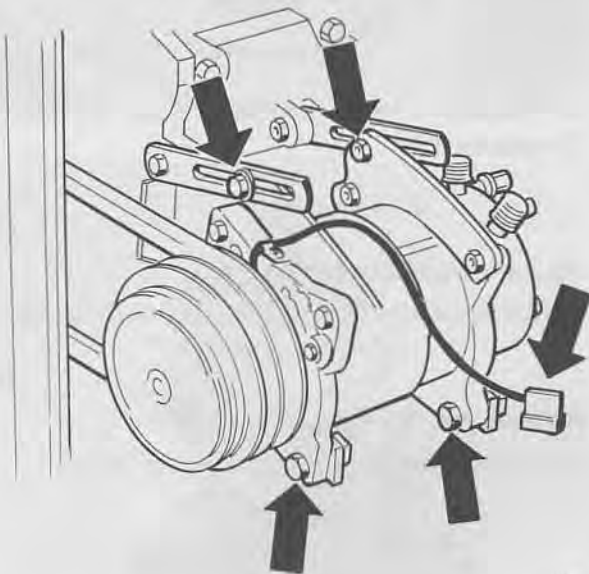

Removing

Drain refrigerant, see page 15.

Disconnect from compressor:

- leads
- refrigerant hoses (plug ends immediately).

D1


Slacken the mounting bolts, arrowed.

D2

Lift off the drive belt, remove the mounting bolts and lift away the compressor.

D3

D4

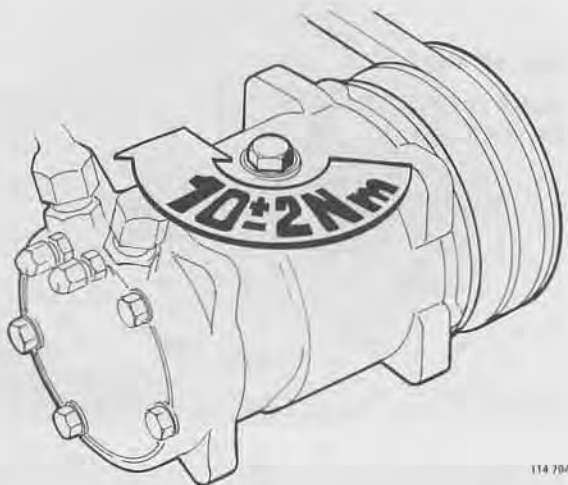

Fitting – belt adjustment

If the compressor has been replaced or repaired the oil level must be checked.

Method:

Drain the old compressor oil into a measuring cylinder and note the amount.

Add the same amount of new oil to the compressor before installing it.

The amount of oil added must be more than 40 cm³ (0.08 US pint).

Smear the plug O-ring with compressor oil and tighten the plug to a torque of 10±2 Nm (7.4±1.5 ft. lbs.).

If for instance a hose has burst and refrigerant has been lost very quickly, add 135 cm³ oil to the compressor.

D5

Attach the compressor loosely. Adjust the belt tension and tighten the mounting bolts. It should not be possible to depress the belt by more than 5–10 mm (0.2–0.4 in).


Reconnect the lead.

Reconnect the refrigerant hoses. Use new O-rings, smeared with compressor oil.

Tightening torque 30 Nm (22 ft. lbs.)

Replace receiver/dryer or drying agent, see page 58.

Fill refrigerant, see page 16.

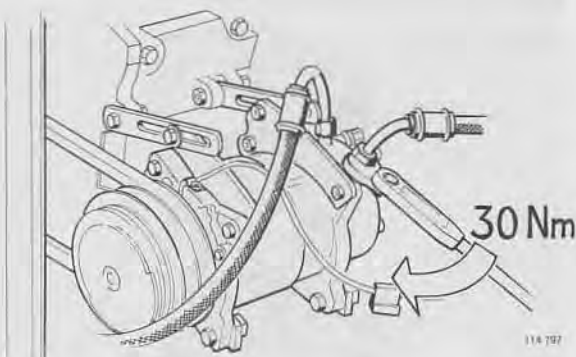

Clutch replacement, Sankyo compressor SD 508, 510

Includes replacement of pulley, carbon seal, bearings (2x), magnet

Special tools: 1801, 2261, 5137, 5142, 9175



Disassembly

D6

Mount compressor in vice

Use protective jaws to avoid damaging the compressor.

D7

Remove nut (19 mm) from clutch


Use a hook wrench to counterhold the clutch.



D8

Pull off clutch

Attach puller **2261** with $3 \times 1/4'' \times 1''$ bolts and pull off the clutch.

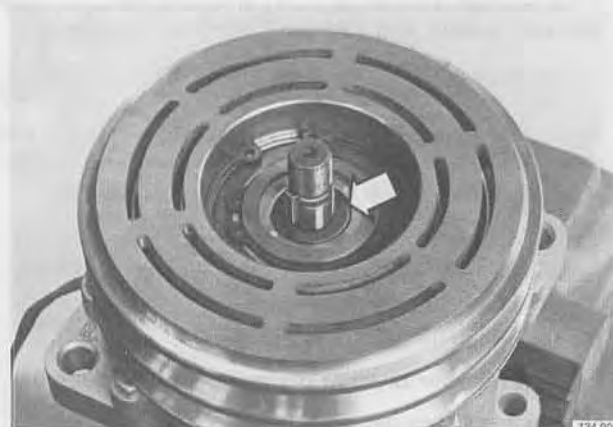


D9

Remove retainer and felt seal

Use a screwdriver.

D10

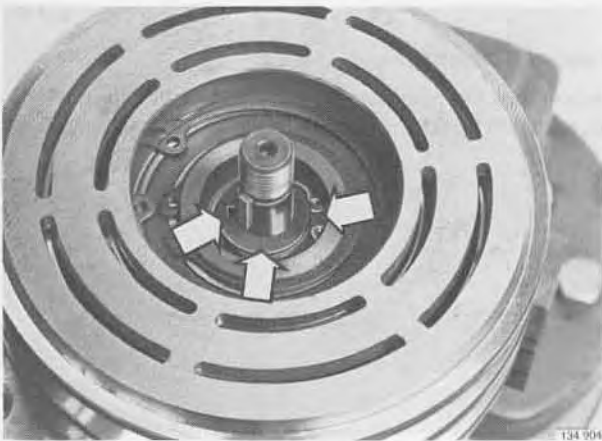

Remove:

- key from shaft
- shims
- circlip and washer
- O-ring.


D11



Remove carbon seal from shaft

Use puller 9175.

D12

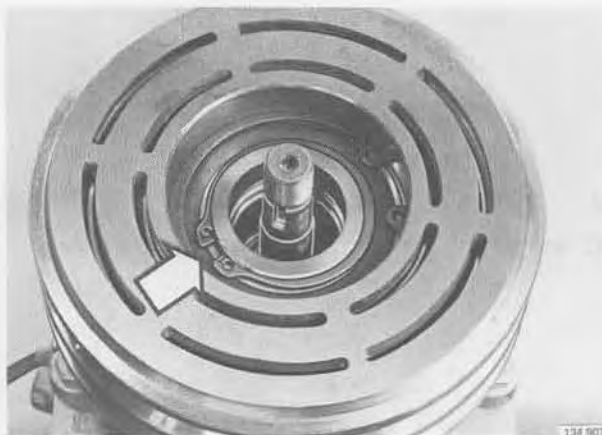

Remove inner circlip


D13



Remove pulley

Use a universal puller.


Remove the circlip securing the bearing.

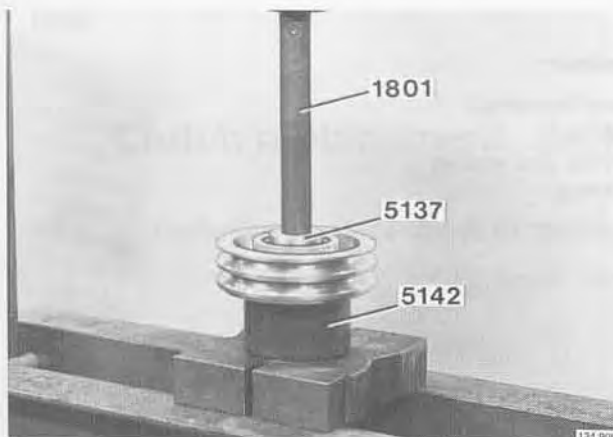

D14

Press out bearings

Support the pulley on block **5142**. Press out the two bearings with drift **1801** and **5137**. NOTE There are two bearings.

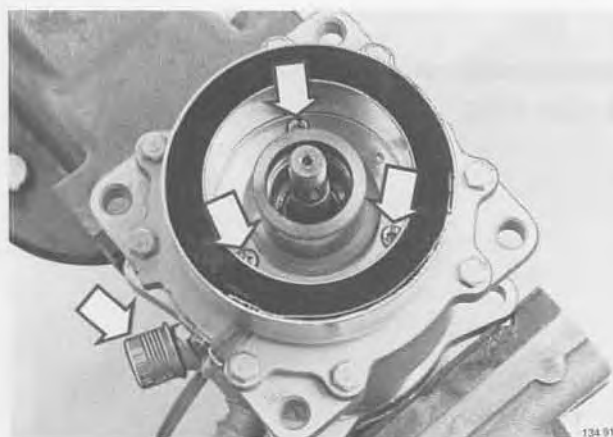

D15


Remove magnet

Unclamp the lead.

Remove the screws and lift out the magnet.

Assembly

Special tools: 5085, 5142 and 9175

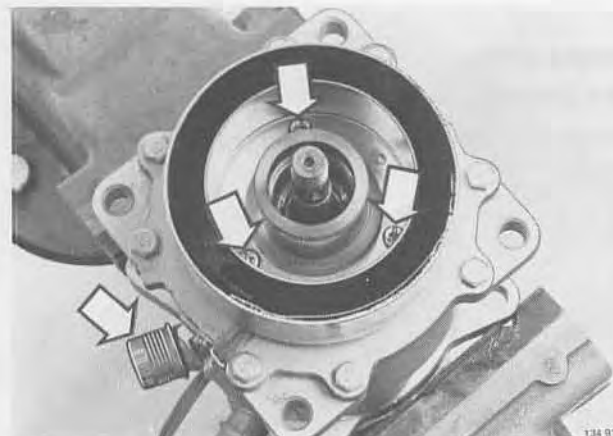


D16

Fit magnet

Secure the lead to the clamp.

Tighten the screws.

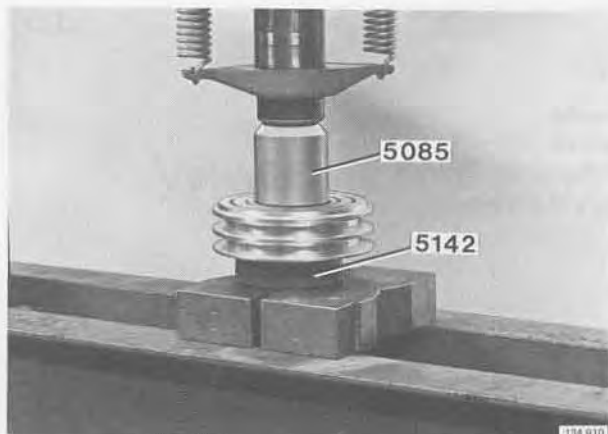

Press in bearings

Use press tool 5085 and block 5142.

Fit the bearings one at a time.

D17



Attach pulley to compressor

Use block 5142.

Carefully tap the pulley in to position with a plastic mallet.

D19



Fit carbon seal

First attach the seal to tool 9175.

D20


D21



Smear O-ring with compressor oil before placing in compressor

(Raised section of O-ring upward.)

D22

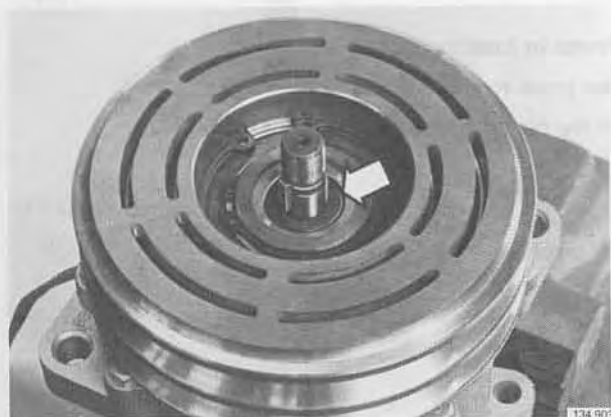

D23

Fit:

- circlip
- shims
- felt seal and retainer
- key in keyway.



D24

Fit clutch

Align the clutch to the keyway.

Carefully tap on the clutch with a plastic mallet until one or two of the threads are visible. Use block **5142**.


Fit nut

Tightening torque **38 Nm (28 ft. lbs.)**


Fit compressor, see page 33.

Valve plate on Sankyo compressor, replacement

(Off car)

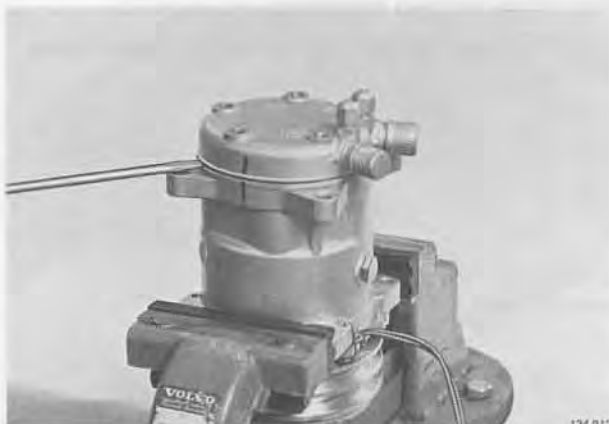

134 912

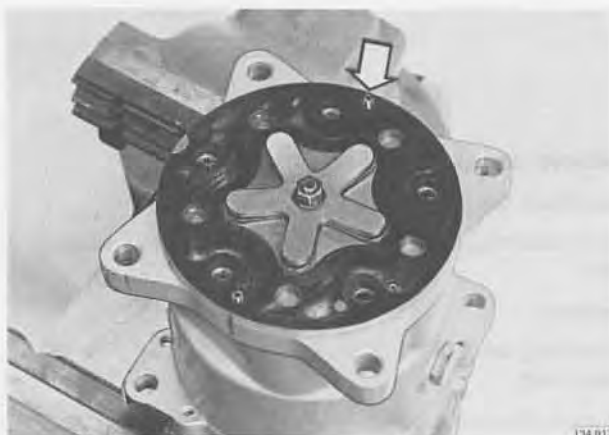

134 911



134 917

Removing

D25

Mount compressor in vice
(valve cover up.)

Mark the position of the cover.

D26

Remove screws and cover

Carefully lever off the cover with a screwdriver.

D27

Free valve plate

Carefully lever off the valve plate without scoring the surface.

Clean the compressor body and valve plate.

Fitting

D28

Place new gasket and valve plate on body

Make sure that the guide pin fits in to the correct hole, otherwise the retaining screws will not fit properly.

D29

Place new gasket between valve plate and cover

Position the cover according to the identification marks.

Tighten the bolts crosswise.

Tightening torque 15-2 Nm (!!±1.5 ft. lbs.).

NOTE If oil has been spilt during the repair, the oil plug should be removed and the compressor oil drained into a measuring cylinder. Correct amount = 135 cm³. (0.3 US pint).


Return the oil and tighten the oil plug to **10 Nm (7.4 ft. lbs.)**.

E. Delco compressor

Removing – fitting – belt adjustment

Special tool 5141

It is not necessary to discharge refrigerant from the system if the compressor is only moved to one side to obtain access to the engine valves e.t.c. In such a case follow E2 and hang the compressor from the bonnet hinge.

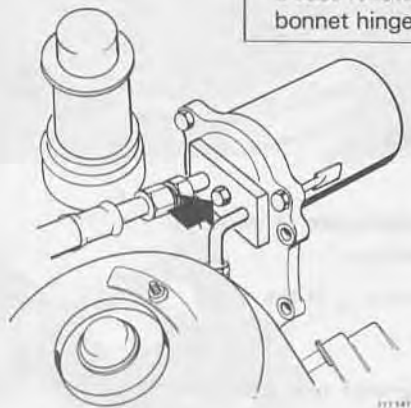

E1

Removing

Drain refrigerant from the system, see page 15.

Disconnect the connection plate for the compressor hoses.

Fit:

- protective plugs on plate
- adaptor **5141** to compressor.

E2

Remove compressor

Disconnect the lead.

Move aside the upper radiator hose and tie it to a suitable point.

Remove:

- mounting bolts (4 x)
- drive belt.

Lift away the compressor.

E3

Fitting – belt adjustment

Position the compressor and drive belt.

Adjust the belt tension and tighten the compressor mounting bolts. It should not be possible to depress the belt by more than **5–10 mm** (0.2–0.4 in).

Reconnect the lead.

Remove adaptor 5141 and fit the connection plate.


Tightening torque 14–34 Nm (10–25 ft. lbs.).

Replace receiver/dryer or drying agent, see page 58.

Fill refrigerant, see page 16.

Clutch replacement, Delco compressor

Includes replacement of pulley, bearing, magnet

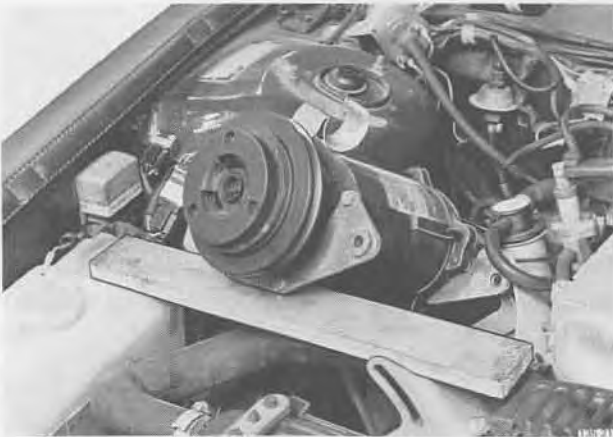

E4

Obtain access to clutch

Disconnect the negative lead from the battery.

Detach the compressor from the mounting brackets and lift off the drive belt.

Bend the upper radiator hose under the compressor and place a piece of wood above the hose to support the compressor.

E5

For removal of components, see pages 42-43, E7-13.


For fitting of solenoid, see page 48, E36-39.

For fitting the remaining components, see pages 49-50, E40-45.

Disassembling Delco compressor

Special tools: 1801, 5132, 5133, 5134, 5135, 5137, 5139, 5140, 5142

(Off car)

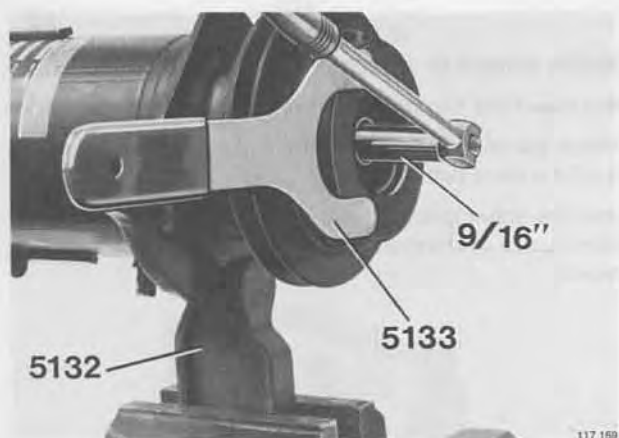

E6


Mount fixture 5132 in vice

Support the compressor in the fixture.

E7

Remove clutch nut

Counterhold the clutch with 5133 and remove the nut with a 9/16" socket.

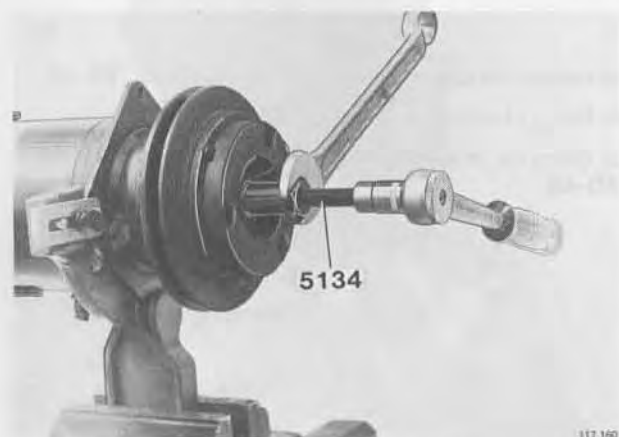

E8

Remove:

- circlip
- washer.

E9


Withdraw clutch

Use puller 5134.


E10

Remove:

- key
- circlip
- sleeve (lever out with screwdriver)
- felt seal.

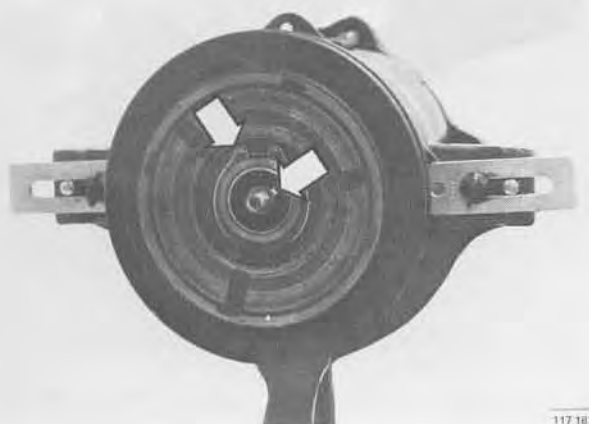

E11

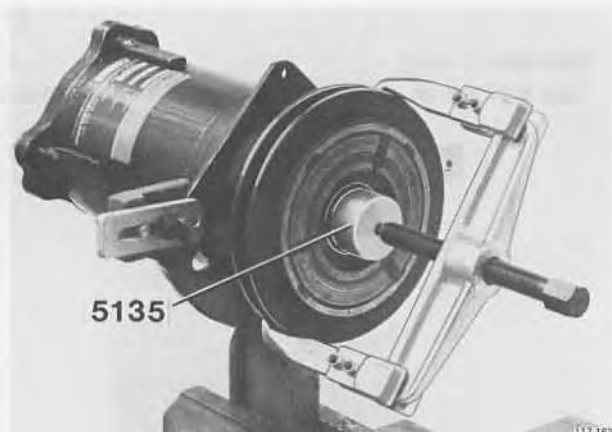

Pull off pulley

Use a suitable puller.

Use tool **5135** to support the centre spindle of the puller.

E12



Remove pulley circlip and drive out bearing

Use drift **5137** and handle **1801**.

Place support **5142** beneath the pulley.

E13




Remove magnet

Identify the position of the magnet.

Remove:

- circlip
- magnet.


E14

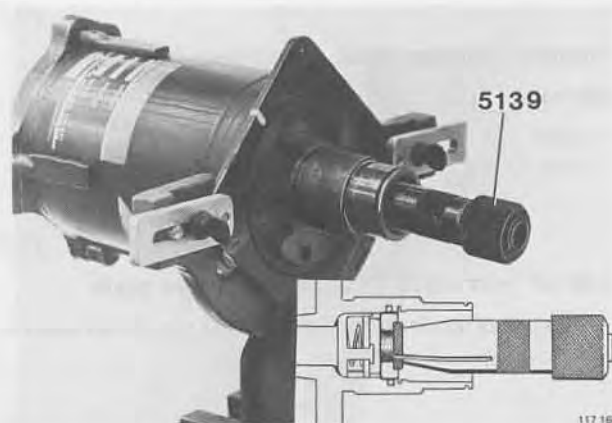

Remove circlip and ceramic sleeve


Remove the circlip and front collar.

Withdraw the sleeve with puller **5139**.

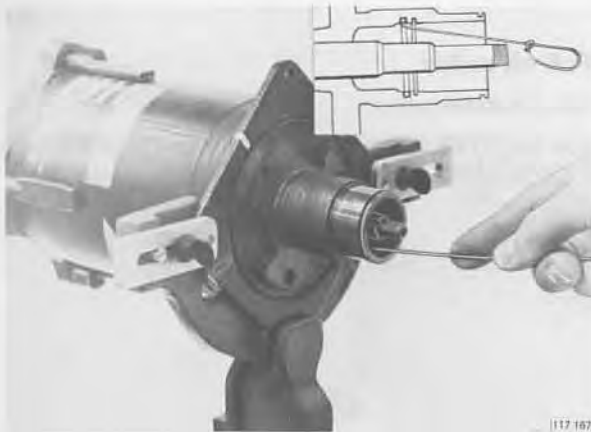


E15

Remove O-ring
Use a piece of steel wire, shaped as illustrated.

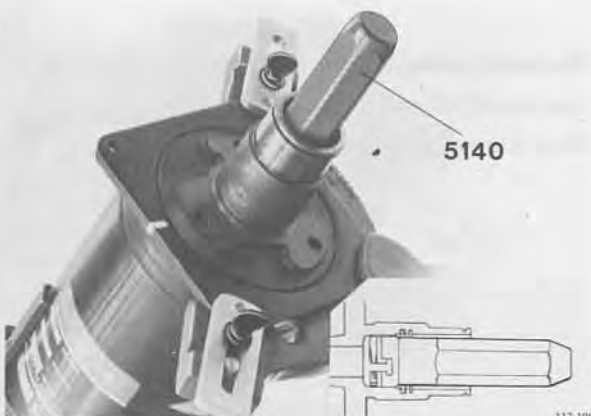


E16

Remove seal with 5140
Press the tool against the seal and turn it until the lug grips the seal.
Pull out the tool and seal.

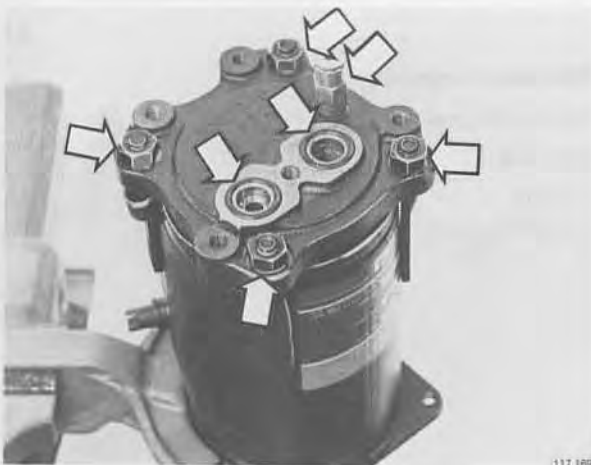

E17

Turn compressor and fixture so that bottom end points up
Remove the safety valve, O-rings and rear cover.
Lift out the sieve.

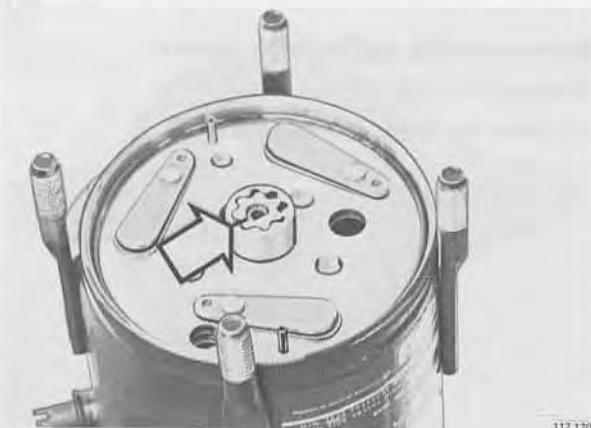

E18

Identify location of oil pump gear and collar

Remove:

- collar
- outer O-ring.


E19

Lift off rear valve housing and valve plate

Use a pair of locking pliers and grip the two drilled holes in the housing.

E20

Remove oil pump suction pipe and O-ring

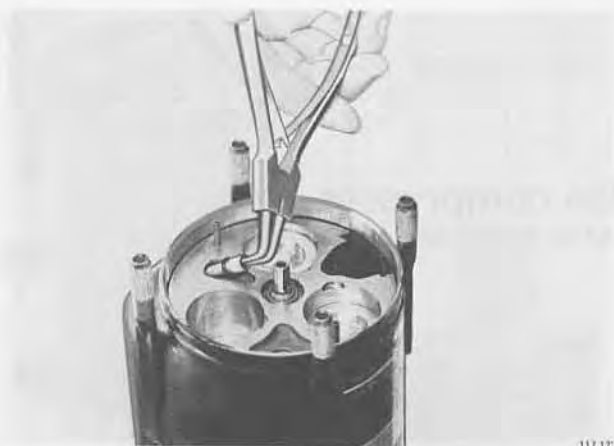

117 121

E21

Detach compressor from fixture
Support compressor on 5142, front end up



117 122

E22

Lift off outer housing from cylinder unit



117 123

E23

Pull out front end O-ring

E24

Lift off front section



117 124

E25

Remove front valve housing and valve plate from
cylinder unit

E26

Clean and check all parts


E27

Replace seals and worn parts

Note The cylinder unit (incl. shaft and pistons) is
available as a complete spare part.

Assembling Delco compressor

Special tools: 1801, 5132, 5133, 5138, 5139, 5140, 5142, 5152

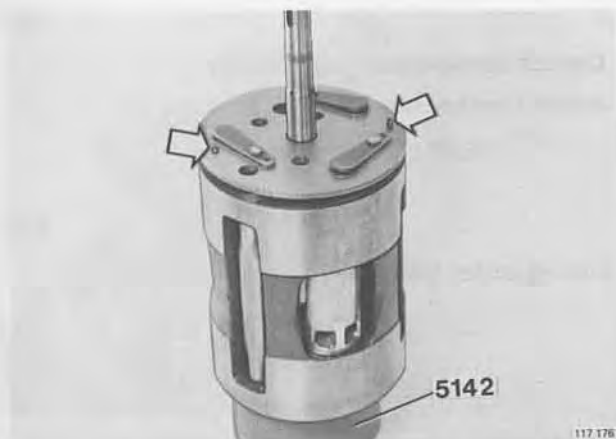

E28

Support cylinder unit on 5142 and fit front valve plate and valve housing

Note The location of the two guide pins.




E29

Fit front section and O-ring on valve housing
Smear the O-ring with compressor oil.



E30

Position outer housing above cylinder unit
Turn the housing so that the hole in the plate above the oil sump aligns with the suction pipe hole in the cylinder unit.

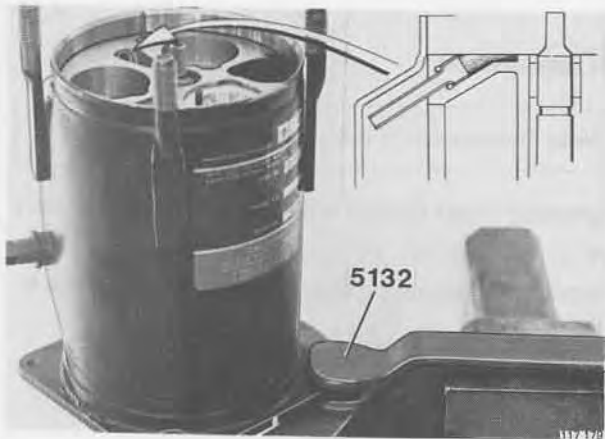

E31

Mount compressor in fixtures 5132 as illustrated and fit suction pipe and O-ring


The cylinder unit should then be turned so that the suction pipe is centred in the hole in the oil sump plate.



E32

Fit rear valve plate


Align the plate with the cylinder unit.

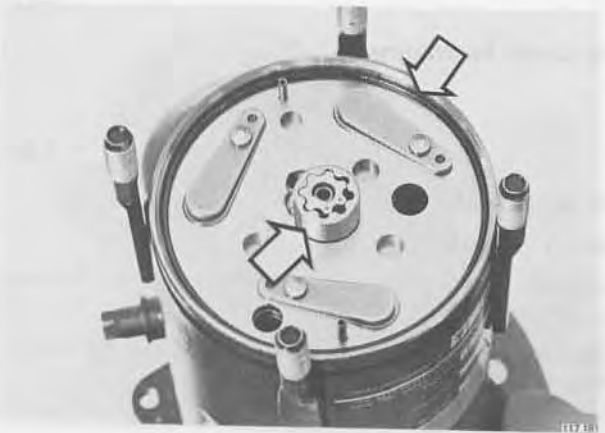

E33


Fit:

- valve housing
- O-ring
- oil pump (align identification marks).

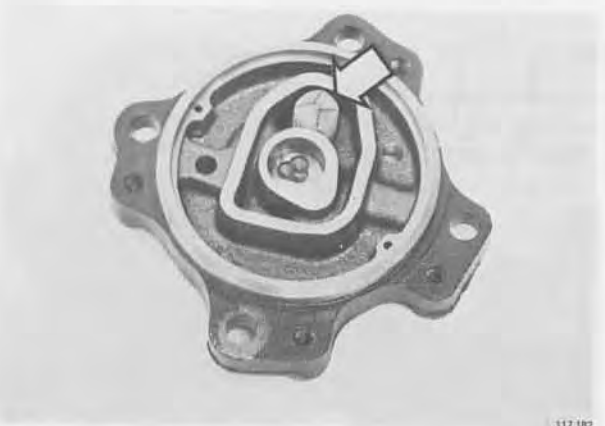

E34

Fit sieve in rear section

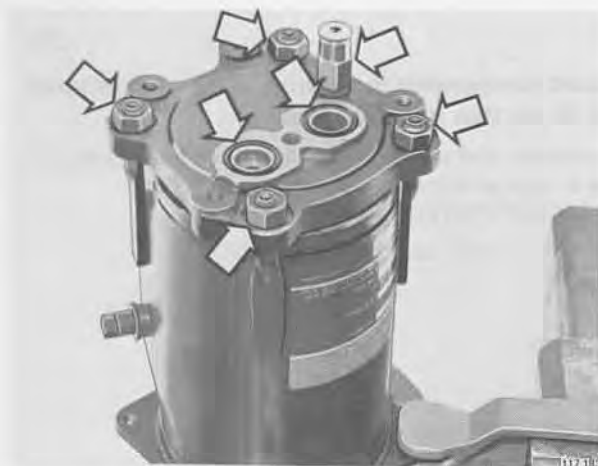

E35


Fit rear section

Note The location of the two guide pins.

Tightening torque for nuts = **26–34 Nm (19–25 ft. lbs.)**

Fit:

- safety valve, tightening torque = **14–19 Nm (10–14 ft. lbs.)**
- O-rings for hose connections.

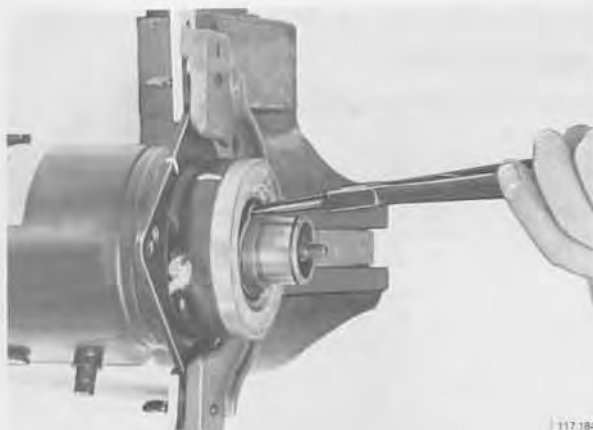


E36

Fit magnet

Fit the magnet according to the previously made identification marks.

NOTE The plug for the electric leads should point to 10 o'clock when the service plate on the compressor points to 12 o'clock.

The fixture should be held in the vice with the front end facing up.

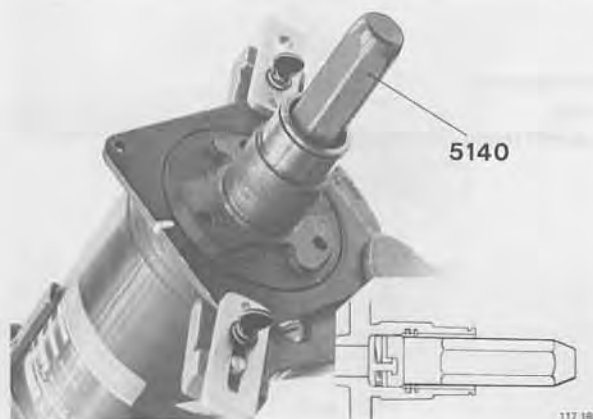

E37

Fit circlip for magnet


E38

Fit shaft seal

Attach the seal to **5140**.

Insert the tool in the front end collar and turn it until the seal is correctly fitted.

Then press down the spring and turn the tool anti-clockwise to release the seal from the tool.

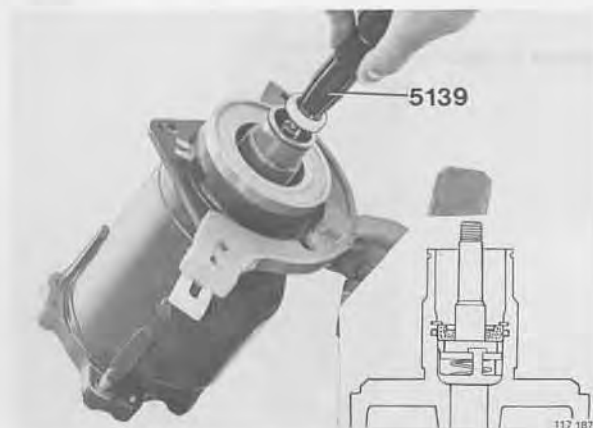

E39

Fit:

- O-ring in inner groove in collar
- ceramic ring (use puller **5139**)
- circlip for ceramic ring.

E40



Fit bearing and circlip on pulley

Use drift 5138 and handle 1801.

E41



Fit pulley

Use drift 5138 and handle 1801.


E42



Fit:

- pulley circlip
- felt seal.

E43

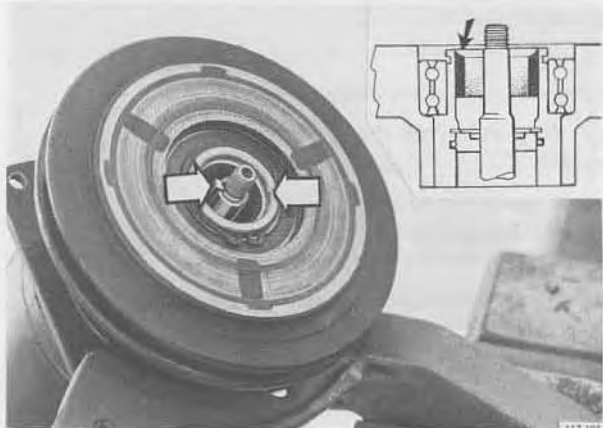

Fit:

- new sleeve for felt seal
- key in shaft keyway.




E44

Fit clutch with press tool 5152

The thrust bearing must be located between the clutch and nut.

NOTE Do not overtighten the clutch otherwise it will contact the pulley.

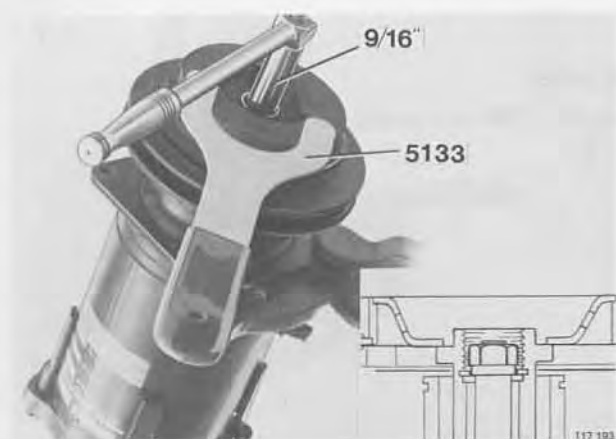

E45

Fit:


- washer and circlip in clutch centre
- nut (machined end facing washer).

Tighten the nut:

Tightening torque **19-35 (14-26 ft. lbs.)**

Use a 9/16" socket and counterhold with 5133.

F. Evaporator, replacement

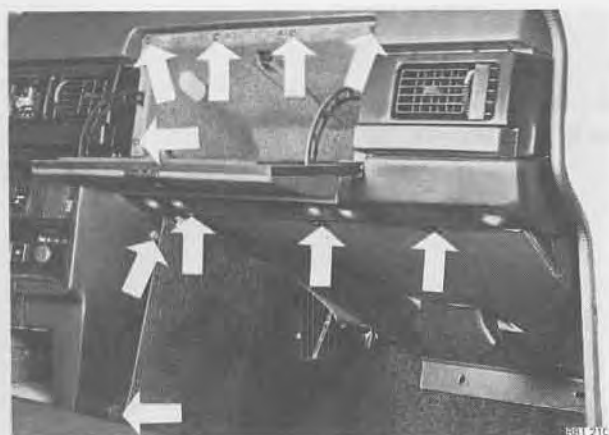

Removing

F1

Disconnect the battery negative lead.


Drain refrigerant from the system, see page 15.

Remove:

- glove compartment
- panel beneath glove compartment
- side panel next to heater.

Remove the right defroster vent and air duct.

F2

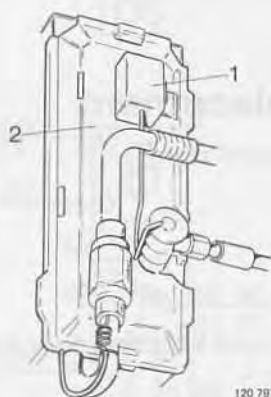Remove thermostat from cover*(Applies to 240 1975–1978)*

120 787

Note that the position of the thermostat (1) can vary and that the capillary tube on 1979– models is mounted on the evaporator pipe.

Remove:

- expansion valve
- insulation
- cover (2).


F3

Unscrew connections and carefully pull out evaporator**Fitting**

F4

Fit:

- new evaporator seal
- evaporator
- cover.

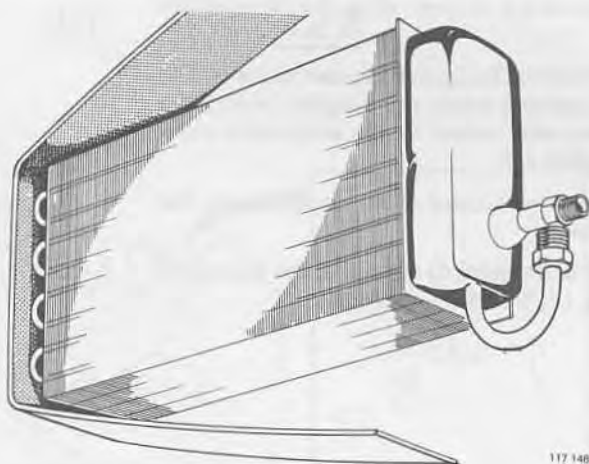

117 148

**Fit (as applicable):**

- expansion valve
- capillary tube
- thermostat.

F5

F6

Connect refrigerant hoses

Use new O-rings, smeared with compressor oil.

Tightening torque **30 Nm (22 ft. lbs.)**

Replace receiver/dryer or drying agent, see page 58.

Fill system with refrigerant and leak test, see page 16.

F7

Insulate hoses and connections

NOTE The expansion valve must not be insulated.

F8

Fit:

- defroster vent
- air duct
- glove compartment
- panels.



120 796

Evaporator thermostat, replacement

Thermostat location varies with model type and year.

The following variations occur:


240 1975–1978, 260 1978: The thermostat is located in the evaporator cover and the capillary tube (heat sensor) is inserted in the evaporator.

260 1975–1977: No thermostat fitted. The temperature of the refrigerant is regulated instead by a suction discharge valve, incorporated in the receiver/dryer. For replacement see page 56, operation H1–5.

240, 260 1979 early types: Adjustable thermostat located on the control panel. The capillary tube is inserted in the evaporator. If problems arise, e.g. irregular cycling, the thermostat should be replaced and the capillary tube placed on the evaporator outlet (same as for late types). Thermostat P/N 1259617–7.

240, 260 1979 late types: Adjustable thermostat located on the control panel. The capillary tube is mounted on the evaporator outlet.

On replacing thermostats on old type models it is advisable to change to the adjustable type, see instructions below. A special kit P/N 1129090-5 is available.

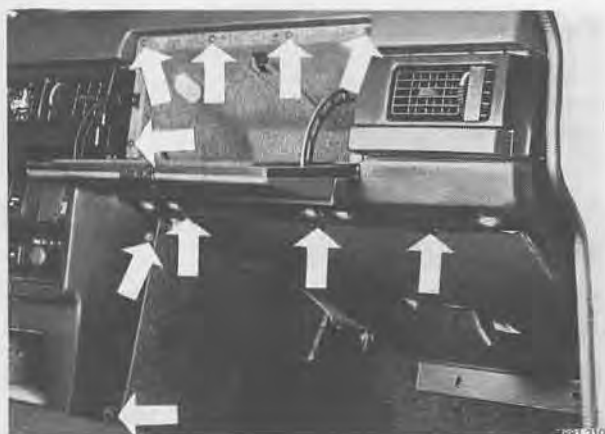

Fitting new type adjustable thermostat

F9

Remove:

- glove compartment
- panel beneath glove compartment
- side panels near heater.


F10


Loosen thermostat, cut off capillary tube

Leave rest of capillary tube in evaporator.

F11

Clean evaporator outlet

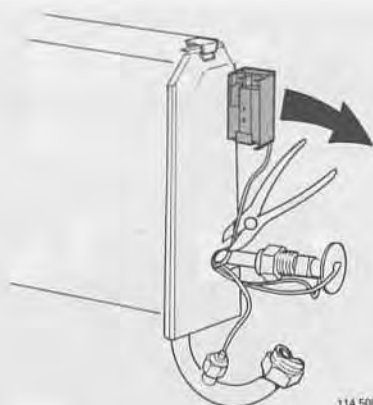


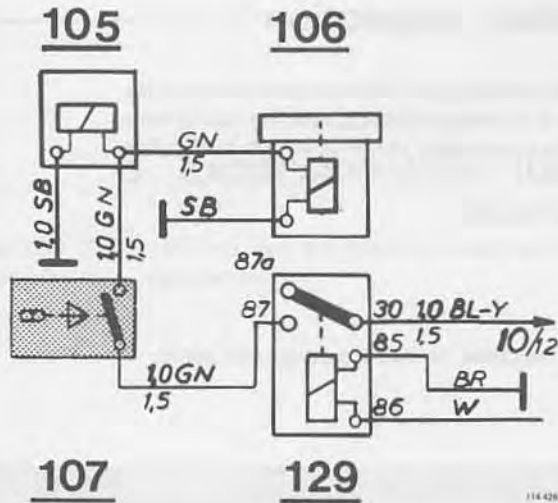

Connect thermostat across AC relay and compressor solenoid


- 105 Compressor solenoid
- 106 Solenoid
- 107 Thermostat + switch
- 129 AC relay

F12

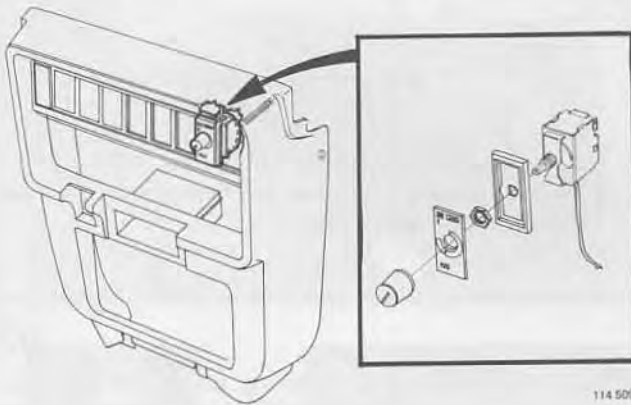

Attach thermostat to control panel

F13

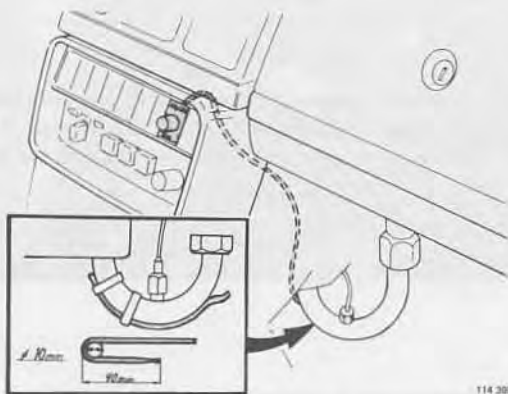

Bend capillary tube and attach it to evaporator outlet

Bend the capillary tube approximately 40 mm (1.5 in) from its end around a 10 mm (0.4 in) diameter pipe.

Attach the tube to the evaporator outlet pipe with two clamps (P/N 944267-4).

F14

Insulate evaporator outlet

Use insulation tape P/N 591235-7.

Refit parts removed.

F15

Evaporator thermostat, inspection

All vehicles, apart from 260 1975–1977 models, are equipped with evaporator thermostats. The purpose of the thermostat is to cycle (i.e. engage/disengage) the compressor. A defective thermostat can usually cause the evaporator to ice up which blocks the air flow and consequently causes poor cooling.

The type and location of the thermostat varies as follows:

240 1975–1978, 260 1978:

Adjustable type mounted on evaporator cover.

240, 260 1979–: Non adjustable thermostat mounted on dashboard control panel.

F16

Inspect thermostat as follows:

TEST CONDITIONS

- Bonnet (hood) open. Doors and windows closed
- Engine speed approx. 33 r/s (2,000 r/min)
- An additional fan must be used to cool the condenser.

DASHBOARD CONTROL SETTING

- Fan speed 1
- Temperature control at COOL
- Floor and DEF shutters closed (push buttons out)
- REC (recirculation) button depressed
- Panel vents open
- Air-cond switch ON (1975–1978)
- 1979– models with adjustable type thermostat: set adjuster knob to blue section.

Check that compressor cycles

After 5–10 min operation check that the thermostat cycles by observing the movement of the compressor clutch. If

the compressor does not cycle e.g. because of high ambient temperatures, a road test should be carried out. See F 18.

F17

Road test

(Ambient temperature should not exceed 25°C = 77°F)

Drive the vehicle at approximately 50 km/h (30 mph) and measure the temperature of the air released from the centre panel vents.

Note the lowest temperature at which the thermostat disengages the compressor. This should be 5°–8°C (41°–46°F) depending on the temperature of the cooling air.

F18

If temperature is above 8°C (46°F)

240 1975 – 1978, 260 1978:

Remove the soundproofing and panel on the side of the centre console.

Turn the thermostat screw slightly clockwise.

240, 260 1979–

The thermostat cannot be adjusted and must therefore be replaced.

F19

If temperature is lower than 5°C (41°F)

240 1975 – 1978, 260 1978

Remove the soundproofing and panel on the side of the centre console.

Turn the thermostat screw slightly anticlockwise.

240, 260 1979–

The thermostat cannot be adjusted and must therefore be replaced.

F20

G. Expansion valve (near evaporator), replacement

(240 and 260 1978– models)

On 260 1975–1977 models the expansion valve is incorporated with a discharge pressure valve and is mounted on the receiver/dryer, see overleaf.



Removing

G1

Disconnect the battery negative lead.

Drain refrigerant from the system, see page 15.

Remove:

- soundproofing panel
- side panels.

G2

Remove:

- evaporator cover
- evaporator outlet insulation
- expansion valve.

NOTE Thermostat location varies with model type and year.

G3

Fit new expansion valve

Use new O-rings, smeared with compressor oil.

Tightening torque 30 Nm (22 ft. lbs.).

G4

Fit:

- evaporator cover
- thermostat.

Insulate the evaporator outlet pipe.

NOTE Do not insulate the expansion valve.

G5


Replace receiver/dryer or drying agent, see page 58.

Fill system with refrigerant, see page 16.

Refit side panels and soundproofing.

H. Expansion valve, suction discharge valve in receiver/dryer, replacement

Only fitted to 260 1975–1977 models

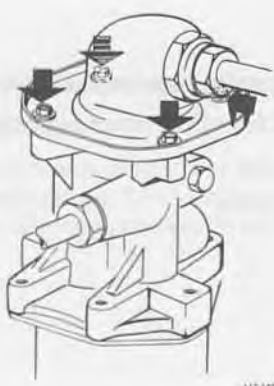

Removing


Disconnect the battery negative lead.
Drain refrigerant from the system, see page 15.
Mark position of valve body cover.

H1

Remove:

- retaining bolts
- cover
- O-ring.


H2

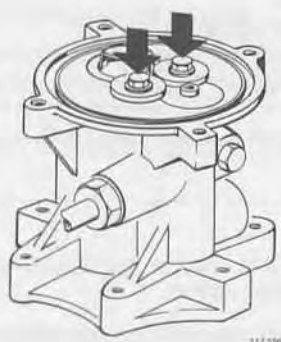

Remove:

- bolts and lock washers
- valves
- expansion valve O-ring.

H3

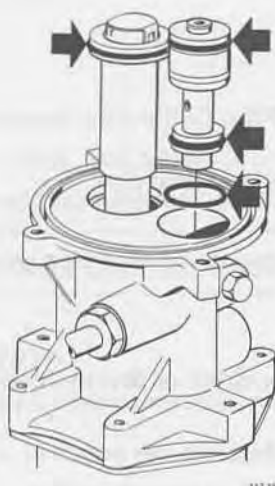

Smear new O-rings with compressor oil.

Fit two O-rings to expansion valve and one to suction discharge valve.

Place one O-ring in expansion valve seat in valve body.

H4

Fit:


- valves
- lock washers and mounting bolts
- cover O-ring (oil first)
- cover, according to previously made marks.

H5

Replace drying agent, see page 58, operation K3.

Fill system with refrigerant, see page 16.

J. Condenser, replacement

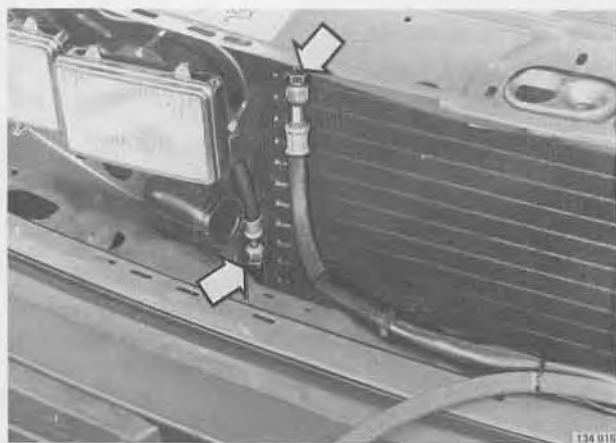

J1

Removing

Disconnect the battery negative lead.

Drain refrigerant from the system, see page 15.

J2

Obtain access to compressor

Remove:

- radiator grille and headlamp frames
- right headlamp, 260 and 240 1979-
- centre stay
- horn bracket
- electric cooling fan (if fitted).

Disconnect refrigerant hoses (plug ends immediately).

Remove condenser

J3

Fitting

Fit condenser

Reconnect refrigerant hoses.

Use new O-rings, smeared with compressor oil.

Tightening torque 17 Nm (12 ft. lbs.).

J4

Refit removed parts.

Replace receiver/dryer or drying agent, see next page.

Fill system with refrigerant, see page 16.

Receiver/dryer, replacement


NOTE The receiver/dryer contains a desiccant (drying agent) the purpose of which is to absorb any moisture in the refrigerant circuit. Because of this it is very important that the receiver/dryer is not exposed to air (moisture).

Receiver/dryer location and type varies with engine type and model.


NOTE Following any repairs which involve interrupting the refrigerant circuit or if moisture is suspected in the system, the receiver/dryer or desiccant (drying agent) must be replaced.



240 1975-1977

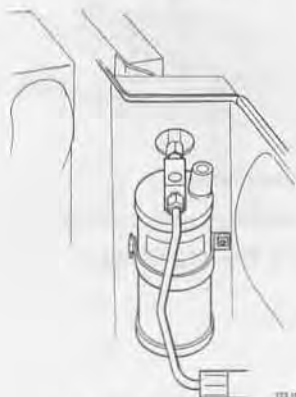

240, 260 1978-

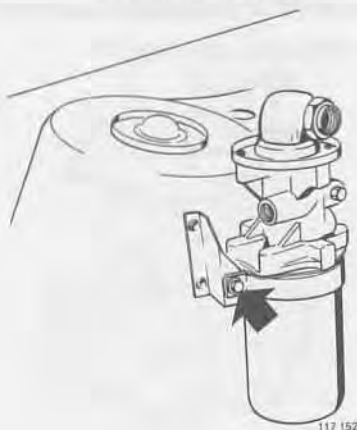

Replacing receiver/dryer

240, 1975-1977

240, 260 1978-

Disconnect the negative lead from the battery.

Drain refrigerant from the system, see page 15.

Disconnect the refrigerant hoses (plug ends immediately).

Replace receiver/dryer

NOTE Measure the amount of oil in the receiver/dryer. The same amount of new oil must be added to the replacement receiver/dryer (260 and Diesel) or York compressor (240).

K1

Fitting

Make sure that the evaporator hose is connected to the OUT connection on the receiver/dryer.

Reconnect the refrigerant hoses. Use new O-rings smeared with compressor oil.

Tightening torque 25 Nm (18 ft lbs.).

Add refrigerant to the system, see page 16. Reconnect the battery.

K2

Replacing drying agent

260 1975-1977

Removing

Disconnect the battery negative lead.

Drain refrigerant from the system, see page 15.

Disconnect refrigerant hoses (plug ends immediately as well as in valve body)

Identify valve body position in relation to mounting bracket.


Remove:

- clamp
- receiver/dryer.

K3

K4

Remove receiver/dryer
(Identify the position of the body first.)

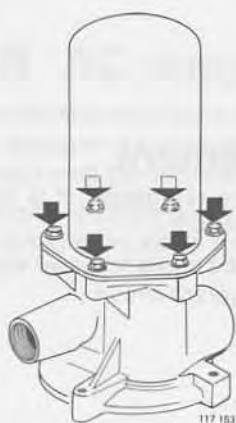


K5

Remove the O-rings. Clean the sieve and remove the bag containing the drying agent.

Smear the new O-rings with compressor oil before fitting.

Place new bag of drying agent in receiver/dryer.

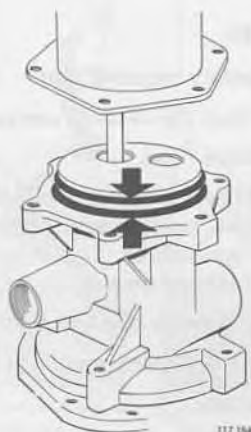

K6


Fit receiver/dryer

Reconnect the refrigerant hoses. Use new O-rings, smeared with compressor oil.

Tightening torque, see fig. (41 Nm = 30 ft. lbs, 24 Nm = 18 ft. lbs, 17 Nm = 12 ft. lbs)

Add refrigerant to the system, see page 16.

Reconnect the battery.

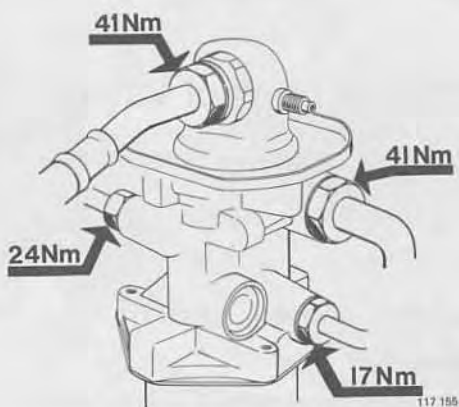

L. Refrigerant hoses, replacement

If one or more of the refrigerant hoses has burst, causing rapid loss of the refrigerant, it is very probable that compressor oil has been lost. This oil must be replaced with new oil. See page 7.

In principle the method for replacing hoses is the same for all types. It should be noted however that the hoses are of varying length and that each hose is intended for a special part of the refrigerant circuit.

L1



Replacement

Disconnect the battery negative lead.

Drain refrigerant from the system, see page 15.

Replace the defective hose.

If necessary, add new compressor oil (does not apply to systems with York compressor). Use new O-rings, smeared with compressor oil. Tighten all connections to torque, see specifications on page 2-4.

Replace receiver/dryer or drying agent, see page 58.

Add refrigerant to the system, see page 16.

Reconnect the battery.

M. Inspection of mechanical heater control valve

If the air conditioning system is unable to keep passenger compartment cool in hot weather, the heater control valve should be inspected and if necessary adjusted. The problem may be due to the valve not closing when the heater control is at "COOL".

M1



Inspection and adjustment

Remove:

- soundproofing panel beneath steering wheel
- side panels next to heater

Warm up the engine.

Move the heater control to off (closed) and check that the input hose from the engine to the heater control valve is cold. If not, turn the adjuster screw (arrowed) 3/4 turn clockwise.

Check that the hose cools down after a few minutes with the engine idling.

Also check that the heater control valve lever bottoms when the temperature control is set to "COOL".

Apply sealer to the adjuster screw.

Refit side panel and soundproofing.

N. AC compensation – idle speed compensation

The purpose of the AC compensation system is to counteract the increased load on the engine at idle speeds when the compressor is engaged. It functions in principle by supplying additional fuel-air mixture (carburetted engines) or air (injected engines) past the throttle valve when the compressor is engaged.

An alternative compensating system is fitted to certain vehicles (B21A 82– Sweden, Australia, Canada), and functions by advancing the ignition when the compressor is engaged.

Carburetted engines


N1

All 1975–1978 models


Idle speed is kept constant when the compressor is engaged by means of a solenoid valve mounted on the carburettor.

When the compressor is engaged the load on the engine increases. On sensing this the solenoid valve opens and allows an additional amount of fuel-air mixture to bypass the throttle valve and maintain a constant idle speed.

The solenoid valve closes the bypass channel when the compressor is disengaged.

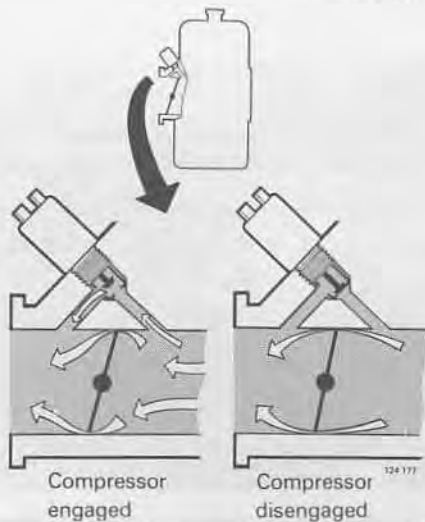

B27A

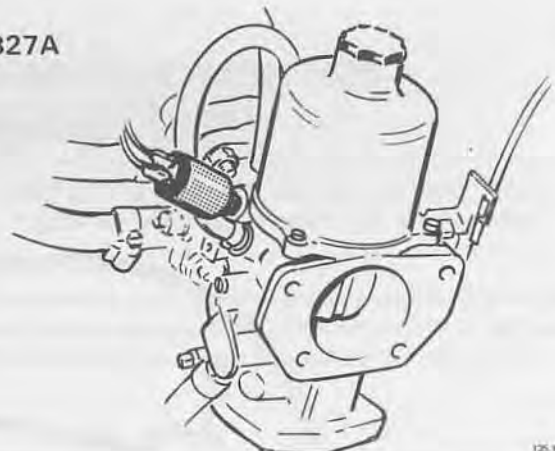

125 118


N2

4-cylinder 1979–

(Excl. Sweden, Australia, Canada, B21A 1982–)

The compressor, when engaged, actuates the solenoid valve (1) which in turn opens the vacuum valve (2) allowing more fuel-air mixture to bypass the throttle valve. The idle speed is increased by approximately 3.5 r/s (200 r/min).

The adjacent illustration shows where the hoses are connected, the exact routing of the hoses may however be different.

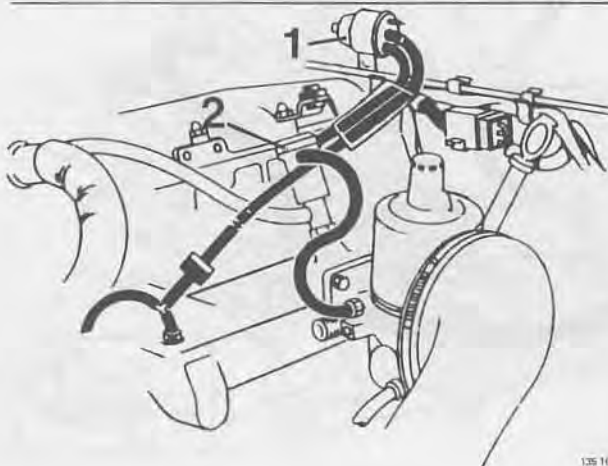

125 168


N3

B21A 1982 – (Sweden, Australia, Canada)

The idle speed compensation system functions by advancing the ignition when the compressor is engaged.

Compressor disengaged: The depression in front of the throttle valve is low and consequently the distributor is not affected.


Compressor engaged: The depression after the throttle valve is high, the ignition is advanced and idle speed is kept constant.

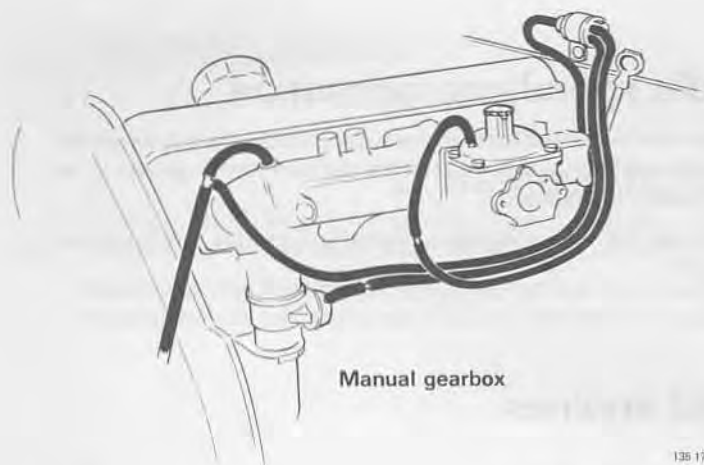

135 170

N4

The adjacent illustration shows where the hoses are connected, the exact routing of the hoses may however be different.

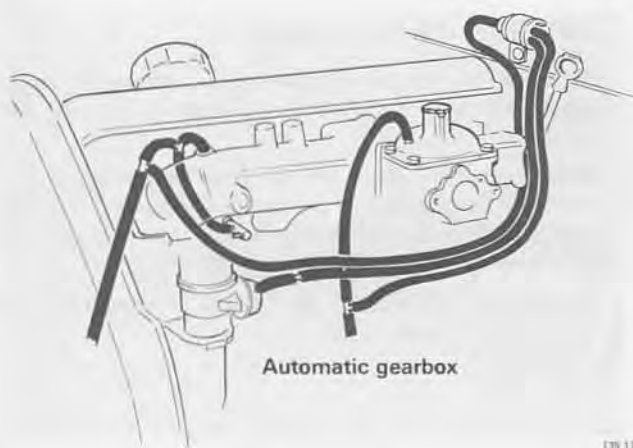


135 171

B27A, B28A 1979–

N5

- 1 Delay valve
- 2 Solenoid valve. Only 1979– with AC
- 3 Check valve (White side facing inlet manifold)

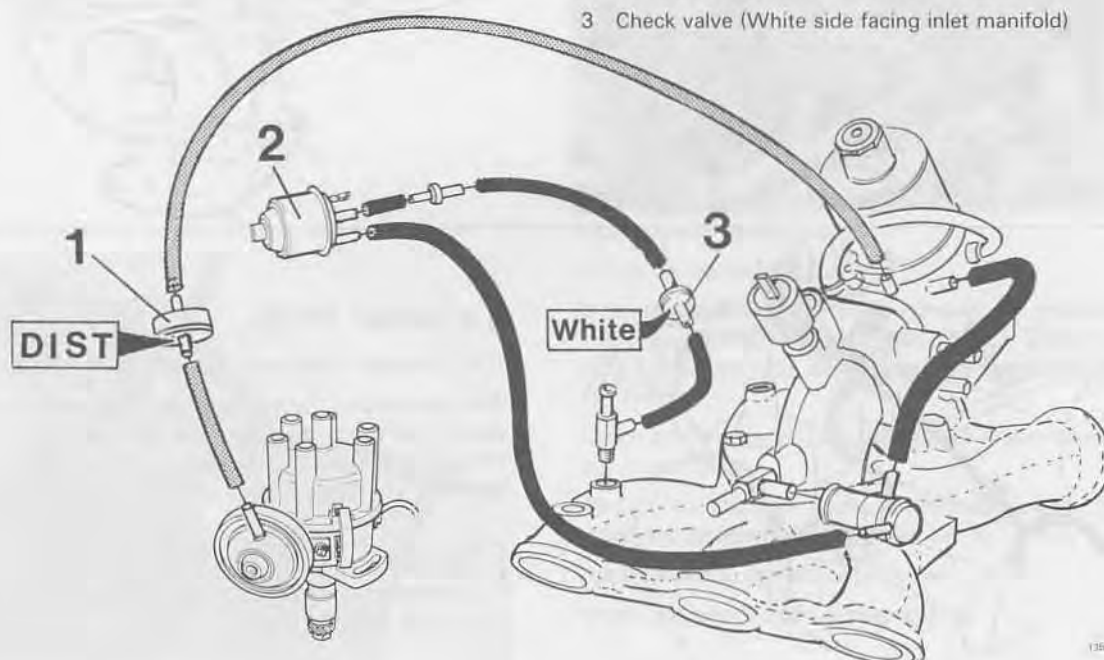

135 177

AC Compensation – injected engines B19-B23


N6



B19E, B21E, B21F, 1975-1978

A solenoid valve opens a bypass channel allowing more air to flow past the throttle valve when the compressor is engaged and the engine is idling.

N7

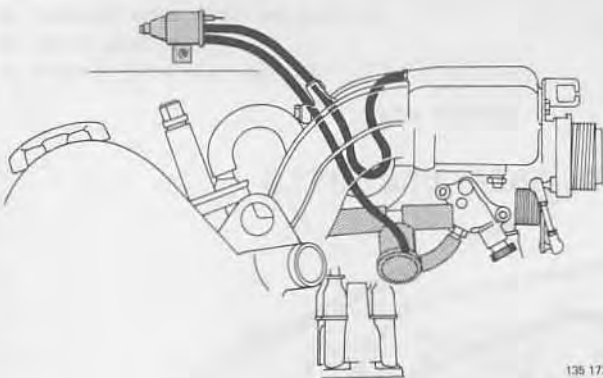


B19E, B21E, B23E 1979- B21F 1979-1981

NOTE B21F California 1981 and all B21F 1982-models are fitted with constant idle speed system

The solenoid valve operates in conjunction with a vacuum valve which opens a channel allowing more air to bypass the throttle valve, thereby increasing the idle speed.

N8

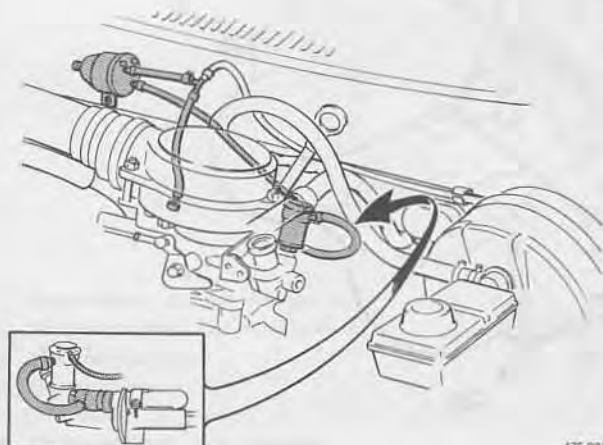


B21ET 1981-

(Shown adjacent)

B21ET is fitted with constant idle speed system (CIS) and therefore does not require AC compensation.

B27E 1975-1978

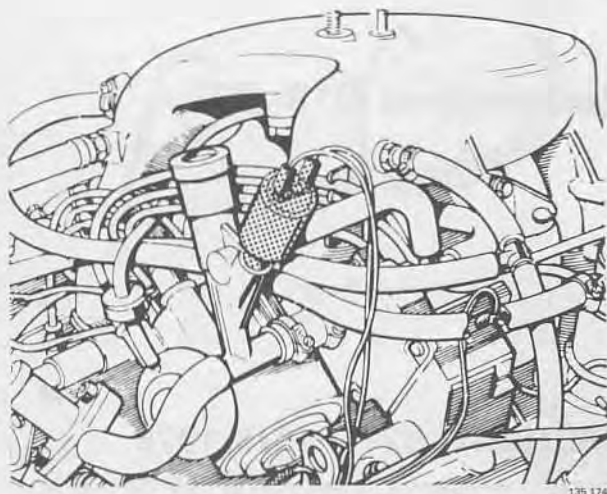


N9

The solenoid valve opens when the compressor is engaged, and more air bypasses the throttle valve.

B27E 1979-1980, B28E 1981-


(Excl. Sweden and Australia)

N10

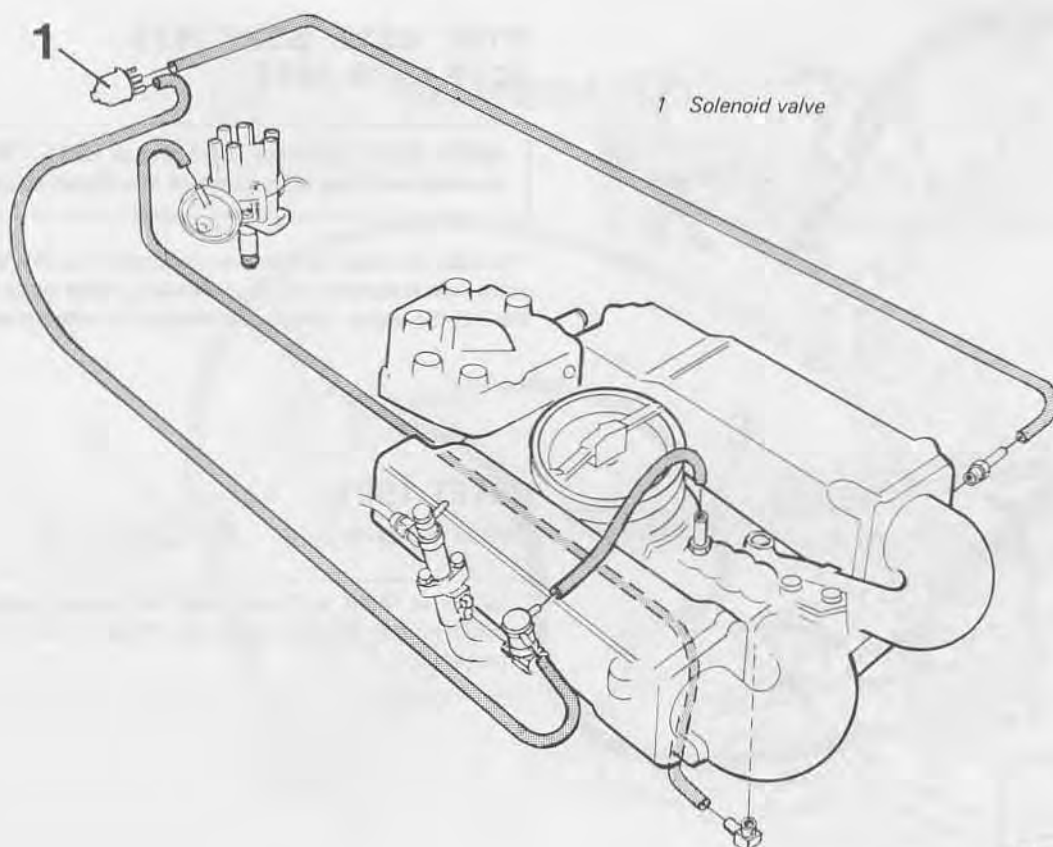

B27E 1979 Sweden and Australia

N11

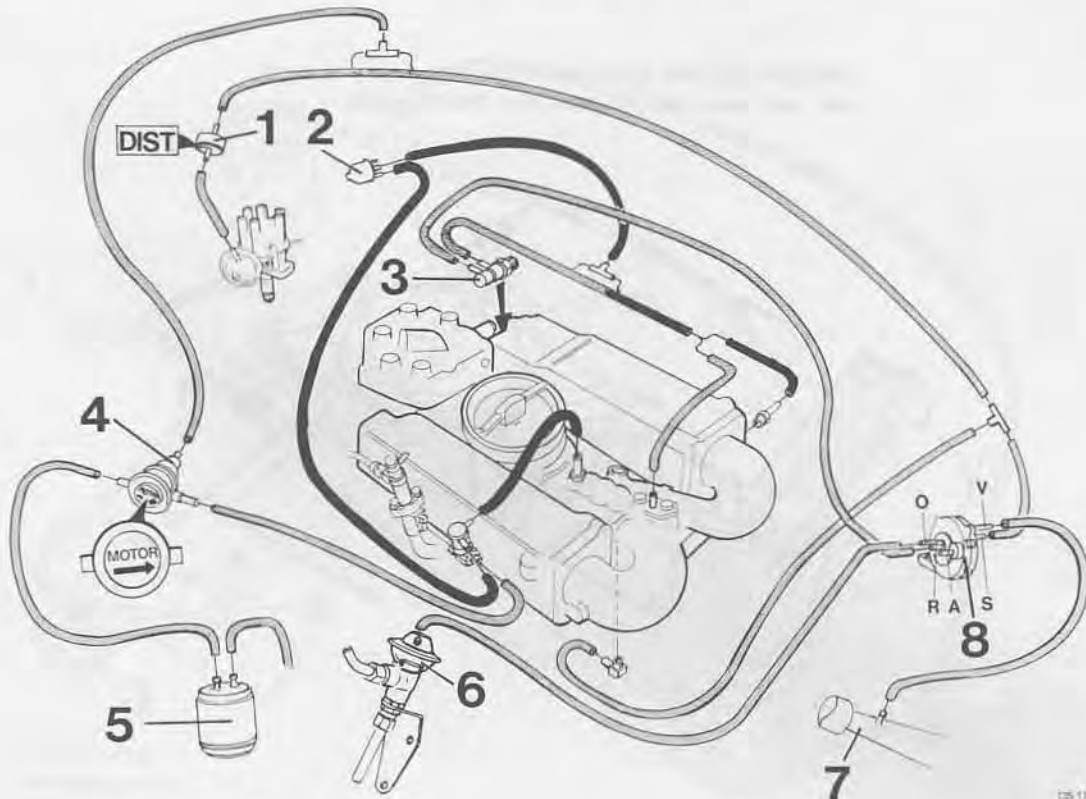


- 1. Delay valve. Certain models only
- 2. Solenoid valve. Only cars with AC
- 3. Thermostat valve
- 4. Vacuum valve. Australia only

- 5. Charcoal filter. Australia only
- 6. *EGR valve
- 7. Air inlet for filter
- 8. Vacuum amplifier
- *Exhaust gas recirculation

B27E 1980, B28E 1981 – Sweden and Australia

N12

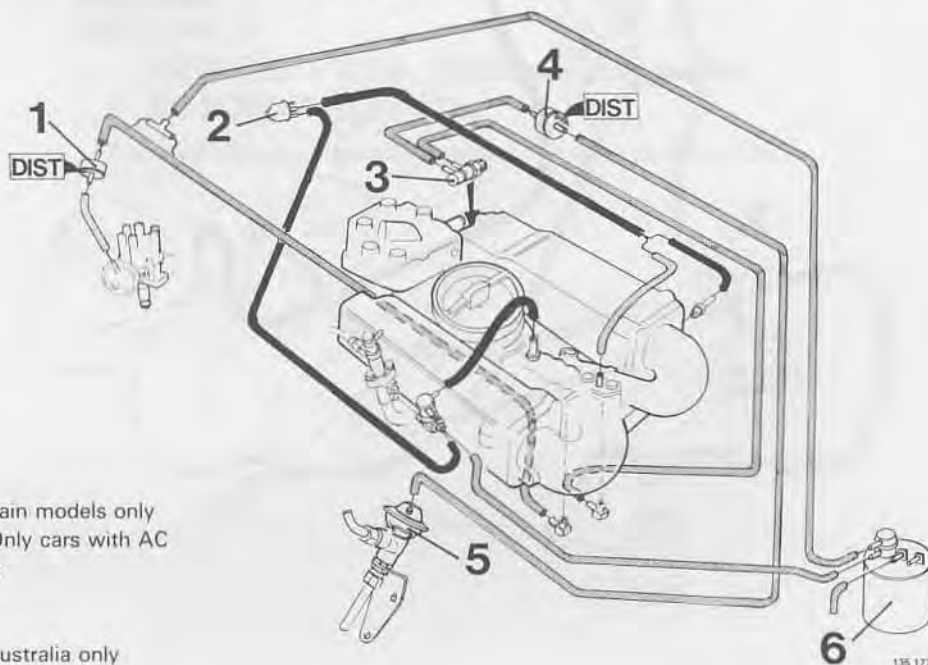


- 1. Delay valve. Certain models only
- 2. Solenoid valve. Only cars with AC
- 3. Thermostat valve
- 4. Delay valve
- 5. EGR valve
- 6. Charcoal filter. Australia only

B27 1975-1978

N13


The solenoid valve opens when the compressor is engaged, and more air bypasses the throttle valve.

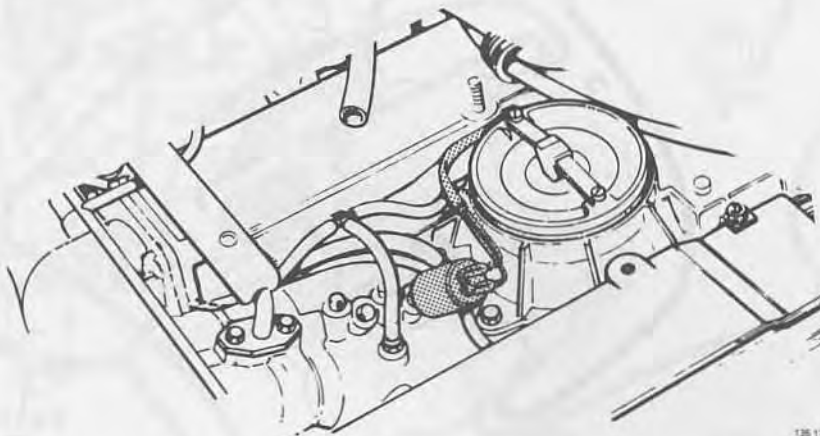

B27 F 1979


All markets

N14

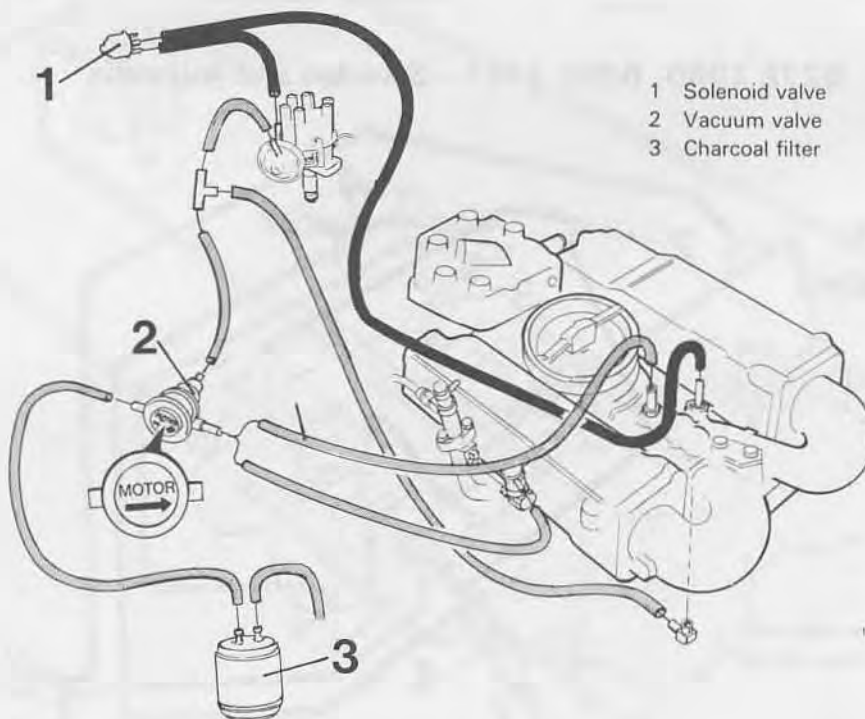

**B28F 1980 (all markets)
B28F 1981 USA Federal and Canada**

N15

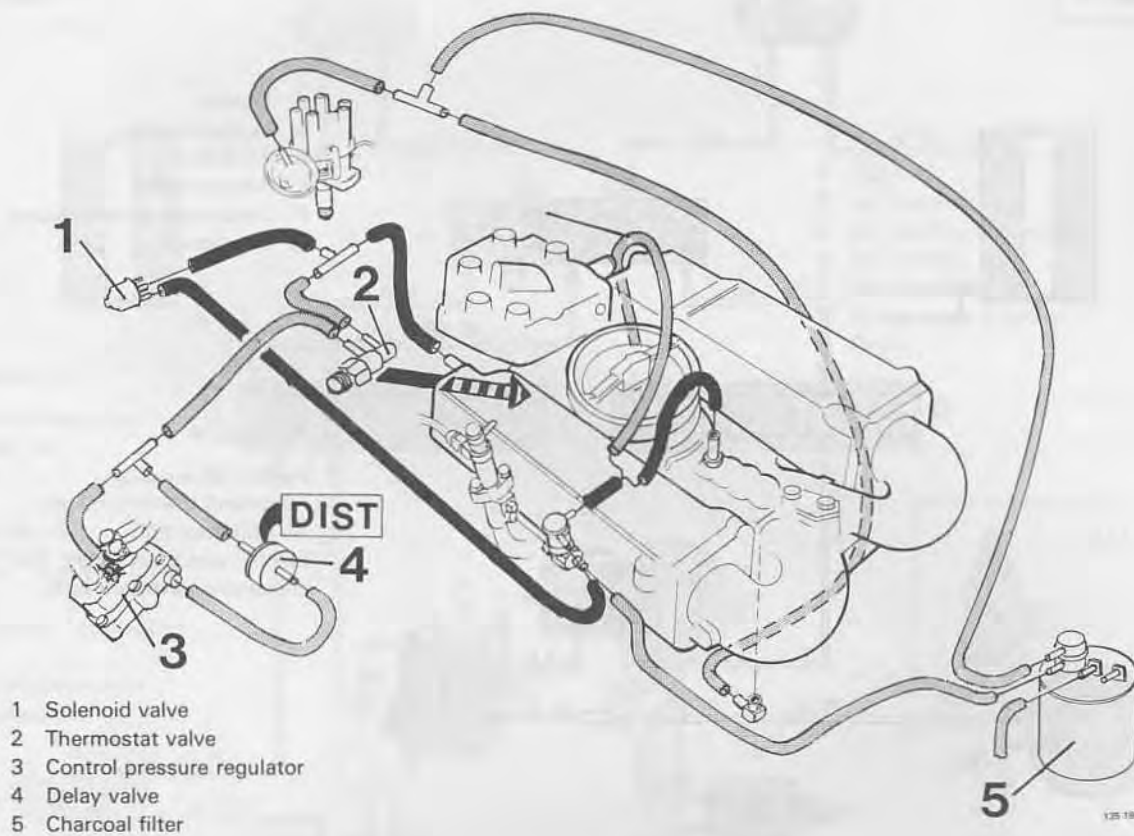


N16

**B28F 1981 USA, California and Japan
All B28F 1982-**

These vehicles are fitted with constant idle speed system (CIS)

Air conditioning 240 1975-1977

Colour codes,
see page 73

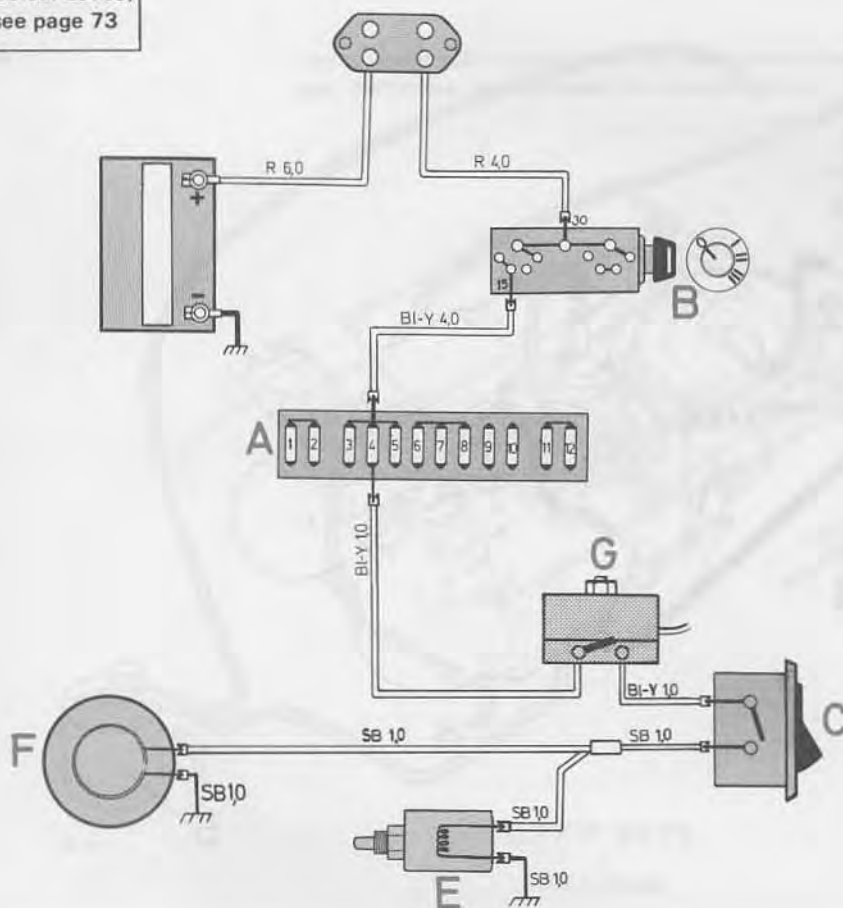


- A Fusebox
- B Ignition switch
- C AC switch
- E Solenoid valve
- F Compressor solenoid valve
- G Thermostat

Fuse no. 4


- Heated driver seat
- Reversing (Back-up) light
- Air conditioning
- Electric windows (relay) 1977 only
- Glove compartment light

Air conditioning engaged

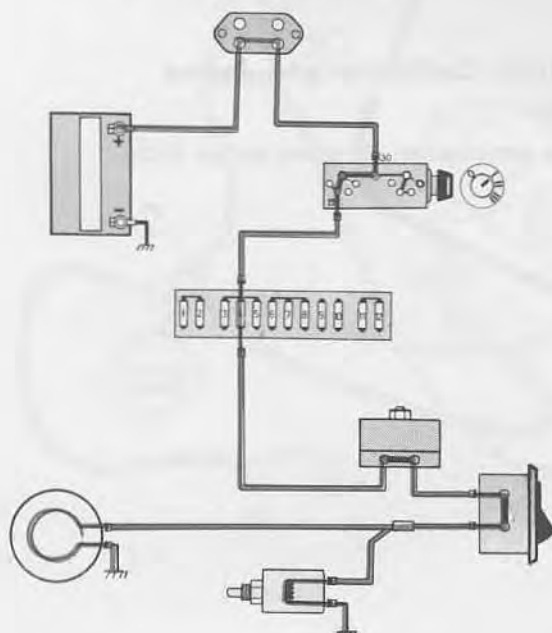


Air conditioning 260 1975-1977

Colour code,
see page 73


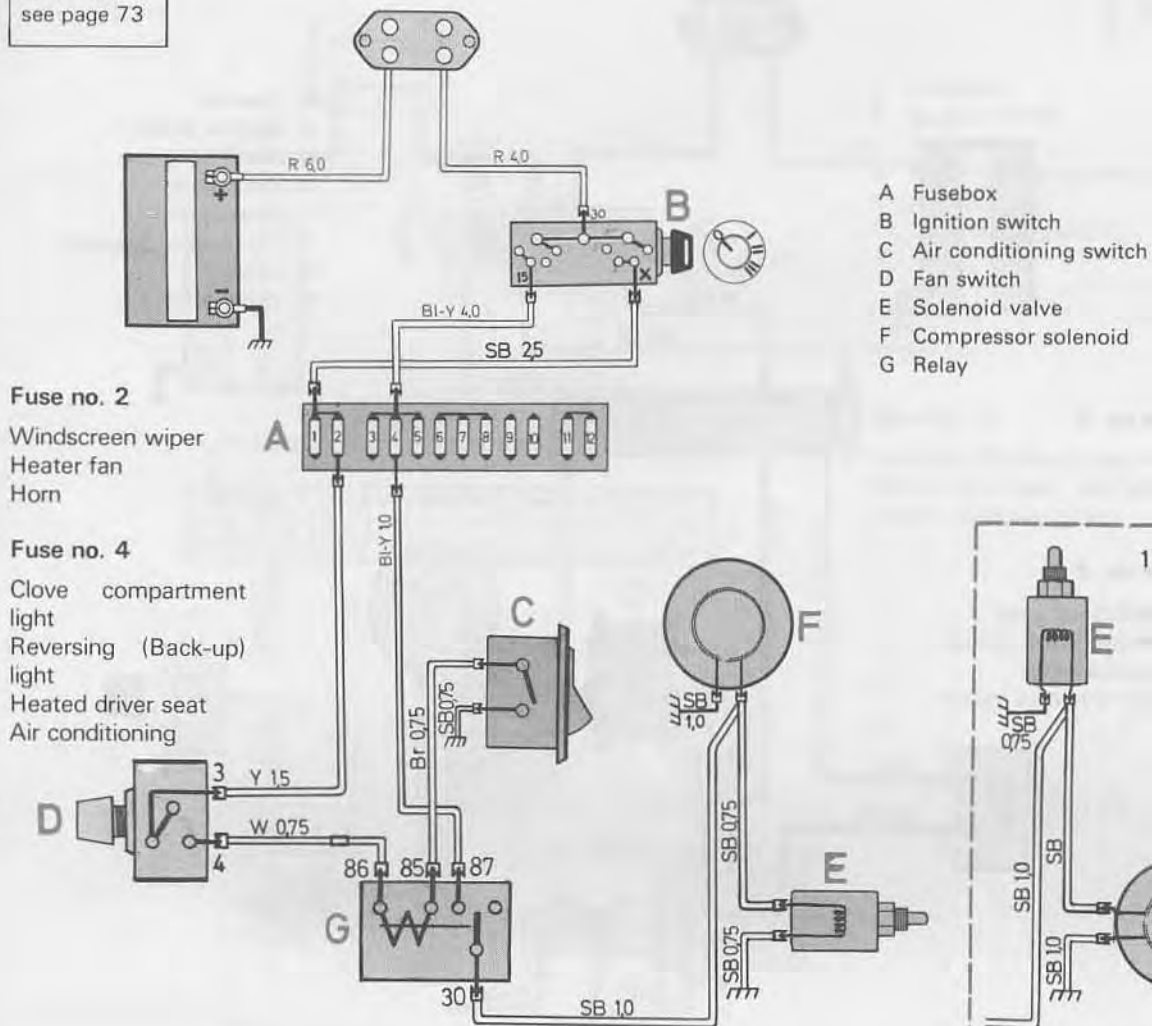


Air conditioning engaged

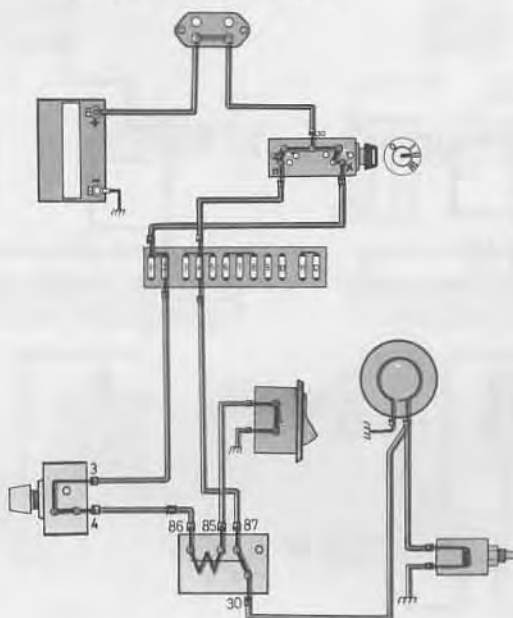


Air conditioning 240, 260 1978

Colour code,
see page 73

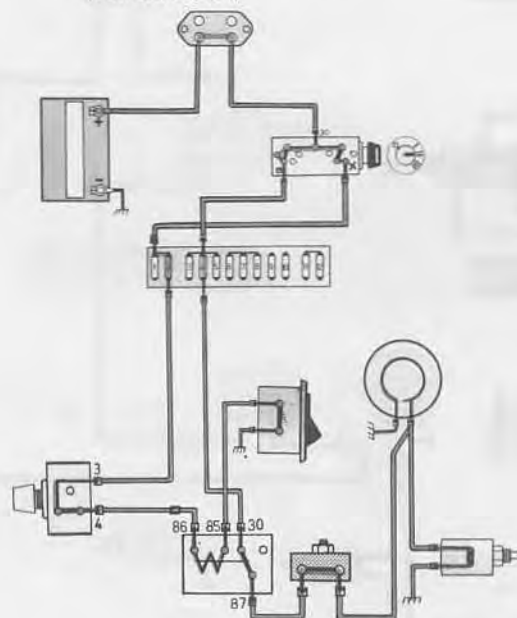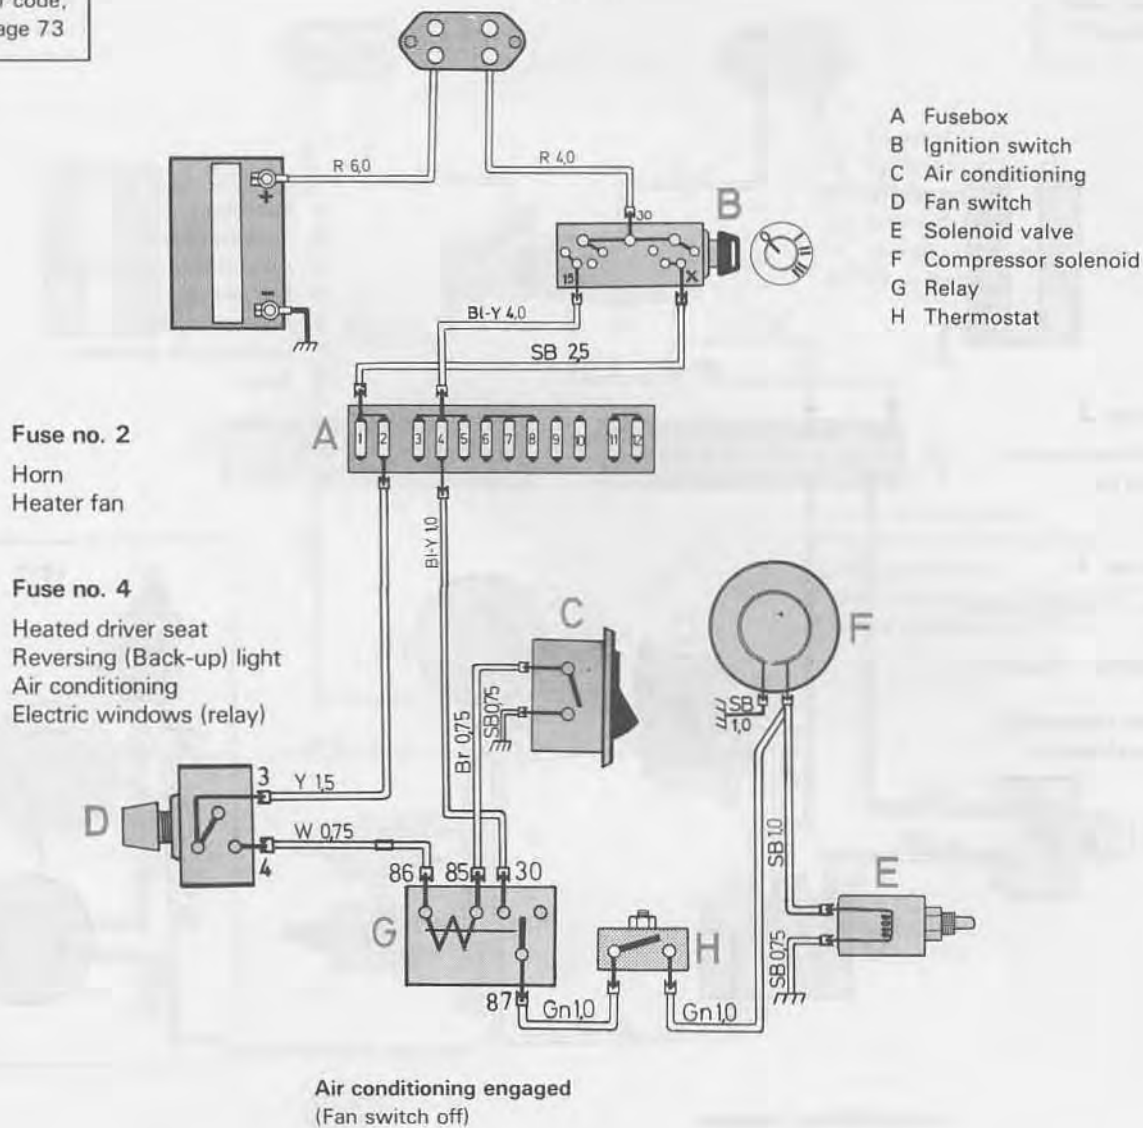

Air conditioning 240, 260 1979

Colour code,
see page 73

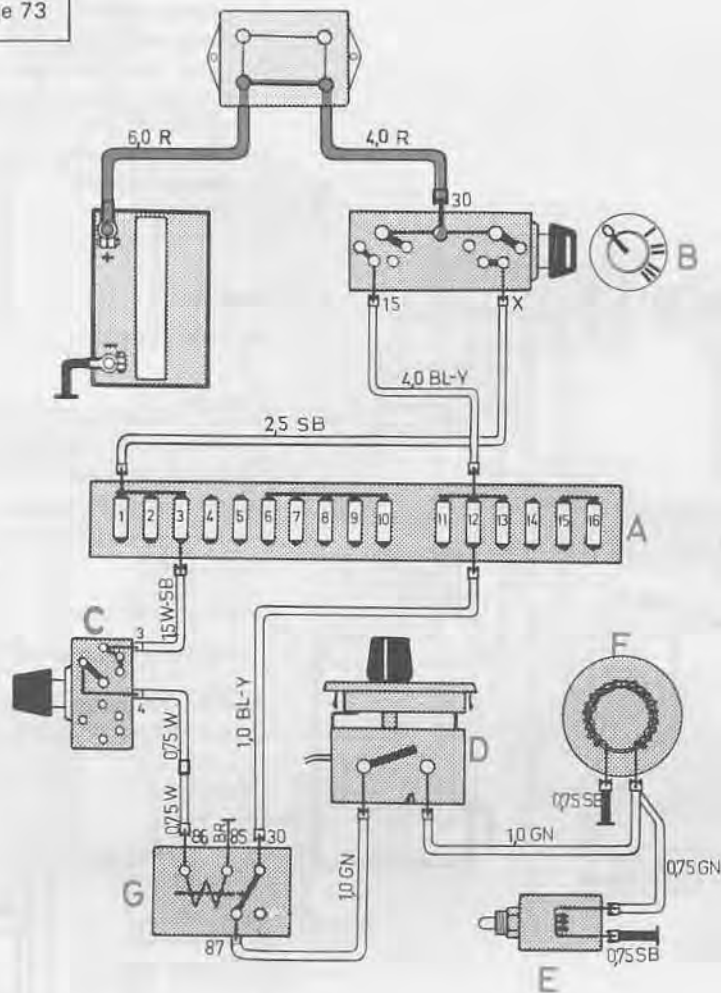

- A Fusebox
- B Ignition switch
- C Fan switch
- D Adjustable thermostat control
- E Solenoid valve
- F Compressor solenoid
- G Relay


Fuse no. 3

Heater fan


Fuse no. 12

Reversing (Back-up) light
Heated driver seat
Electric windows (relay)


Ignition and adjustable thermostat ON,
Fan switch OFF

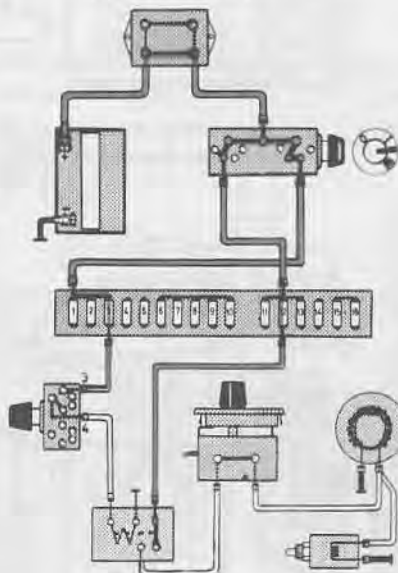

Ignition, fan switch and adjustable
thermostat, ON

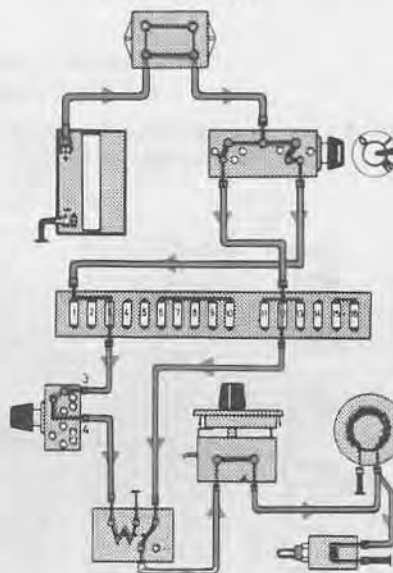

Ignition and fan switch ON
Adjustable thermostat OFF

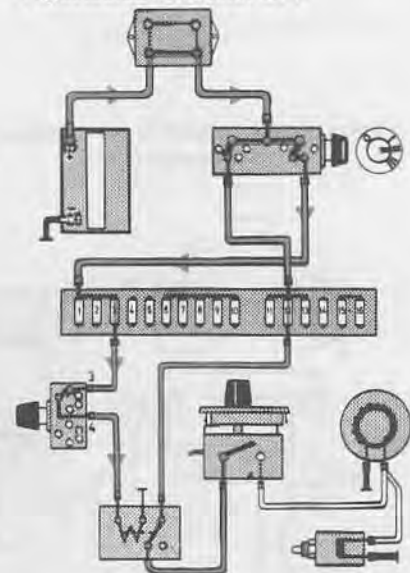


129821

Air conditioning 240, 260 1980

Colour code,
see page 73

- A Fusebox
- B Ignition switch
- C Fan switch
- D Adjustable thermostat
- E Solenoid valve
- F Compressor solenoid
- G Delay relay (engages 10 sec after alternator voltage reaches D+61)
- H Charging indicator lamp
- K Voltage regulator
- L Alternator

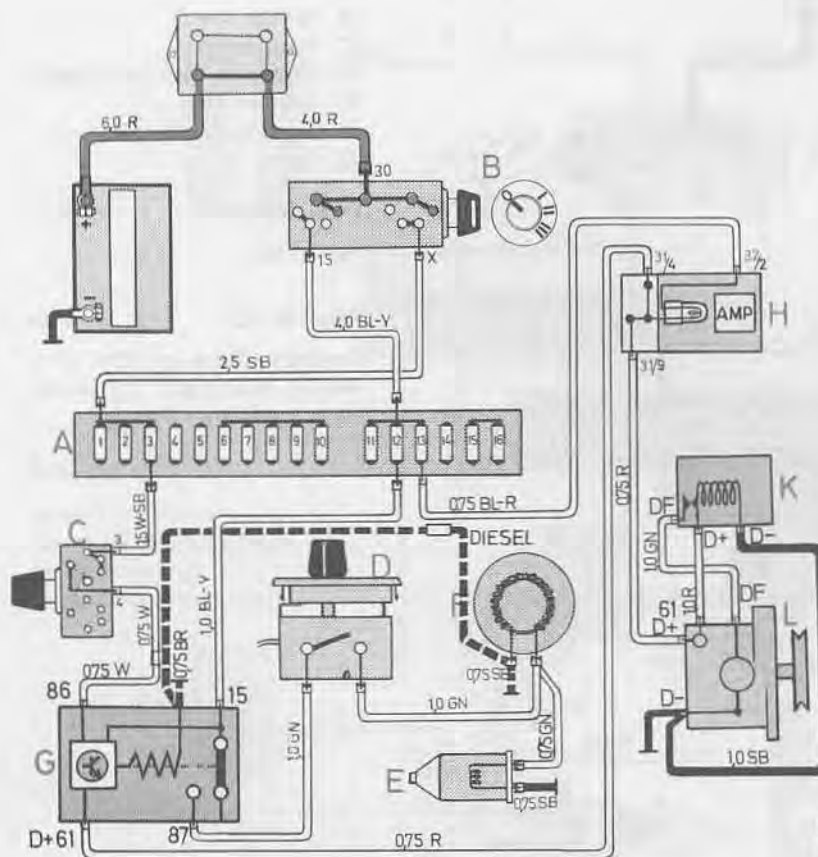

Fuse no. 3

No other function


Fuse no. 12

Reversing (Back-up) light
Heated driver seat
Electric windows (relay)

Fuse no. 13

Direction indicators
Combined instruments




Ignition ON, engine OFF
(alternator not charging)

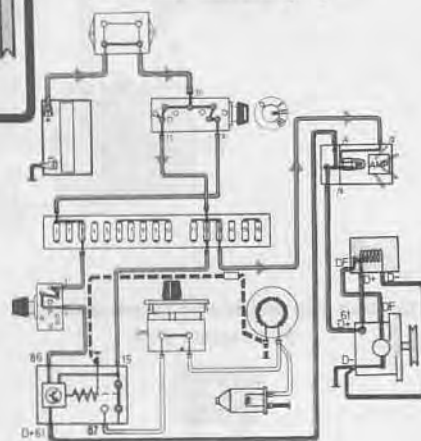


Engine running, adjustable thermostat ON
Fan switch OFF

Engine running, adjustable thermostat
and fan switch ON

Engine running, fan switch ON
Adjustable thermostat OFF

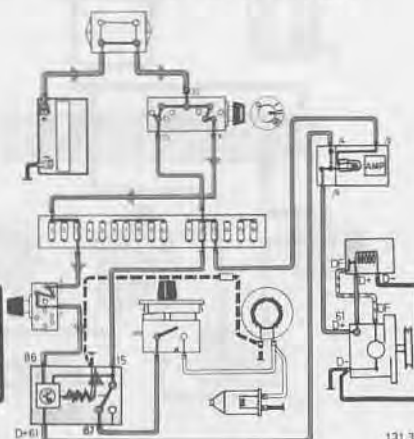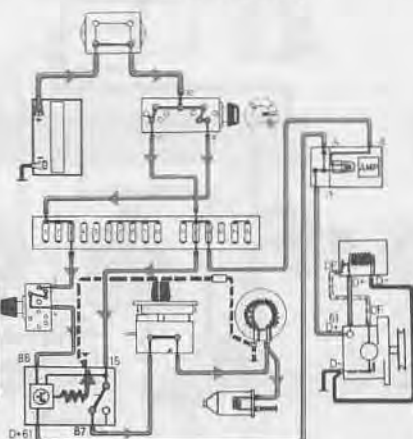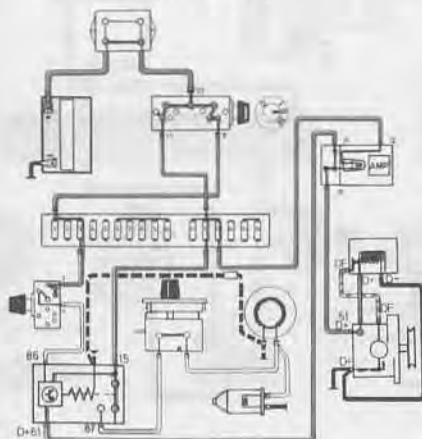

Air conditioning 240, 260 1981-

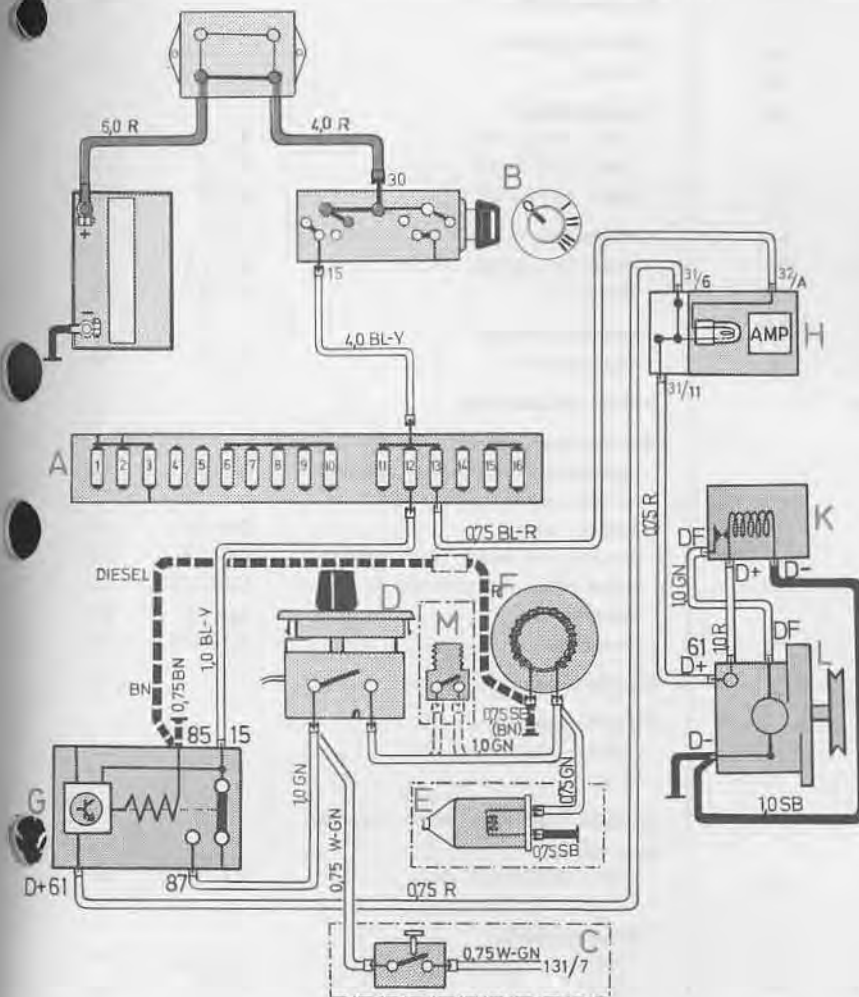

- A Fusebox
- B Ignition switch
- C Microswitch (CIS vehicles only)
- D Thermostat
- E Solenoid valve (excl. CIS vehicles)
- F Compressor solenoid
- G Delay relay (engages 10 sec after alternator voltage at D+61)
- H Charging indicator lamp
- K Voltage regulator
- L Alternator
- M Cut out switch (located on receiver/dryer) USA only

Fuse no. 12

Reversing (Back-up) light
Heated driver seat
Electric windows (relay)




Fuse no. 13

Direction indicators
Combined instrument


Ignition ON (engine OFF) alternator not charging

Engine running, adjustable thermostat ON (AC ON)

Engine running, adjustable thermostat OFF (AC OFF)

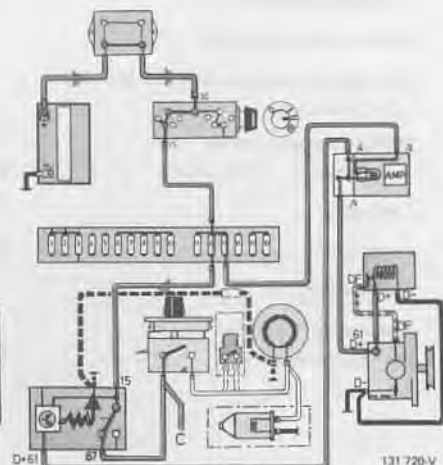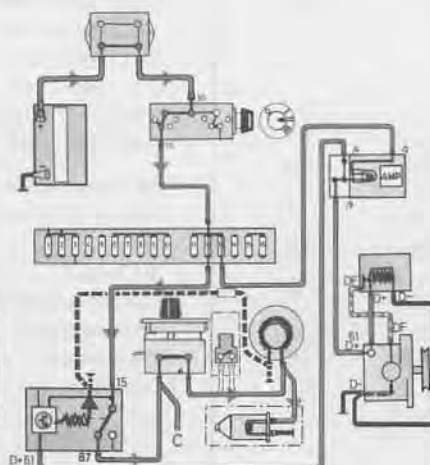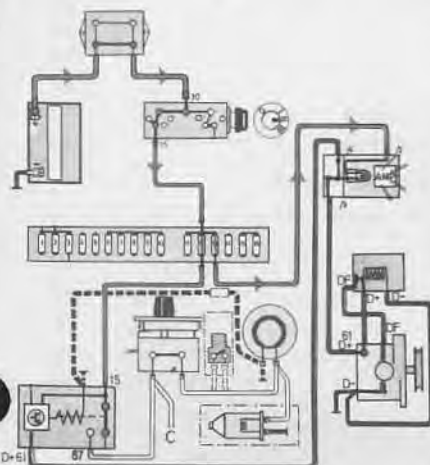



- A Fusebox
- B Ignition switch
- C Microswitch (CIS vehicles only)
- D Thermostat
- E Solenoid valve (excl. CIS vehicles)
- F Compressor solenoid
- G Delay relay (engages 10 sec after alternator voltage at D+61)
- H Charging indicator lamp
- K Voltage regulator
- L Alternator
- M Cut out switch (located on receiver/dryer) USA only

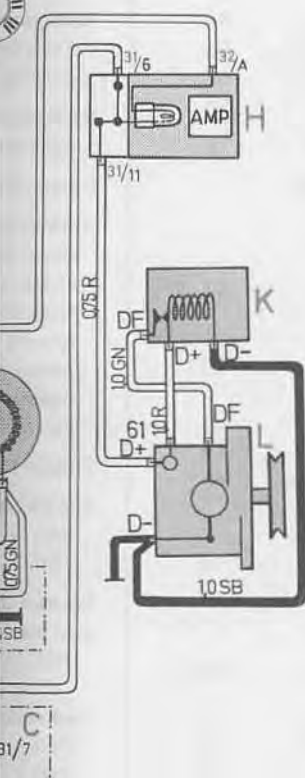

- Reversing (Back-up) light
- Heated driver seat
- Electric windows (relay)

Direction indicators
Combined instrument

SB = black
GR = grey
W = white
R = red
BN = brown
Y = yellow
P = pink
B = blue
GN = green
OR = orange
VO = violet

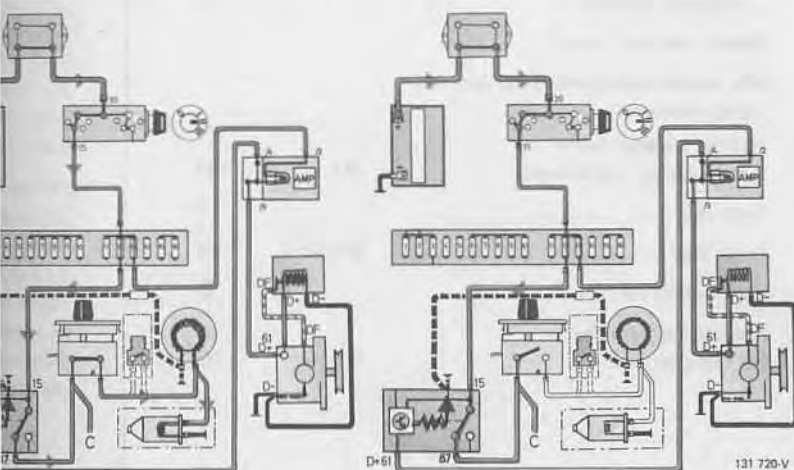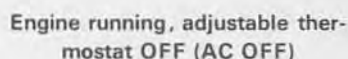

The diagram shows a vertical stack of horizontal bars representing different levels of potential and current flow:

- A thin white bar at the top, labeled "= without potential".
- A thin black bar, labeled "= earth".
- A thin grey bar, labeled "= circuit potential".
- A thin black bar, labeled "= potential lower than circuit potential".
- Two thick grey bars with arrows pointing to the right, labeled "= current flow". A bracket groups these two bars.


At the bottom left, the number "128 077" is visible.

Index

	Operation	Page		Operation	Page
AC compensation			Modifications		12
carburetted engines,			New AC system		
all 1975-1978	N1	61	fitting		6
4 cyl 1979-	N2-4	61	Receiver/dryer		
6 cyl 1979-	N5	62	240, 1975-1977	K1-2	58
Injected engines			240, 260 1978-	K1-2	58
4 cyl 1975-1978	N6	63	260, 1975-1977	K3-6	58
4 cyl 1979-	N7-8	63	Refrigerant		
6 cyl E 1975-1978	N9	64	filling (charging)	B1-24	16
6 cyl E 1979-	N10-12	64	draining	A1-4	15
6 cyl F 1975-1978	N13	66	Refrigerant hoses		
6 cyl 1979-	N14	66	replacement	L1	60
Charging system	B1-24	16	Safety precautions		7
Clutch replacement, see respective compressor			Sankyo compressor (Diesel)		
Compressor, see respective manufacturer			removing-fitting-belt adjustment	D1-5	33
Condenser			clutch, pulley, carbon seal,		
replacement	J1-4	57	replacement	D6-24	34
Delco compressor (B27, B28)			bearing, solenoid, replacement	D6-24	34
removing-fitting-belt adjustment	E1-3	40	valve plate, replacement	D25-29	39
clutch, pulley, bearing, solenoid			disassembly	E6-15	34
replacement	E4-5	41	assembly	D16-24	36
disassembly	E6-27	42	Special tools		4
assembly	E28-45	46	Specifications		
Desiccant (see drying agent)			240 (+ Diesel)		2
Drying agent		6	260		3
Evaporator			Suction discharge valve - expansion valve		
Evaporator			260 1975-1977 only	H1-5	56
replacement	F1-8	50	Test conditions		
Evaporator thermostat			240	B22-25	21
replacement, modification	F9-15	52	260	B22,	22
inspection	F16-20	54		B26-27	
Expansion valve			Thermostat, see evaporator thermostat		
240 1975-	G1-5	55	Tightening torque		
260 1978-	G1-5	55	240		3
2 260 1975-1977	H1-5	56	260		4
Evacuating system	B1-10	16	Wiring diagrams		
Fault tracing			240, 1975-1977		68
symptoms		8	260, 1975-1977		69
pressure testing		10	240, 260 1978		70
Freon, see refrigerant			24', 260 1979		71
Idle speed compensation, see AC compensation			240, 260 1980 + Diesel		72
Heater control valve			240, 260 1981- + Diesel		73
Inspection, adjustment	M1	60	York compressor (B20, B17-B23)		
Leakage		7	removing-fitting-belt adjustment,		
Leak test	B16-17	19	B20	C1-3	23
Lubricating oil		6	B17-B23	C4-12	24
Measuring cylinder for refrigerant	B1-4	16	clutch replacement	C16-20	27
			oil level check,	C13-15	26
			disassembly	C21-20	28
			assembly	C31-45	30



THE JAMES A. VAUGHN
MEMORIAL LIBRARY
OF THE STATE

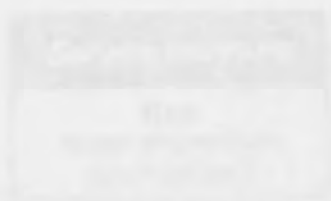

Index

Subject	Page	Subject	Page
Air pollution		Acid rain	27
acid rain		see also rain	
1975-1978	85	1979	86
1979-1980	85-86	1980-1981	86
1981-1982	86	1982-1983	86
1983-1984	86	1984-1985	86
1985-1986	86	1986-1987	86
1987-1988	86	1988-1989	86
1989-1990	86	1990-1991	86
1991-1992	86	1992-1993	86
1993-1994	86	1994-1995	86
1995-1996	86	1996-1997	86
1997-1998	86	1998-1999	86
1999-2000	86	2000-2001	86
2001-2002	86	2002-2003	86
2003-2004	86	2004-2005	86
2005-2006	86	2006-2007	86
2007-2008	86	2008-2009	86
2009-2010	86	2010-2011	86
2011-2012	86	2012-2013	86
2013-2014	86	2014-2015	86
2015-2016	86	2016-2017	86
2017-2018	86	2018-2019	86
2019-2020	86	2020-2021	86
2021-2022	86	2022-2023	86
2023-2024	86	2024-2025	86
2025-2026	86	2026-2027	86
2027-2028	86	2028-2029	86
2029-2030	86	2030-2031	86
2031-2032	86	2032-2033	86
2033-2034	86	2034-2035	86
2035-2036	86	2036-2037	86
2037-2038	86	2038-2039	86
2039-2040	86	2040-2041	86
2041-2042	86	2042-2043	86
2043-2044	86	2044-2045	86
2045-2046	86	2046-2047	86
2047-2048	86	2048-2049	86
2049-2050	86	2050-2051	86
2051-2052	86	2052-2053	86
2053-2054	86	2054-2055	86
2055-2056	86	2056-2057	86
2057-2058	86	2058-2059	86
2059-2060	86	2060-2061	86
2061-2062	86	2062-2063	86
2063-2064	86	2064-2065	86
2065-2066	86	2066-2067	86
2067-2068	86	2068-2069	86
2069-2070	86	2070-2071	86
2071-2072	86	2072-2073	86
2073-2074	86	2074-2075	86
2075-2076	86	2076-2077	86
2077-2078	86	2078-2079	86
2079-2080	86	2080-2081	86
2081-2082	86	2082-2083	86
2083-2084	86	2084-2085	86
2085-2086	86	2086-2087	86
2087-2088	86	2088-2089	86
2089-2090	86	2090-2091	86
2091-2092	86	2092-2093	86
2093-2094	86	2094-2095	86
2095-2096	86	2096-2097	86
2097-2098	86	2098-2099	86
2099-2100	86	2100-2101	86
2101-2102	86	2102-2103	86
2103-2104	86	2104-2105	86
2105-2106	86	2106-2107	86
2107-2108	86	2108-2109	86
2109-2110	86	2110-2111	86
2111-2112	86	2112-2113	86
2113-2114	86	2114-2115	86
2115-2116	86	2116-2117	86
2117-2118	86	2118-2119	86
2119-2120	86	2120-2121	86
2121-2122	86	2122-2123	86
2123-2124	86	2124-2125	86
2125-2126	86	2126-2127	86
2127-2128	86	2128-2129	86
2129-2130	86	2130-2131	86
2131-2132	86	2132-2133	86
2133-2134	86	2134-2135	86
2135-2136	86	2136-2137	86
2137-2138	86	2138-2139	86
2139-2140	86	2140-2141	86
2141-2142	86	2142-2143	86
2143-2144	86	2144-2145	86
2145-2146	86	2146-2147	86
2147-2148	86	2148-2149	86
2149-2150	86	2150-2151	86
2151-2152	86	2152-2153	86
2153-2154	86	2154-2155	86
2155-2156	86	2156-2157	86
2157-2158	86	2158-2159	86
2159-2160	86	2160-2161	86
2161-2162	86	2162-2163	86
2163-2164	86	2164-2165	86
2165-2166	86	2166-2167	86
2167-2168	86	2168-2169	86
2169-2170	86	2170-2171	86
2171-2172	86	2172-2173	86
2173-2174	86	2174-2175	86
2175-2176	86	2176-2177	86
2177-2178	86	2178-2179	86
2179-2180	86	2180-2181	86
2181-2182	86	2182-2183	86
2183-2184	86	2184-2185	86
2185-2186	86	2186-2187	86
2187-2188	86	2188-2189	86
2189-2190	86	2190-2191	86
2191-2192	86	2192-2193	86
2193-2194	86	2194-2195	86
2195-2196	86	2196-2197	86
2197-2198	86	2198-2199	86
2199-2200	86	2200-2201	86
2201-2202	86	2202-2203	86
2203-2204	86	2204-2205	86
2205-2206	86	2206-2207	86
2207-2208	86	2208-2209	86
2209-2210	86	2210-2211	86
2211-2212	86	2212-2213	86
2213-2214	86	2214-2215	86
2215-2216	86	2216-2217	86
2217-2218	86	2218-2219	86
2219-2220	86	2220-2221	86
2221-2222	86	2222-2223	86
2223-2224	86	2224-2225	86
2225-2226	86	2226-2227	86
2227-2228	86	2228-2229	86
2229-2230	86	2230-2231	86
2231-2232	86	2232-2233	86
2233-2234	86	2234-2235	86
2235-2236	86	2236-2237	86
2237-2238	86	2238-2239	86
2239-2240	86	2240-2241	86
2241-2242	86	2242-2243	86
2243-2244	86	2244-2245	86
2245-2246	86	2246-2247	86
2247-2248	86	2248-2249	86
2249-2250	86	2250-2251	86
2251-2252	86	2252-2253	86
2253-2254	86	2254-2255	86
2255-2256	86	2256-2257	86
2257-2258	86	2258-2259	86
2259-2260	86	2260-2261	86
2261-2262	86	2262-2263	86
2263-2264	86	2264-2265	86
2265-2266	86	2266-2267	86
2267-2268	86	2268-2269	86
2269-2270	86	2270-2271	86
2271-2272	86	2272-2273	86
2273-2274	86	2274-2275	86
2275-2276	86	2276-2277	86
2277-2278	86	2278-2279	86
2279-2280	86	2280-2281	86
2281-2282	86	2282-2283	86
2283-2284	86	2284-2285	86
2285-2286	86	2286-2287	86
2287-2288	86	2288-2289	86
2289-2290	86	2290-2291	86
2291-2292	86	2292-2293	86
2293-2294	86	2294-2295	86
2295-2296	86	2296-2297	86
2297-2298	86	2298-2299	86
2299-2300	86	2300-2301	86
2301-2302	86	2302-2303	86
2303-2304	86	2304-2305	86
2305-2306	86	2306-2307	86
2307-2308	86	2308-2309	86
2309-2310	86	2310-2311	86
2311-2312	86	2312-2313	86
2313-2314	86	2314-2315	86
2315-2316	86	2316-2317	86
2317-2318	86	2318-2319	86
2319-2320	86	2320-2321	86
2321-2322	86	2322-2323	86
2323-2324	86	2324-2325	86
2325-2326	86	2326-2327	86
2327-2328	86	2328-2329	86
2329-2330	86	2330-2331	86
2331-2332	86	2332-2333	86
2333-2334	86	2334-2335	86
2335-2336	86	2336-2337	86
2337-2338	86	2338-2339	86
2339-2340	86	2340-2341	86
2341-2342	86	2342-2343	86
2343-2344	86	2344-2345	86
2345-2346	86	2346-2347	86
2347-2348	86	2348-2349	86
2349-2350	86	2350-2351	86
2351-2352	86	2352-2353	86
2353-2354	86	2354-2355	86
2355-2356	86	2356-2357	86
2357-2358	86	2358-2359	86
2359-2360	86	2360-2361	86
2361-2362	86	2362-2363	86
2363-2364	86	2364-2365	86
2365-2366	86	2366-2367	86
2367-2368	86	2368-2369	86
2369-2370	86	2370-2371	86
2371-2372	86	2372-2373	86
2373-2374	86	2374-2375	86
2375-2376	86	2376-2377	86
2377-2378	86	2378-2379	86
2379-2380	86	2380-2381	86
2381-2382	86	2382-2383	86
2383-2384	86	2384-2385	86
2385-2386	86	2386-2387	86
2387-2388	86	2388-2389	86
2389-2390	86	2390-2391	86
2391-2392	86	2392-2393	86
2393-2394	86	2394-2395	86
2395-2396	86	2396-2397	86
2397-2398	86	2398-2399	86
2399-2400	86	2400-2401	86
2401-2402	86	2402-2403	86
2403-2404	86	2404-2405	86
2405-2406	86	2406-2407	86
2407-2408	86	2408-2409	86
2409-2410	86	2410-2411	86
2411-2412	86	2412-2413	86
2413-2414	86	2414-2415	86
2415-2416	86	2416-2417	86
2417-2418	86	2418-2419	86
2419-2420	86	2420-2421	86
2421-2422	86	2422-2423	86
2423-2424	86	2424-2425	86
2425-2426	86	2426-2427	86
2427-2428	86	2428-2429	86
2429-2430	86	2430-2431	86
2431-2432	86	2432-2433	86
2433-2434	86	2434-2435	86
2435-2436	86	2436-2437	86
2437-2438	86	2438-2439	86
2439-2440	86	2440-2441	86
2441-2442	86	2442-2443	86
2443-2444	86		



VOLVO SUPPORTS VOLUNTARY
MECHANIC CERTIFICATION
BY THE N.I.A.S.E.

(U.S.A. only)

Service literature

*Your
most important
special tool*

VOLVO

TP 30461/1 US
6000.7.84
Printed in U.S.A.