


**INSTALLATION TEMPLATE  
FOR ANTENNA  
(VOLVO 140 SERIES)**

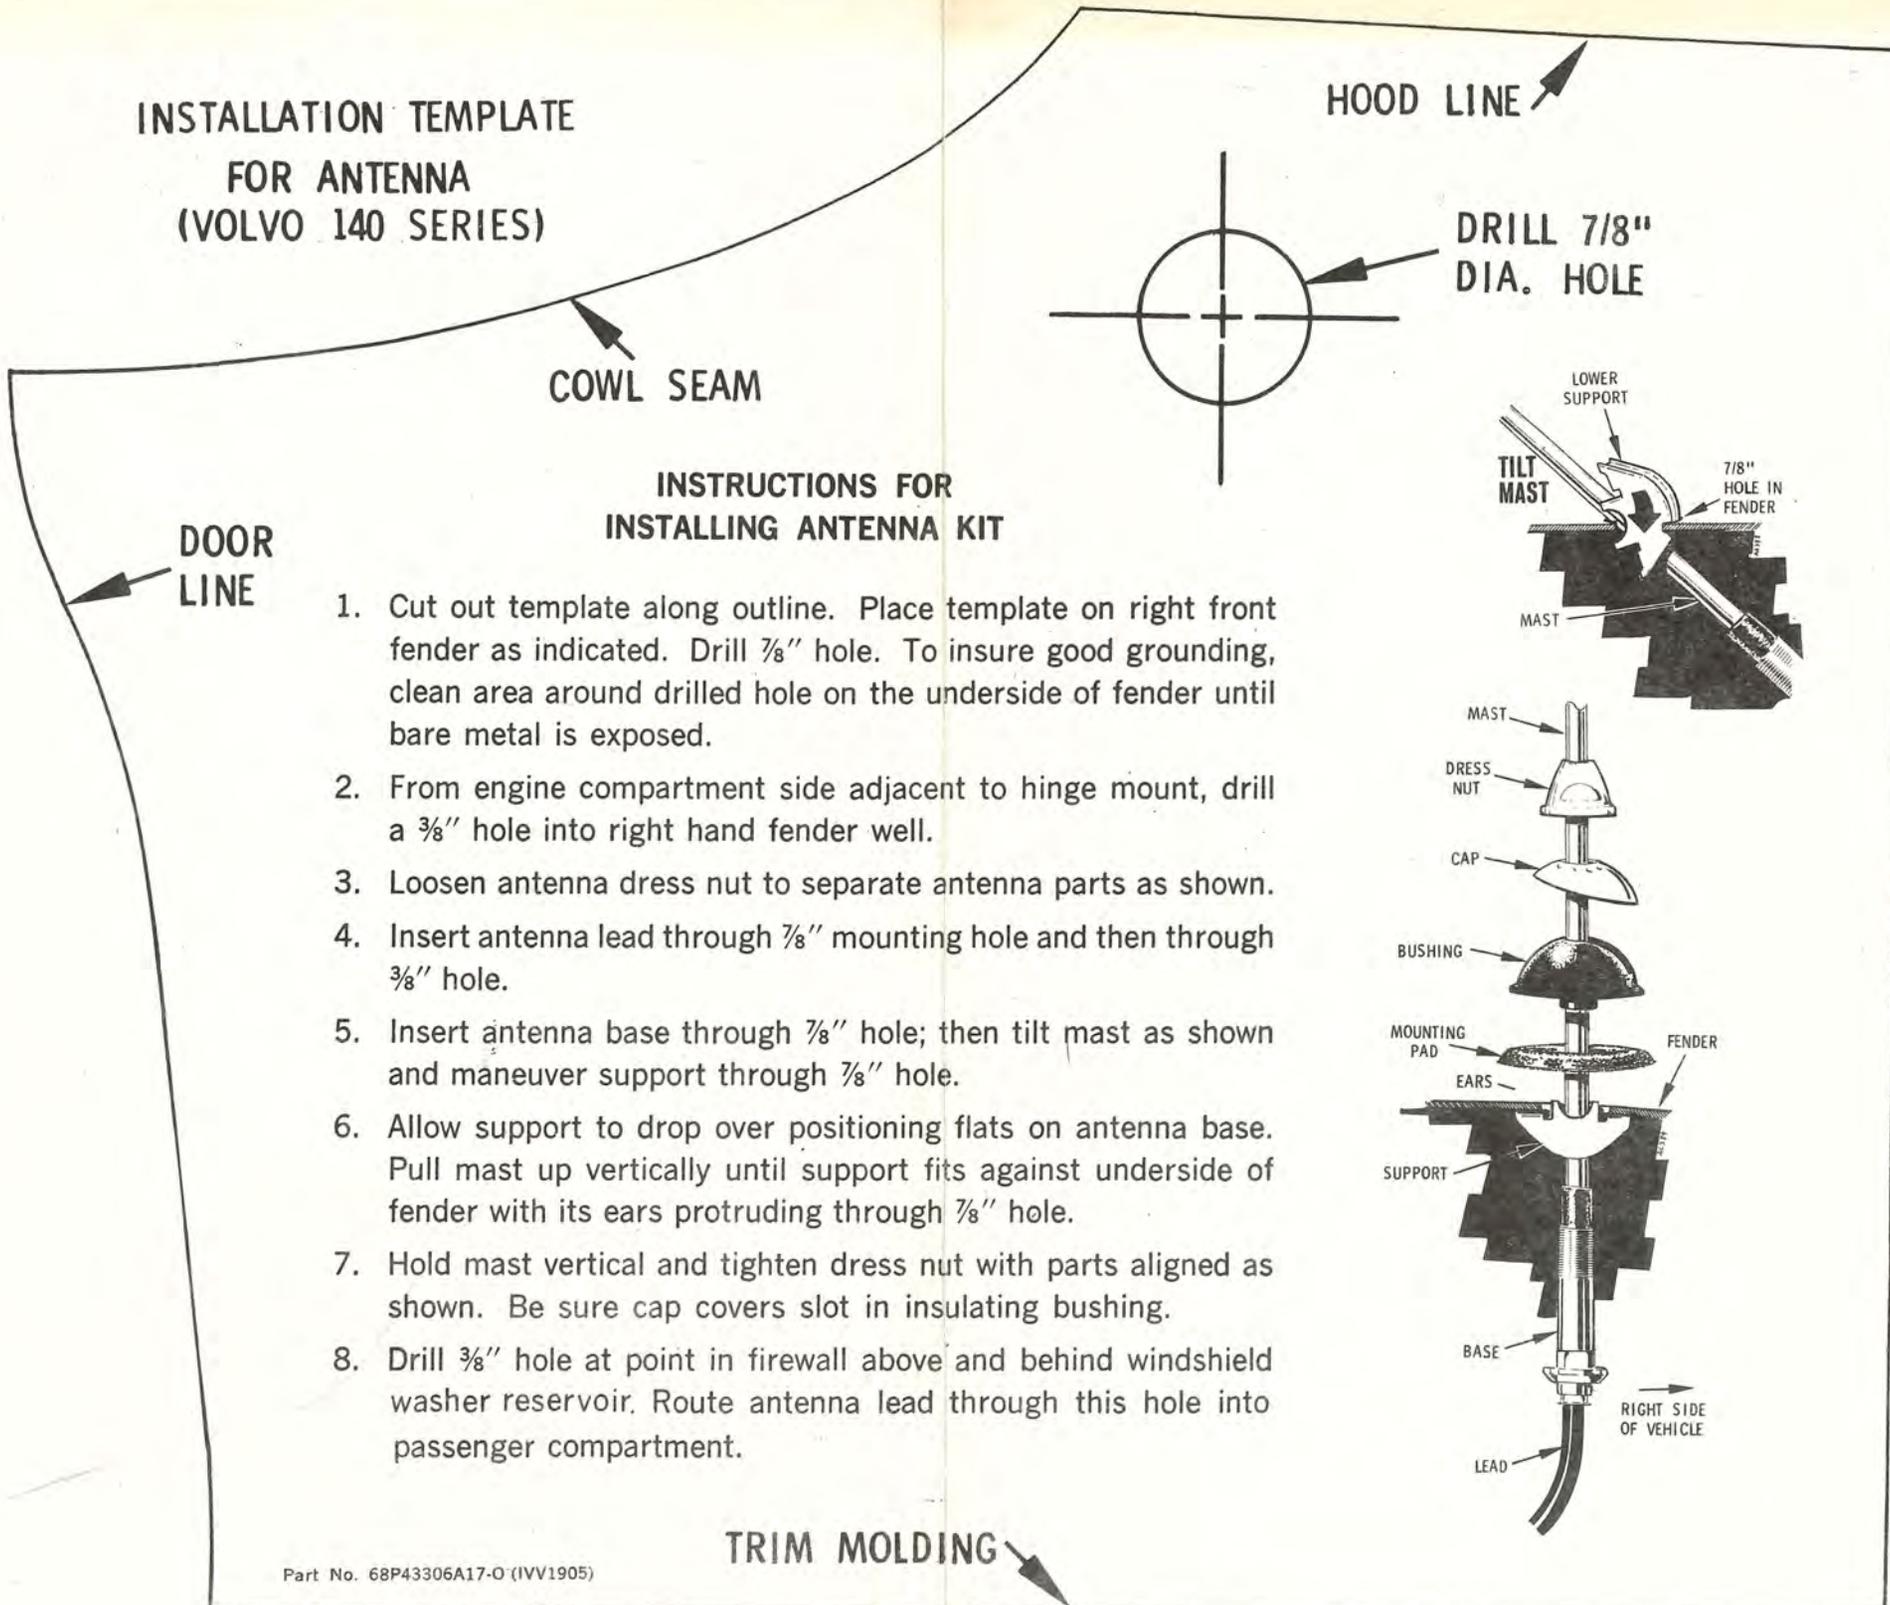

**INSTRUCTIONS FOR  
INSTALLING ANTENNA KIT**

1. Cut out template along outline. Place template on right front fender as indicated. Drill  $\frac{7}{8}$ " hole. To insure good grounding, clean area around drilled hole on the underside of fender until bare metal is exposed.
2. From engine compartment side adjacent to hinge mount, drill a  $\frac{3}{8}$ " hole into right hand fender well.
3. Loosen antenna dress nut to separate antenna parts as shown.
4. Insert antenna lead through  $\frac{7}{8}$ " mounting hole and then through  $\frac{3}{8}$ " hole.
5. Insert antenna base through  $\frac{7}{8}$ " hole; then tilt mast as shown and maneuver support through  $\frac{7}{8}$ " hole.
6. Allow support to drop over positioning flats on antenna base. Pull mast up vertically until support fits against underside of fender with its ears protruding through  $\frac{7}{8}$ " hole.
7. Hold mast vertical and tighten dress nut with parts aligned as shown. Be sure cap covers slot in insulating bushing.
8. Drill  $\frac{3}{8}$ " hole at point in firewall above and behind windshield washer reservoir. Route antenna lead through this hole into passenger compartment.

**HOOD LINE** ↗  
**DRILL  $\frac{7}{8}$ "  
DIA. HOLE** ↗

**COWL SEAM** ↗

**DOOR  
LINE** ↗

**TRIM MOLDING** ↗

