



## MONTERINGSANVISNING FÖR SPÄRR TILL BAKDÖRR

Del. nr 277044, 282060

Demontera dörrklädseln enligt verkstadsmanualen och montera förbindningslänken 2, fig. 1, liksom densamma med låsblecket 1, fig. 1. Montera därefter bushningen 3, fig. 1 i hålet på dörrens framkant.

Skär därefter med en kniv mellan markeringarna enligt fig. 2 så att en fyrkantig bit av klädseln kan avlägnas på mellanstolpen (motvarande hål finns redan utskuret i plåten). Montera därefter plattan 4 och fjädern 3 (fig. 3), skruvhålen är markerade på fig. 2. Stick därefter in armen 2, fig. 3 och montera bushningen 1. Kroka fast fjädern mot armen och kontrollera att armen löper lätt. Kontrollera spärranmonteringsfunktion och montera därefter kåpan 5, fig. 3 över spärran.

## INSTALLATION INSTRUCTIONS FOR SAFETY-LOCKING DEVICE ON REAR DOORS

Part No. 277044, 282060

Remove the door upholstery according to the instructions in the Service Manual. Fit the connecting link (2, Fig. 1) and secure it with the lock washer (1, Fig. 1). Then fit the bushing (3, Fig. 1) in the hole on the front end of the door.

Now cut with a knife along the marked lines, see Fig. 2, so that a square piece of the upholstery on the centre pillar can be removed (the corresponding holes are already made in the sheet metal). Then fit the plate and the spring (4 and 3, Fig. 3), see Fig. 2 concerning the two holes in which the plate is screwed. After this insert the arm and the bushing (2 and 1, Fig. 3). Then hook the spring round the arm and make sure that the arm does not jam. Check that the safety-locking device is functioning correctly. Finally, fit the cover (5, Fig. 3) on the device.

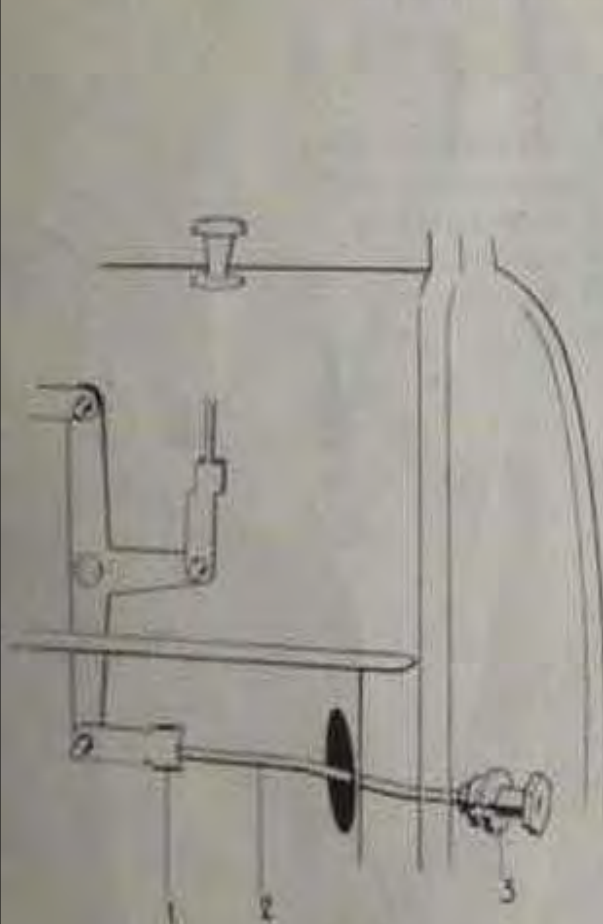


Fig. 1



Fig. 2



Fig. 3